

[Manuals.plus](#) /

› [DICKIE TOYS](#) /

› DICKIE TOYS Recycling Truck 203307001 Instruction Manual

DICKIE TOYS 203307001

DICKIE TOYS Recycling Truck 203307001 Instruction Manual

Model: 203307001

1. INTRODUCTION

Thank you for choosing the DICKIE TOYS Recycling Truck. This manual provides essential information for the safe and proper use, setup, operation, and maintenance of your new toy. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INFORMATION

- **Age Recommendation:** This toy is suitable for children aged 3 years and older.
- **Battery Safety:** Always follow battery installation instructions. Do not mix old and new batteries, or different types of batteries. Remove batteries if the toy will not be used for an extended period. Dispose of used batteries responsibly.
- **Choking Hazard:** Small parts may be present. Not suitable for children under 3 years due to potential choking hazards.
- **Supervision:** Adult supervision is recommended during play.
- **Cleaning:** Clean the toy with a damp cloth only. Do not immerse in water.

3. PACKAGE CONTENTS

Please check that all items are present in the package:

- 1 x DICKIE TOYS Recycling Truck
- 1 x Product Manual (this document)
- 2 x AA Batteries (pre-installed or included separately)

4. SETUP

4.1 Battery Installation

The Recycling Truck requires 2 AA batteries for its light and sound functions. These batteries are included.

1. Locate the battery compartment, usually on the underside of the truck.
2. Using a screwdriver (not included), open the battery compartment cover.
3. Insert 2 AA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the various interactive features of your Recycling Truck.

5.1 Trash Crusher and Spring-Loaded Rear Door



The truck features a functional trash crusher mechanism at the rear. Open the spring-loaded rear door to access the internal compartment. Place small, appropriate items inside, then close the door. The crusher mechanism can be operated manually to simulate compacting waste.

5.2 Motorized Front Loading Mechanical Arm

MOTORIZED FRONT LOADING

MECHANICAL ARM



The truck is equipped with a motorized front loading mechanical arm. This arm can be raised and lowered to pick up and empty small bins (not included) into the truck's main compartment. Operate the controls (buttons or levers, depending on model variation) to activate the motorized movement of the arm.

5.3 Light and Sound Functions

LIGHT & SOUND



Press the designated buttons on the truck (typically on the cabin roof) to activate realistic light and sound effects. These effects simulate engine noises, horn sounds, and flashing lights, enhancing the play experience.

6. MAINTENANCE

6.1 Cleaning

To clean the Recycling Truck, wipe it gently with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Avoid submerging the toy in water, as this can damage the electronic components.

6.2 Storage

Store the toy in a cool, dry place away from direct sunlight when not in use. If storing for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

• No Light or Sound:

- Check if the batteries are correctly installed with the proper polarity.
- Replace with fresh AA batteries.
- Ensure the battery compartment cover is securely closed.

- **Motorized Arm Not Moving:**
 - Verify battery power as described above.
 - Check for any obstructions preventing the arm's movement.

8. SPECIFICATIONS

Brand:	DICKIE TOYS
Model Name:	Recycling Truck
Model Number:	203307001
Manufacturer Part Number:	QDKT084676
Material Type:	Plastic
Power Source:	Battery Powered
Battery Type:	2 x AA Alkaline batteries (included)
Item Dimensions (L x W x H):	5.91 x 16.54 x 8.66 inches (15 x 42 x 22 cm)
Item Weight:	1.13 Kilograms
Additional Features:	Flashing Light, Sound Effects, Motorized Front Loading Arm, Trash Crusher

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the packaging or contact DICKIE TOYS customer service directly. Contact details can typically be found on the product packaging or the official DICKIE TOYS website.

© 2023 DICKIE TOYS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question