

[Manuals.plus](#) /

› [WLIVE](#) /

› WLIVE TV Stand Instruction Manual

WLIVE ADSJ616HH

WLIVE TV Stand Instruction Manual

Model: ADSJ616HH

INTRODUCTION

Thank you for purchasing the WLIVE TV Stand. This freestanding TV stand is designed to provide a stylish and space-saving solution for your television, offering adjustable height, swivel functionality, and convenient storage. Its wall-adjacent design allows it to be placed close to a wall, maximizing room space. Please read this manual carefully before assembly and use to ensure proper installation and safe operation.





Figure 1: WLIVE TV Stand with a television, game console, and DVD player, showcasing its compact design.

壁寄せタイプで狭いスペースも設置OK



Figure 2: The wall-adjacent design of the WLIVE TV Stand helps save space in your living area.

SAFETY INFORMATION

To ensure safe use of your WLIVE TV Stand, please observe the following safety precautions:

- Do not exceed the maximum load capacity of 40kg for the TV stand.
- Ensure the TV stand is placed on a stable, level surface to prevent tipping.
- Always use the provided anti-tip wire to secure the TV stand to the wall, especially if children or pets are present.
- Do not allow children to climb on or play with the TV stand.
- Distribute weight evenly on the shelf to maintain stability. The shelf has a maximum load capacity of 10kg.
- Keep all cables organized and secured to prevent tripping hazards.



Figure 3: Illustration of the anti-tip wire installation, crucial for enhancing stability and preventing accidental tipping.

PACKAGE CONTENTS

Please verify that all parts are included before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Main support column and base
- TV mounting bracket
- Adjustable media shelf
- Casters (set of 4)
- Stoppers (set of 4)
- Anti-tip safety wire
- Hardware kit (screws, washers, spacers, Allen wrench)
- Instruction Manual

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your WLIVE TV Stand. It is recommended to have two people for assembly, especially when mounting the TV.

Step 1: Assemble the Base and Main Column

Attach the main support column to the base using the provided screws. Ensure all connections are secure.

Step 2: Install Casters or Stoppers

Decide whether you want a mobile or fixed setup. Screw the casters into the base for mobility, or screw the stoppers for a stationary setup. The casters allow for easy movement, while the stoppers provide enhanced stability.

移動式・固定式一台兼備

✓ 固定されて安定性高い

二重配置・
移動や固定など便利に



✓ 移動らくらくキャスター付き



Figure 4: Choose between mobile casters for easy relocation or fixed stoppers for enhanced stability.

Step 3: Attach the Media Shelf

Slide the media shelf onto the main column. You can adjust its height to one of three levels to accommodate your devices such as game consoles or DVD players. Secure the shelf in place.

実用性抜群の棚板付き



Figure 5: The media shelf provides ample storage (40cm x 26cm) and can be adjusted to three different heights.

Step 4: Install the TV Mounting Bracket

Attach the TV mounting bracket to the main column. Ensure it is securely fastened. This bracket supports VESA patterns from 10x10cm to 40x40cm.

Step 5: Mount Your Television

Carefully lift your television and attach it to the mounting bracket. Ensure the TV is securely fastened to the bracket. This stand is compatible with TVs from 32 to 65 inches and supports a maximum weight of 40kg.

取付け可能なテレビ

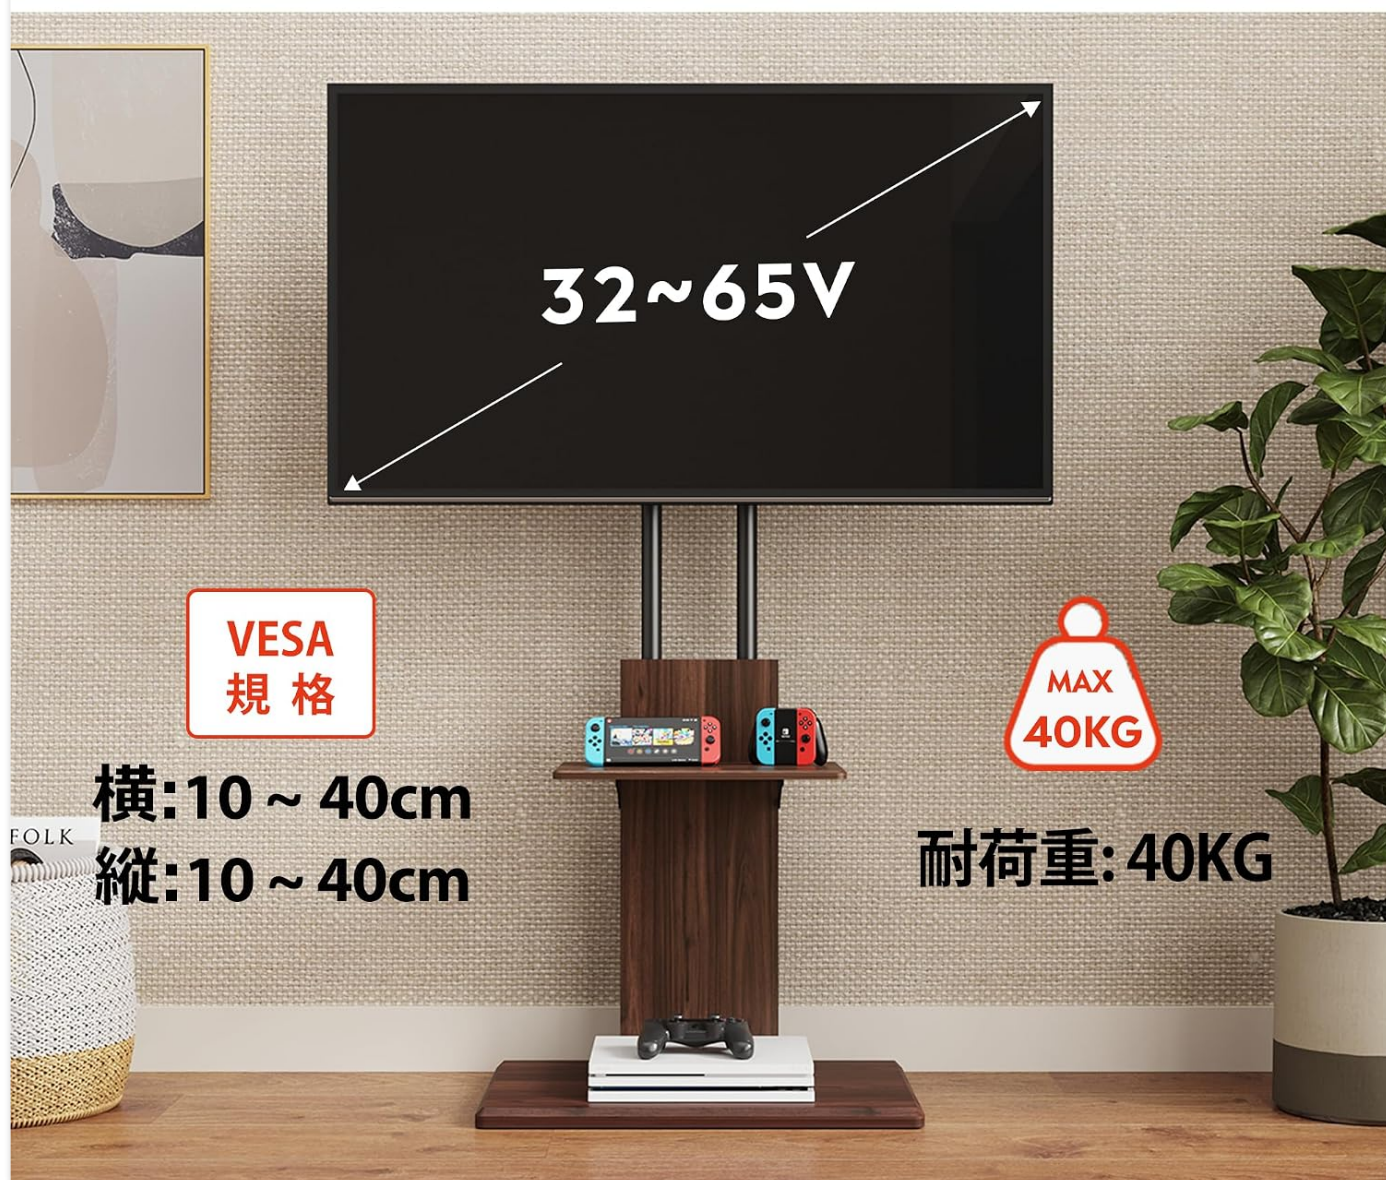


Figure 6: Compatibility overview for the TV stand, showing supported TV sizes, VESA standards, and maximum weight.

Step 6: Cable Management

Utilize the integrated cable management system within the main column to neatly route and conceal your TV and device cables. This helps maintain a clean and organized appearance.



Figure 7: The main column features integrated cable routing to keep wires tidy and out of sight.

OPERATING INSTRUCTIONS

Height Adjustment

The TV mounting bracket allows for 6 levels of height adjustment, ranging from 111cm to 136cm. To adjust the height, carefully lift the TV slightly, unlock the adjustment mechanism (if applicable, refer to specific bracket instructions), set to the desired height, and re-lock. No tools are required for this adjustment.



Figure 8: The TV stand offers 6 levels of height adjustment, from 111cm to 136cm, for optimal viewing.

Angle Rotation (Swivel)

The TV bracket features a swivel function, allowing you to rotate the TV ± 25 degrees horizontally. Gently push the TV to the left or right to achieve your desired viewing angle from different positions in the room, such as a sofa or dining area.

ライフスタイルに合わせて快適な角度に



Figure 9: The TV can be swiveled up to ± 25 degrees, providing flexible viewing angles.

Mobility (with Casters)

If you have installed the casters, you can easily move the TV stand to different locations. Ensure the path is clear and move the stand slowly and carefully. Lock the casters once the stand is in its desired position to prevent accidental movement.

MAINTENANCE

- Clean the stand regularly with a soft, dry cloth. Do not use abrasive cleaners or harsh chemicals.
- Periodically check all screws and connections to ensure they remain tight and secure.
- Avoid exposing the stand to excessive moisture or direct sunlight.

TROUBLESHOOTING

Issue: TV stand feels unstable.

Solution:

- Ensure all assembly screws are tightened securely.
- Verify the TV stand is on a flat, level surface.
- If using casters, ensure they are locked when the stand is stationary. Consider replacing casters with stoppers for permanent fixed stability.
- Confirm the anti-tip wire is properly installed and secured to the wall.
- Check that the TV weight does not exceed the 40kg maximum load capacity.

Issue: Difficulty adjusting TV height or swivel.

Solution:


- Ensure no cables are obstructing the movement of the TV bracket or column.
- For height adjustment, ensure the locking mechanism is disengaged before attempting to move the TV.
- Do not force the movement; if resistance is met, re-check the installation.

SPECIFICATIONS

Feature	Detail
Brand	WLIVE
Model Number	ADSJ616HH
Compatible TV Sizes	32 - 65 inches
Maximum Load Capacity (TV)	40 kg (88 lbs)
VESA Compatibility	10x10 cm to 40x40 cm
Height Adjustment Range	111 cm - 136 cm (6 levels)
Swivel Angle	±25 degrees
Media Shelf Dimensions	40 cm (W) x 26 cm (D)
Media Shelf Load Capacity	10 kg (22 lbs)
Product Dimensions (Overall)	40 cm (W) x 60 cm (D) x 111-136 cm (H)
Product Weight	12.78 kg (28.17 lbs)
Color	Brown
Accessories	Casters, Anti-tip wire
Mounting Type	Wall mount (Freestanding, wall-adjacent style)

32-65インチのテレビに対応

テレビ背面

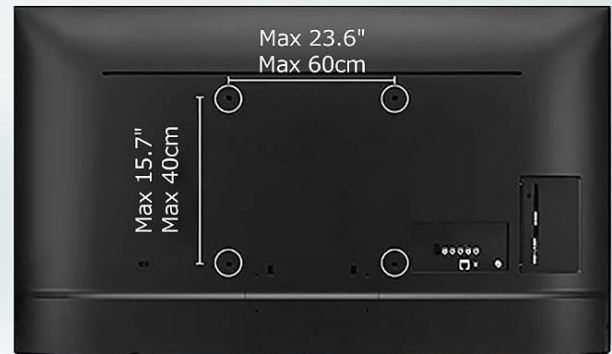

VESA
対応

横:10 ~ 40cm

縦:10 ~ 40cm



各型テレビを取付用のネジを同梱
組立て所要時間は約30分

(単位:cm)

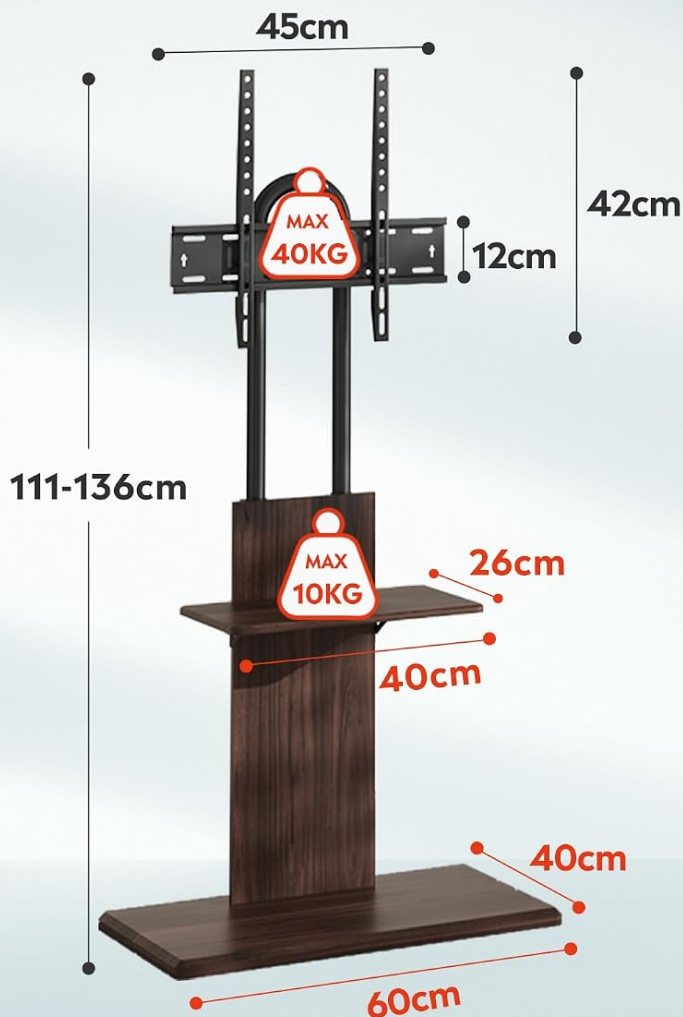 


Figure 10: Detailed dimensions and VESA compatibility for the WLIVE TV Stand.

WARRANTY AND SUPPORT

WLIVE provides a one-year warranty for this product. For warranty claims, technical support, or missing parts, please contact WLIVE customer service directly. Please refer to your purchase receipt or the seller's information for contact details.

Seller information from product data: [WLIVE](#)

© 2024 WLIVE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C48YM838>

More documents and user manuals: **<https://manuals.plus/>**