

## VINABTY GA841WJSA

# VINABTY GA841WJSA Replacement Remote Control User Manual

Model: GA841WJSA

## INTRODUCTION

This manual provides comprehensive instructions for the VINABTY GA841WJSA infrared replacement remote control. Designed for ease of use, this remote offers a direct replacement solution for your original Sharp TV remote control without requiring any programming or setup. Please read this manual carefully to ensure proper operation and longevity of your device.

## SETUP

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.

The remote control is now ready for use. No additional programming is required.





Figure 1: Back of the remote control with the battery compartment open.

The VINABTY GA841WJSA remote control operates using infrared technology. Ensure there is a clear line of sight between the remote control and your television's infrared receiver for optimal performance. The maximum effective range is approximately 10 meters (33 feet).

## Basic Functions

- **Power Button (TV):** Turns the television on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Channel Up/Down (CH+/CH-):** Navigate through channels sequentially.
- **Volume Up/Down (VOL+/VOL-):** Adjust the audio volume.
- **Mute Button:** Mutes or unmutes the television audio.
- **Source Button:** Cycles through input sources (HDMI, AV, etc.).
- **Menu Button:** Accesses the television's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV model and current menu/application.





Figure 2: Front view of the remote control, highlighting button layout.

## Compatible Sharp TV Models

This remote control is compatible with a wide range of Sharp TV models, including but not limited to:

- RRMCGA841WJSA
- LC-60LE822E, 32LB5820, LC-46LE831E, LC-60LE741E, LC40LE831E, LC46LE831E, LC60LE925E
- LC-40LE831E, LC-46LE830E, LC-46LE830RU, LC-46LE831S, LC-40LE830E, LC-40LE830RU, LC-40LE831S
- LC-32LE600E, LC-32LE600RU, LC-46LE810E, LC-46LE812E, LC-46LE812ERU, LC-46LE820E, LC-46LE822E, LC-46LE822ERU
- LC-46LU820E, LC-46LU822E, LC-46LX810E, LC-46LX812E, LC-46LX812ERU, LC-52LE700S, LC-52LE705E, LC-52LE705S
- LC-52LE820E, LC-52LE822E, LC-52LE822ERU, LC-40LX705E, LC-46LE600E, LC-40LE810E, LC-40LE812E
- LC-40LE820E, LC-40LE822E, LC-40LU820E, LC-46LX700RU, LC-46LX705E, LC-40LE600S, LC-40LE700E
- LC-40LE705S, LC-40LU700E, LC-40LX810E, LC-40LX812E, LC-32LU705E, LC-32LX705E, LC-40LU700S
- LC-40LU822E, LC-46LE705E, LC-46LX700E, LC-46LE700S, LC-46LU705S, LC-32LU700S, LC-32LX700RU
- LC-32SH130E, LC-40LE810ERU, LC-40LE812ERU, LC-40LE811E, LC-40LE821E, LC-46LE811E, LC-46LE821E
- LC-40LE820ERU, LC-40LE822ERU, LC-40LX812ERU, LC-46LE810ERU, LC-52LE820ERU, LC-60LE822ERU, LC-46LE820ERU

## MAINTENANCE

### Battery Care

- Replace batteries when the remote's response becomes sluggish or inconsistent.
- Always replace both batteries at the same time with new ones of the same type (AAA alkaline).
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or solvents, as these can damage the surface and button markings.

TROUBLESHOOTING

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new AAA alkaline batteries.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Confirm you are within the effective operating range (up to 10 meters).
- **Specific buttons not working:**
  - Clean around the affected buttons to ensure no debris is preventing proper contact.
  - If cleaning does not resolve the issue, the button mechanism may be worn.
- **Limited range:**
  - Replace batteries.
  - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.

SPECIFICATIONS

| Feature                        | Specification                             |
|--------------------------------|-------------------------------------------|
| Model Name                     | GA841WJSA                                 |
| Brand                          | VINABTY                                   |
| Connectivity Technology        | Infrared                                  |
| Number of Buttons              | 57                                        |
| Controller Type                | Push Button Control                       |
| Maximum Range                  | 10 Meters (approx. 33 feet)               |
| Battery Type                   | 2 x AAA Alkaline Batteries                |
| Product Dimensions (L x W x H) | 18 x 4 x 2 cm (7.09 x 1.57 x 0.79 inches) |
| Product Weight                 | 80 Grams                                  |
| Material                       | ABS (body), Soft Rubber (buttons)         |

Special Feature

Ergonomic Design

## WARRANTY AND SUPPORT

This product is designed for durability and reliable performance. If you encounter any issues with your VINABTY GA841WJSA remote control, or if the received unit does not function as expected, please contact the seller directly for assistance. The seller is committed to providing support and resolving any product-related concerns.

© 2026 VINABTY. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question