

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Lamshaw](#) /

› User Manual for Lamshaw 18mm Stainless Steel Smart Watch Band

Lamshaw 18mm Stainless Steel Watch Band

User Manual for Lamshaw 18mm Stainless Steel Smart Watch Band

Model: 18mm Stainless Steel Watch Band

Brand: Lamshaw

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Lamshaw 18mm Stainless Steel Smart Watch Band. Designed for durability and style, this replacement strap offers a comfortable and secure fit for compatible smartwatches.



This image displays the black stainless steel watch band, showcasing its sleek design and metallic texture.

2. PACKAGE CONTENTS

Upon opening your package, please verify that all the following items are included:

- 1 x Stainless Steel Watch Band

- 1 x Link-remove Tool
- 2 x Quick Release Pins



This image shows all items included in the package: the stainless steel watch band, a tool for adjusting band length, and two quick-release pins for attachment.

3. COMPATIBILITY

This Lamshaw 18mm Stainless Steel Watch Band is compatible with the following smartwatch models:

- Mindrose H80 1.47 inch Watch
- Wontrum Y70 Watch

It is also compatible with most smart and traditional watches that utilize an 18mm band width.

Compatible with Model



Wontrum Y70 Watch



Mindrose H80 Watch

This image illustrates the two primary smartwatches compatible with this band: the Wontrum Y70 Watch (left) and the Mindrose H80 Watch (right).

4. FEATURES

- **Premium Material:** Crafted from high-quality 304 stainless steel with a high-tech surface for luxury and durability.
- **Unique Double Push Button Clasp:** Provides enhanced security and convenience, allowing for easy locking and unlocking.
- **Adjustable Length:** The band can be shortened or extended using the included link-remove tool to perfectly fit your wrist.
- **Quick-Release Design:** Features quick-release pins for effortless installation and removal from your watch.
- **Nano-Electroplating:** Ensures deep pigment penetration for long-lasting luster and color retention.

Stainless Steel Series

Crafted from 304 premium steel with high-tech surface for a noble look. Deployment clasp for double sided insurance. Refined adapters, easy to install and remove. From the design to color choice, the aesthetic is what you want it to be.

Elevate your status to measure time in its finest way.



Nano-electroplating

Deep pigment penetration, not only on the surface

Luster and color lasts longer than its fellows



Ours



Others

This image illustrates the advanced nano-electroplating process applied to the band, which ensures deep color penetration and superior durability, maintaining the band's luster and color over time.

Solid Stainless Steel

Strong links, not bulky

Carry some weight but comfy wrapping around wrists



This image emphasizes the solid stainless steel construction of the band, which provides strong links without being bulky, ensuring a comfortable fit around the wrist.

5. SETUP & INSTALLATION

5.1 Attaching the Watch Band

1. Locate the quick-release pins on the watch band.

2. Align one end of the pin with the lug hole on your smartwatch.
3. Pull the quick-release lever to retract the pin, then guide the other end into the opposite lug hole.
4. Release the lever and gently push the band to ensure it is securely locked in place.
5. Repeat for the other side of the watch band.

5.2 Adjusting the Band Length

The watch band can be adjusted to fit wrist sizes from 5.71"-8.19" (145mm-208mm). Use the included link-remove tool to add or remove links as needed.

1. Place the watch band into the link-remove tool, aligning the pin of the tool with a removable link pin on the band.
2. Gently turn the screw on the tool to push the pin out.
3. Remove the desired number of links.
4. Reassemble the band by inserting the pins back into the links, ensuring they are fully seated.

Lamshaw

STAINLESS STEEL MATERIAL

Refreshing and durable.

QUICK-RELEASE DESIGN

Easy to install and remove the band.




TURTLE BUCKLE

For easy removal and wear,
Push the button on both sides
to open the band.



This image highlights the quick-release design for easy band installation and removal, along with the turtle buckle mechanism that allows for secure fastening by pushing buttons on both sides.

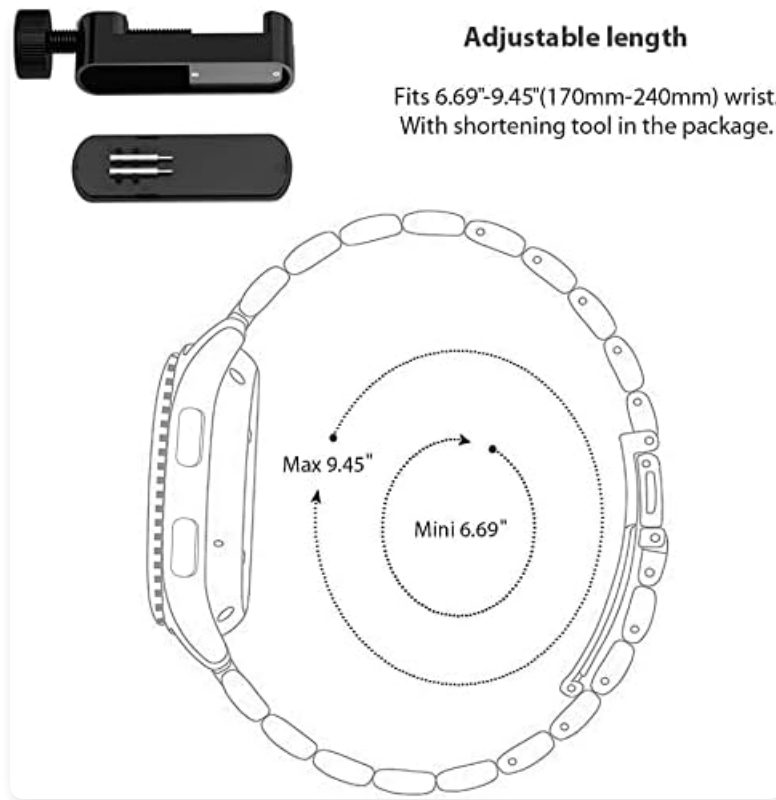

This diagram demonstrates how the watch band can be adjusted to fit wrist sizes from 6.69 to 9.45 inches (170mm-240mm) using the included shortening tool.

6. OPERATION

To wear and secure your watch band:

1. Wrap the watch band around your wrist.
2. Bring the two ends of the clasp together.
3. Press down firmly on the folding clasp until you hear a click, indicating it is securely locked.
4. To remove, press the two side buttons on the clasp simultaneously to release the lock.



DOUBLE BUTTON FOLDING CLASP

Enable you to lock and unlock without any hassles.



This image provides a detailed view of the double push-button folding clasp, which ensures the band remains securely fastened while allowing for easy release.

7. MAINTENANCE & CARE

To ensure the longevity and appearance of your stainless steel watch band, follow these care guidelines:

- **Cleaning:** Wipe the band regularly with a soft, damp cloth to remove dirt, oils, and sweat. For deeper cleaning, use a mild soap solution and rinse thoroughly. Dry immediately with a clean, soft cloth.
- **Avoid Harsh Chemicals:** Do not expose the band to harsh chemicals, solvents, or abrasive cleaners, as these can damage the finish.
- **Storage:** Store the band in a clean, dry place when not in use to prevent scratches and maintain its luster.
- **Water Exposure:** While stainless steel is resistant to water, prolonged exposure to saltwater or chlorinated water should be avoided. Rinse and dry the band thoroughly if it comes into contact with such substances.

8. TROUBLESHOOTING

8.1 Difficulty Adjusting Band Length

- Ensure the link-remove tool's pin is correctly aligned with the band's link pin.
- Apply steady, even pressure when pushing pins. Do not force the tool.
- Verify you are pushing the pin in the correct direction (indicated by small arrows on the inside of some links).

8.2 Clasp Not Securing Properly

- Ensure both sides of the clasp are fully engaged and aligned before pressing down.
- Check for any debris or obstruction within the clasp mechanism. Clean if necessary.
- Confirm that the band is not bent or damaged, which could prevent proper closure.

9. SPECIFICATIONS

Attribute	Detail
Material	304 Stainless Steel
Clasp Type	Double Push Button Folding Clasp
Band Width	18mm
Adjustable Length	Fits 5.71"-8.19" (145mm-208mm) wrist
Compatibility	Mindrose H80 1.47 inch Watch, Wontrum Y70 Watch, and other 18mm lug width watches

10. WARRANTY & SUPPORT

For any questions, concerns, or support needs regarding your Lamshaw watch band, please contact the seller directly through the platform where you made your purchase. Please refer to your purchase receipt for specific warranty information, as terms may vary.

We are committed to providing high-quality products and customer satisfaction.

© 2024 Lamshaw. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C49M979R>

More documents and user manuals: <https://manuals.plus/>