

[Manuals.plus](#) /

> [Ceenwes](#) /

> Ceenwes Low Noise Pet Grooming Clippers Instruction Manual, Model B0C49R1Y5L

Ceenwes B0C49R1Y5L

Ceenwes Low Noise Pet Grooming Clippers Instruction Manual

Model: B0C49R1Y5L

INTRODUCTION

This manual provides detailed instructions for the safe and effective use, maintenance, and troubleshooting of your Ceenwes Low Noise Pet Grooming Clippers. Please read this manual thoroughly before first use and retain it for future reference. These clippers are designed for grooming cats, dogs, and other pets, offering a quiet and efficient trimming experience.



Image: An introductory banner for Ceenwes Professional Pet Clippers, emphasizing key features such as low noise, low vibration, powerful motor, skin-friendly design, ease of trimming, and one-button operation.

PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- 1 × Pet Clipper (with included battery)
- 1 × AC Power Adapter
- 1 × Cleaning Brush
- 4 × Comb Attachments (3mm, 6mm, 9mm, 12mm)
- 1 × Stainless Steel Scissor
- 1 × Stainless Steel Comb
- 1 × Nail Clipper
- 1 × Nail File
- 1 × User Manual (this document)



Image: All components included in the Ceenwes Pet Grooming Kit, featuring the pink clipper, various comb attachments, scissors, a stainless steel comb, nail clippers, a nail file, a cleaning brush, and the power adapter.

SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please observe the following safety guidelines:

- Avoid using the clippers near the pet's face or eyes to prevent accidental injury.
- Keep the device out of reach of children and pets when not in use.
- Always ensure the clippers are clean and free of hair before and after each use.
- If the pet has long or thick hair, it is recommended to use scissors to trim the hair shorter before using the clippers to prevent snagging and ensure smooth operation.
- Do not immerse the clipper in water. Clean with a damp cloth and the provided brush.
- Do not operate the clipper if the blades are damaged or bent.
- Store the clipper in a dry place.

SETUP

Charging the Clipper

The Ceenwes Pet Grooming Clipper features a cordless design for ease of use. Before initial use, fully charge the clipper.

1. Connect the AC power adapter to the charging port on the clipper.
2. Plug the adapter into a standard electrical outlet.
3. The charging indicator light will illuminate.
4. Allow approximately 5 hours for a full charge. A full charge provides up to 70 minutes of cordless operation.

The clipper can also be used while connected to the power cord if needed.



Low Noise & Low Vibration

Make Your Pets Enjoy Grooming



Image: Illustration of the clipper's corded and cordless functionality, demonstrating flexibility during grooming sessions.

Attaching and Detaching Guide Combs

The kit includes four comb attachments (3mm, 6mm, 9mm, 12mm) to achieve desired hair lengths.

- **To Attach:** Align the guide comb with the clipper blade and slide it on until it clicks securely into place.
- **To Detach:** Gently push the comb attachment upwards and away from the blade.

Disassemble the Blade



Assemble the Blade



Image: A visual representation of the different comb attachments (3mm, 6mm, 9mm, 12mm) and other included tools like scissors, comb, nail clipper, and nail file, used for various grooming needs.

Adjusting Blade Length

The clipper features a fine-tuning knob for precise blade length adjustment (0.8mm to 2mm) without a comb attachment.

- Rotate the knob located on the clipper body to select the desired cutting length.
- Settings range from 0.8mm (shortest) to 2mm (longest).

OPERATING INSTRUCTIONS

Grooming Process

Follow these steps for an effective and comfortable grooming experience for your pet:

1. Pre-Grooming Preparation:

- Bathe your pet and ensure their hair is completely clean and dry before grooming.
- Use the stainless steel comb to thoroughly brush your pet's hair, removing any tangles or mats. For severely matted hair, use the included scissors to carefully trim the matted areas first.

2. Trimming with Clippers:

- Select the appropriate comb attachment or blade length setting.
- Turn on the clipper. The low noise and vibration design helps keep pets calm.
- Hold the clipper firmly and move it in the direction of hair growth.
- Use smooth, even strokes. Do not press too hard against the pet's skin.
- Regularly clear accumulated hair from the blade during grooming using the cleaning brush.

3. Post-Grooming:

- Turn off the clipper.
- Clean the clipper and blades as described in the Maintenance section.
- Use the nail clipper and file for nail care if needed.



Image: A visual guide illustrating the four key steps for pet grooming: bathing and drying, combing with a stainless steel comb, trimming matted hair with scissors, and finally using the Ceenwes grooming clipper.

MAINTENANCE

Cleaning the Blades

Proper cleaning ensures optimal performance and extends the life of your clippers.

1. Ensure the clipper is turned off and unplugged.
2. Adjust the blade gear to 2.0mm.
3. Push the blade down firmly to detach it from the clipper body.
4. Use the provided cleaning brush to remove all hair and debris from the blades and the clipper head.
5. Wipe the clipper body with a dry or slightly damp cloth. Do not rinse the clipper under water.

Oiling the Blades

Regular oiling is crucial for maintaining blade sharpness and smooth operation.

1. After cleaning, apply a few drops of clipper oil (not included) to the teeth and friction surfaces of the blades.
2. Turn on the clipper for a few seconds to distribute the oil evenly.
3. Wipe off any excess oil.

Reassembling the Blade

1. Align the blade with the slot on the clipper body.
2. Push the blade in the direction of the arrow until you hear a click, indicating it is securely attached.

HOW to Grooming for Your Pets?



1. Bathing first, keep your pet's hair clean & dry



2. Working with Stainless Steel Comb to make it tidy



3. Working with Scissors to Trim the knotted hair



4. Shave dog hairs with Ceenwes grooming clipper

Image: A six-panel illustration detailing the process of disassembling the clipper blade (adjusting gear, pushing down) and assembling it back (aligning, pushing until click, attaching guide comb).

Storage

Store the clipper and all accessories in a dry, cool place, away from direct sunlight and moisture.

TROUBLESHOOTING

If you encounter issues with your Ceenwes Pet Grooming Clippers, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clipper not turning on.	Battery is depleted.	Charge the clipper for at least 5 hours. Ensure the power adapter is properly connected.
Clipper not cutting effectively or pulling hair.	Blades are dull, dirty, or not oiled. Hair is too long/matted.	Clean and oil the blades. If blades are dull, consider replacement. Pre-trim long or matted hair with scissors.
Clipper becomes hot during use.	Extended continuous use. Blades are dirty or not oiled.	Allow the clipper to cool down. Clean and oil the blades. Avoid prolonged continuous operation.
Excessive vibration or noise.	Blades are not properly aligned or secured.	Turn off the clipper, detach and reattach the blade, ensuring it clicks into place.

SPECIFICATIONS

Feature	Detail
Brand	Ceenwes
Model	B0C49R1Y5L
Power Source	Battery Powered (Cordless & Corded operation)
Charging Time	Approximately 5 hours

Feature	Detail
Operating Time	Up to 70 minutes (cordless)
Blade Material	Titanium acute-angle blade with ceramic movable blade
Adjustable Blade Length	0.8mm - 2mm (via fine-tuning knob)
Comb Attachments	3mm, 6mm, 9mm, 12mm
Noise Level	Approximately 60 dB
Item Weight	1.3 pounds
Dimensions (Package)	8.15 x 5.98 x 2.91 inches

WARRANTY AND SUPPORT

Ceenwes provides a **2-year after-sale service** for this pet trimmer. If you encounter any issues or require assistance, please contact Ceenwes customer support through your purchase platform or the official Ceenwes website for prompt service.

For optimal performance and longevity, adhere to the maintenance guidelines provided in this manual.

© 2025 Ceenwes. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question