

## MERIDIAN MEC102E

# MERIDIAN The Trimmer Premium Body Hair Trimmer Instruction Manual

Model: MEC102E

## INTRODUCTION

---

Thank you for choosing the MERIDIAN The Trimmer Premium. This electric body hair trimmer is designed for efficient and comfortable grooming for both men and women. Featuring a ceramic blade, waterproof design, and rechargeable battery, it provides a versatile solution for various body hair trimming needs. Please read this manual thoroughly before initial use to ensure safe and optimal operation.

## SAFETY INFORMATION

---

- Avoid use on infants.
- Do not use in non-waterproof areas.
- Ensure the trimmer is completely dry before charging.
- Keep out of reach of children.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

## WHAT'S INCLUDED

---

Your MERIDIAN The Trimmer Premium package includes the following items:

- MERIDIAN The Trimmer Premium device
- 2 Adjustable Guide Combs (0mm, 3mm, 6mm, 9mm, 12mm settings)
- Cleaning Brush
- USB-C Charging Cable



The complete package of the MERIDIAN The Trimmer Premium, displaying the trimmer, two adjustable guide combs, a small cleaning brush, and a USB-C charging cable.

An official demonstration video showcasing the unboxing, features, and practical use of the MERIDIAN The Trimmer Premium for both men and women, including details on its accessories and operation.

## SETUP

---

1. **Initial Charge:** Charge the trimmer before initial use. Connect the USB-C charging cable to the trimmer and a compatible USB power source. The battery indicator lights will show charging progress. Ensure the trimmer is completely dry before charging.
2. **Attaching Guide Combs:** Select an appropriate guide comb length for your desired trim. Align the comb with the trimmer head and gently push until it clicks into place. The combs are designed to be easily attached and removed.
3. **Removing Guide Combs:** To remove a guide comb, gently pull it away from the trimmer head.

# The Trimmer For Everyone, Everywhere



**LEGS**



**CHEST**



**ARMS**



**BELOW THE BELT**

The MERIDIAN The Trimmer Premium with one of its adjustable guide combs securely attached, ready for use.

## OPERATING INSTRUCTIONS

---

1. **Preparation:** Decide whether to trim on wet or dry skin. If desired, wet the area to be trimmed and apply soap or water to clean the skin and soften the hair.
2. **Power On:** Press the power button to turn on the trimmer. The battery indicator lights will illuminate.
3. **Trimming:** Hold the trimmer with the flat side down and parallel to your skin. Pull skin tight to avoid nicks and cuts. Move the trimmer gently against the direction of hair growth for an effective trim. The ceramic blade and safety guard are designed to provide a smooth, comfortable experience without razor burn, bumps, or ingrown hairs.
4. **Versatile Use:** This tool is suitable for all hair types (thick, fine, curly, or straight) and can be used on various body areas, including legs, arms, chest, and the bikini line.
5. **Power Off:** Press the power button again to turn off the trimmer.



A composite image illustrating the versatility of the MERIDIAN The Trimmer Premium for grooming various body areas, including legs, chest, arms, and the bikini line.

## MAINTENANCE

---

1. **Cleaning:** After each use, turn off the trimmer. Remove the guide comb and use the included cleaning brush to remove any loose hairs from the blade and trimmer body. Since the trimmer is 100% waterproof, you can rinse the blade head and body under running water for a more thorough clean.
2. **Drying:** Ensure the trimmer is completely dry before storing or recharging.
3. **Storage:** Store the trimmer in a cool, dry place. For travel, utilize a protective case to prevent damage.





The waterproof MERIDIAN The Trimmer Premium being cleaned under running water, highlighting its suitability for wet use and easy maintenance.

An official video demonstrating the waterproof capabilities of the Meridian Premium Trimmer, showing it in use under water and highlighting its durability and ease of cleaning.

**TROUBLESHOOTING**

Problem	Possible Cause	Solution
Trimmer not turning on	Low battery; Travel lock engaged; Faulty power button.	Charge the trimmer fully. Press and hold the power button for 3 seconds to disengage travel lock. If issues persist, contact support.
Battery drains quickly when not in use	Internal battery issue.	Ensure the trimmer is fully powered off and not in standby mode. If the issue continues, contact support.
Charging issues (e.g., not charging with standard USB-C cable)	Specific USB-C cable orientation required for some cables.	Try flipping the USB-C connector. Use the provided USB-C cable for best compatibility.

Problem	Possible Cause	Solution
Water collecting inside (draining from charging port)	Excessive water exposure during cleaning.	While waterproof, avoid prolonged direct water exposure to the charging port. Ensure the trimmer is upright to allow water to drain and dry completely before charging.

## SPECIFICATIONS

---

- **Model Number:** MEC102E
- **Color:** Sky
- **Power Source:** Battery Powered
- **Battery:** 1 Lithium Ion battery (included)
- **Item Weight:** 0.2 Kilograms (7.05 ounces)
- **Package Dimensions:** 7.05 x 3.7 x 2.83 inches
- **Manufacturer:** MERIDIAN
- **Recommended Uses:** Travel, Trimming

## WARRANTY AND SUPPORT

---

MERIDIAN offers a 30-day money-back guarantee for this product. For any questions, troubleshooting assistance, or warranty claims, please refer to the contact information provided in your product packaging or visit the official MERIDIAN website.

**Legal Disclaimer:** Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.