

[Manuals.plus](#) /

> [eKids](#) /

> eKids Frozen Kids Bluetooth Headphones FR-B54 Instruction Manual

eKids FR-B54

eKids Frozen Kids Bluetooth Headphones (Model: FR-B54) Instruction Manual

INTRODUCTION

Thank you for purchasing the eKids Frozen Kids Bluetooth Headphones. This manual provides essential information for the safe and optimal use of your headphones. Please read it carefully before use and retain it for future reference.



Image: Front view of the eKids Frozen Kids Bluetooth Headphones, showcasing the design.

KEY FEATURES

- **Wireless Bluetooth Connectivity:** Stream audio wirelessly from smartphones, tablets, and computers with a range of up to 10 meters.
- **Built-in Microphone:** For clear communication during video calls and online interactions.
- **Volume Reduced for Child Safety:** Engineered to ensure safe listening levels for young ears.
- **Wired Connection Option:** Includes a detachable 3.5mm audio cable for use when Bluetooth is unavailable or the battery is low.
- **Rechargeable Battery:** Offers up to 37 hours of continuous Bluetooth playtime on a single charge.
- **Adjustable Headband & Padded Ear Cushions:** Designed for maximum comfort and a custom fit.
- **Foldable Design:** Allows for convenient portability and compact storage.
- **Disney Frozen Graphics:** Features beloved characters and designs from the popular Disney film.



Image: The product packaging for the eKids Frozen Kids Bluetooth Headphones, illustrating key features and design.

Product Overview Video

Your browser does not support the video tag.

Video: An official overview of the eKids Frozen Bluetooth Kids Headphones, highlighting key features and design.

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. Locate the USB charging port, usually found by flipping the ear piece (refer to the diagram below). Connect the included USB charging cable to the headphones and a powered USB port (e.g., computer, USB wall adapter). The charging indicator light will show the charging status.



Image: Diagram illustrating the USB charging port location, 3.5mm audio cable, and charging cable.

2. Bluetooth Pairing

1. Ensure the headphones are fully charged and powered off.
2. Press and hold the Power/Bluetooth button on the headphones until the LED indicator light flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), go to the Bluetooth settings.
4. Search for available devices and select "eKids FR-B54" (or similar name).
5. Once connected, the LED indicator light on the headphones will turn solid blue or flash blue slowly.
6. If prompted for a password, enter "0000".

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on, press and hold the Power button until the LED indicator light turns on.
- To power off, press and hold the Power button until the LED indicator light turns off.

2. Volume Control

The headphones feature built-in volume controls. Use the Volume Up (+) and Volume Down (-) buttons located on the ear cup to adjust the audio level. Remember, these headphones have a reduced volume limit for child safety.



Image: Diagram highlighting easy-to-use controls, including volume buttons.

3. Using the Microphone

The headphones include a built-in microphone for hands-free communication. When connected via Bluetooth, you can use the microphone for video calls, online classes, or voice chats. Ensure your device's audio settings are configured to use the headphone's microphone.

4. Wired Connection (Auxiliary Mode)

If Bluetooth is not available or the battery is low, you can use the included 3.5mm audio cable for a wired connection.

1. Plug one end of the 3.5mm audio cable into the auxiliary port on the headphones.
2. Plug the other end into the headphone jack of your audio device.
3. The headphones will automatically switch to wired mode.



Image: A child enjoying content while wearing the eKids Frozen Kids Bluetooth Headphones.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, store the headphones in a cool, dry place. The foldable design allows for compact storage.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not in constant use.
- **Water Resistance:** These headphones are **not water resistant**. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

Problem	Solution
No sound from headphones.	• Ensure headphones are powered on and charged. • Check Bluetooth connection; re-pair if necessary. • Increase volume on both headphones and connected device. • If using wired connection, ensure cable is fully inserted and not damaged.
Headphones not pairing via Bluetooth.	• Ensure headphones are in pairing mode (flashing blue/red LED). • Make sure Bluetooth is enabled on your device. • Move headphones closer to the device (within 10 meters). • Turn off and on both headphones and device, then try pairing again.
Microphone not working.	• Ensure headphones are connected via Bluetooth. • Check your device's audio input settings to confirm the headphone microphone is selected.

Problem	Solution
Short battery life.	• Ensure headphones are fully charged before use. • Battery life can vary based on volume level and usage.

SPECIFICATIONS

Feature	Detail
Model Number	FR-B54
Connectivity Technology	Wireless (Bluetooth), Wired (3.5mm Aux)
Bluetooth Version	5.0
Bluetooth Range	Up to 10 meters (33 feet)
Battery Life	Up to 37 hours continuous Bluetooth playtime
Ear Placement	Over Ear
Form Factor	On Ear, Foldable
Control Type	Volume Control, Touch
Built-in Microphone	Yes
Frequency Range	20 Hz - 20,000 Hz
Material	Plastic, with foam/leather-like ear cushions
Water Resistance Level	Not Water Resistant
Weight	7.05 ounces

WARRANTY & SUPPORT

These eKids headphones come with a **1-year limited warranty**. For warranty claims, technical support, or further assistance, please refer to the contact information provided in the product packaging or visit the official eKids website.

Manufacturer: KIDDesigns

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C4BJ14WV>

More documents and user manuals: <https://manuals.plus/>