

Amazon Fire TV Soundbar

Amazon Fire TV Soundbar User Manual

Model: Fire TV Soundbar

PRODUCT OVERVIEW

The Amazon Fire TV Soundbar is a compact 2.0 speaker designed to enhance your television audio experience. It features DTS Virtual:X and Dolby Audio for immersive sound, and Bluetooth connectivity for streaming music from your devices.

Key Features:

- **Enhanced Audio:** Dual speakers provide fuller sound, clearer dialogue, and deeper bass.
- **Immersive Sound:** Supports DTS Virtual:X for virtual surround sound and Dolby Audio for detailed sound.
- **Easy Setup:** Connects via HDMI eARC/ARC for instant, synchronized audio.
- **Compact Design:** Measures 24 inches in length and 2.5 inches in height, fitting most entertainment setups.
- **Bluetooth Connectivity:** Stream audio wirelessly from phones or tablets.
- **Fire TV Ready:** Seamless control with your Fire TV remote.
- **Wide Compatibility:** Works with smart TVs and TVs connected to streaming media players.




Requires TV remote (not included)

Image: The Fire TV Soundbar placed below a television, demonstrating its ability to deliver immersive sound with DTS Virtual:X and Dolby Audio.

WHAT'S INCLUDED

The following items are included in the box:

- Fire TV Soundbar
- Remote
- HDMI Cable
- Power Cable
- 2 AAA Batteries
- Wall Mounting Kit
- Quick Start Guide

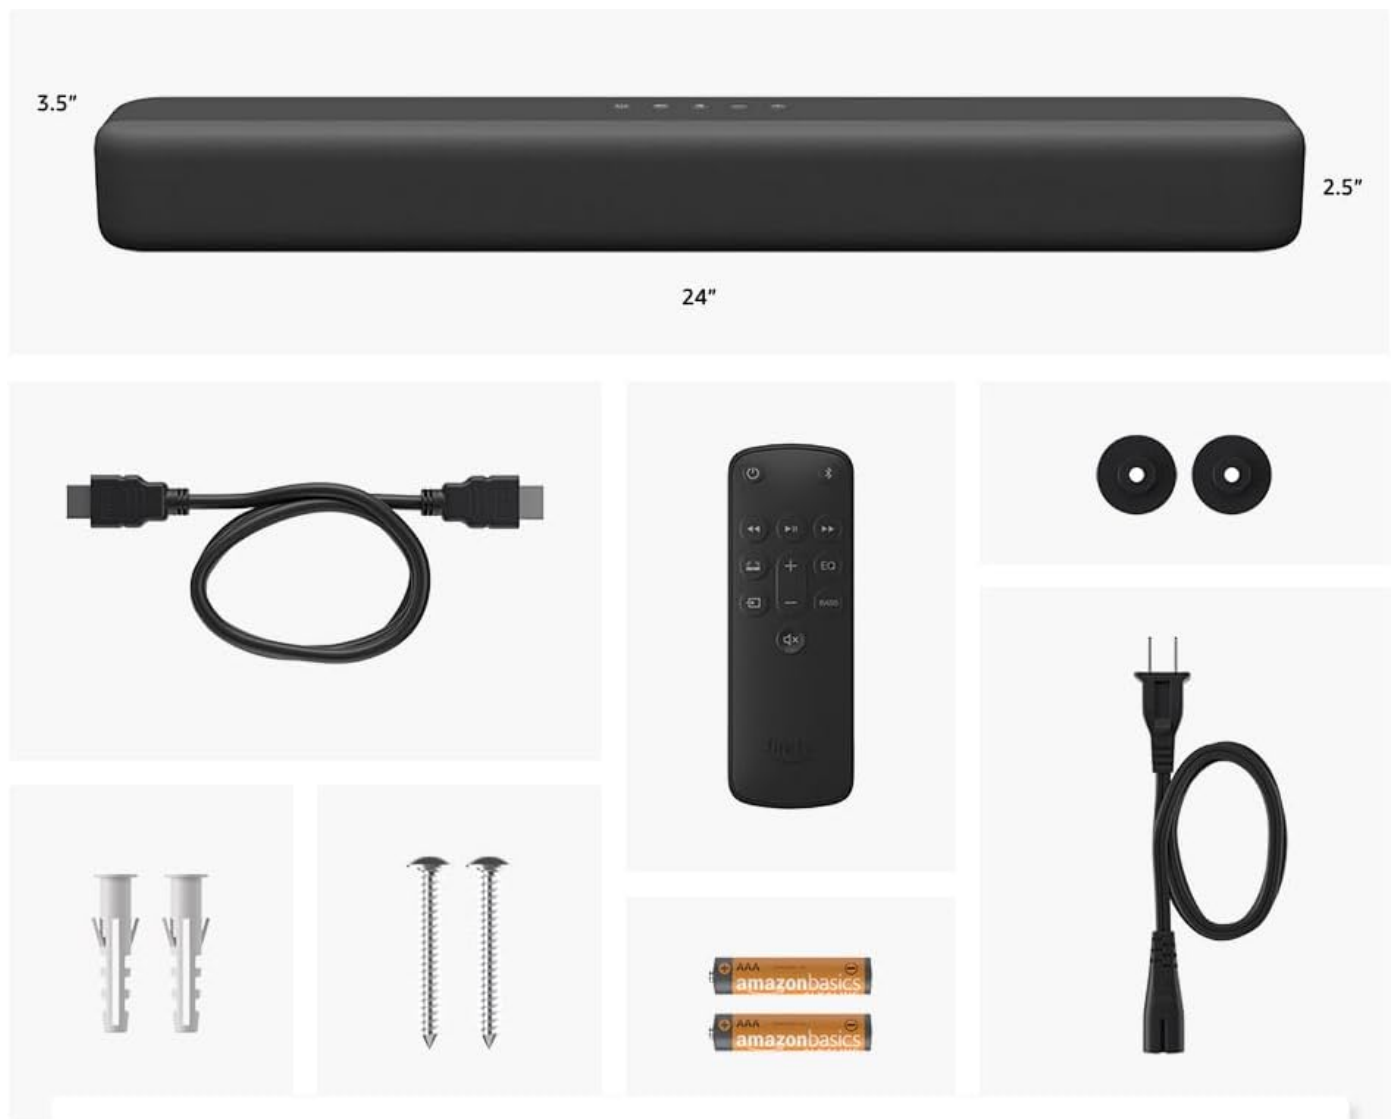

**Includes remote, HDMI cable,
and wall-mounting kit**

Image: All components included with the Fire TV Soundbar, such as the soundbar unit, remote control, HDMI cable, power cable, AAA batteries, and wall mounting hardware.


SETUP GUIDE

1. Connecting the Soundbar to Your TV

The Fire TV Soundbar connects to your TV primarily via the HDMI eARC/ARC port for optimal audio synchronization and control.

1. Locate the HDMI eARC/ARC port on your television. This port is usually labeled "HDMI ARC" or "HDMI eARC".
2. Connect one end of the included HDMI cable to the HDMI port on the back of the Fire TV Soundbar.
3. Connect the other end of the HDMI cable to the HDMI eARC/ARC port on your TV.
4. Connect the power cable to the Power port on the soundbar and then plug it into a wall outlet.
5. Insert the two AAA batteries into the remote control.

6. Turn on your TV and the Fire TV Soundbar. The soundbar should automatically be detected by your TV if HDMI ARC/eARC is enabled.

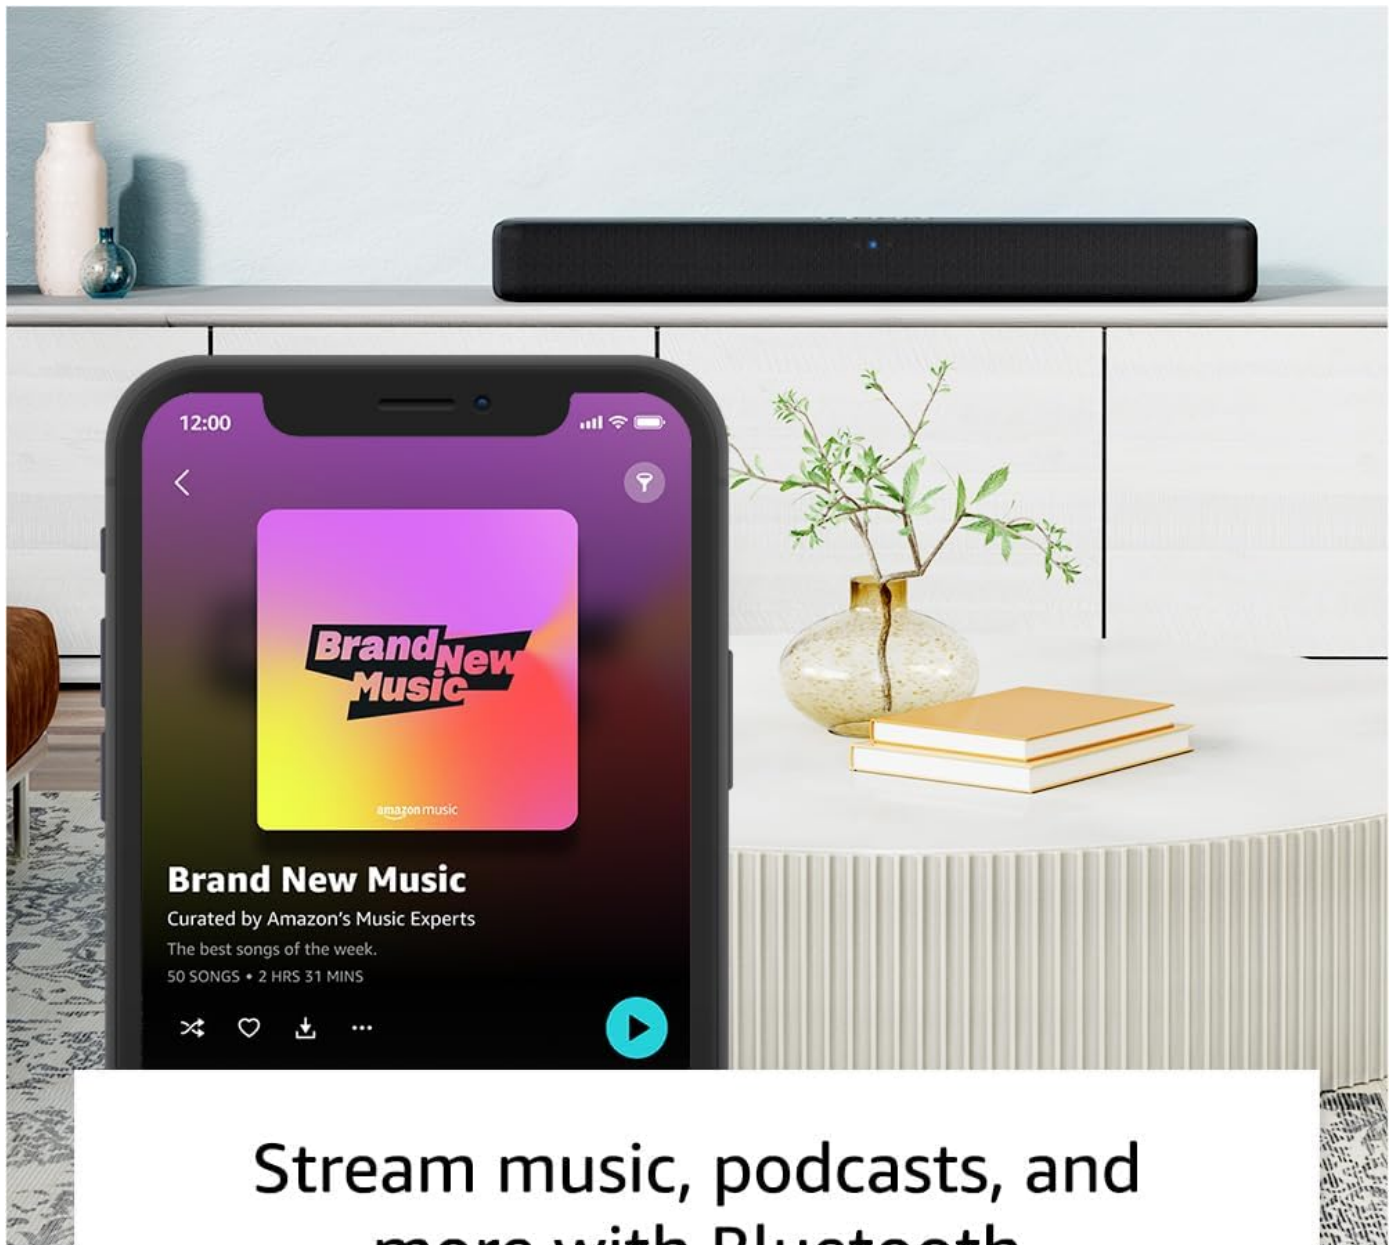

Stream music, podcasts, and more with Bluetooth

Image: Close-up of the rear panel of the Fire TV Soundbar, highlighting the HDMI, Optical, USB-A, and Power input ports for connection.

Alternative Connection (Optical)

If your TV does not have an HDMI eARC/ARC port, you can use an optical cable (not included) for audio connection.

1. Connect one end of an optical cable to the Optical port on the soundbar.
2. Connect the other end to the optical audio output port on your TV.
3. Ensure your TV's audio output settings are configured to output sound via the optical port.

2. Wall Mounting (Optional)

The Fire TV Soundbar can be wall-mounted using the included kit.

1. Determine the desired mounting location, ensuring it is level and secure.
2. Use the provided template (if available in the Quick Start Guide) to mark the drill holes.

3. Drill pilot holes and insert the wall anchors.
4. Secure the mounting brackets to the wall using the screws.
5. Carefully attach the soundbar to the mounted brackets.

OPERATING INSTRUCTIONS

Power On/Off

The soundbar will typically power on automatically when your TV is turned on and connected via HDMI ARC/eARC. You can also use the power button on the included remote control.

Volume Control

Adjust the volume using the volume up/down buttons on the soundbar remote or your Fire TV remote if integrated.

Input Selection

The soundbar automatically switches to the active input (HDMI or Optical). For Bluetooth, you will need to manually switch.

Bluetooth Pairing

To stream audio from a Bluetooth device:

1. Press the Bluetooth button on the soundbar remote. The indicator light on the soundbar will begin to flash.
2. On your mobile device (phone, tablet, etc.), go to Bluetooth settings and select "Fire TV Soundbar" from the list of available devices.
3. Once paired, the indicator light will turn solid, and you can play audio from your device through the soundbar.

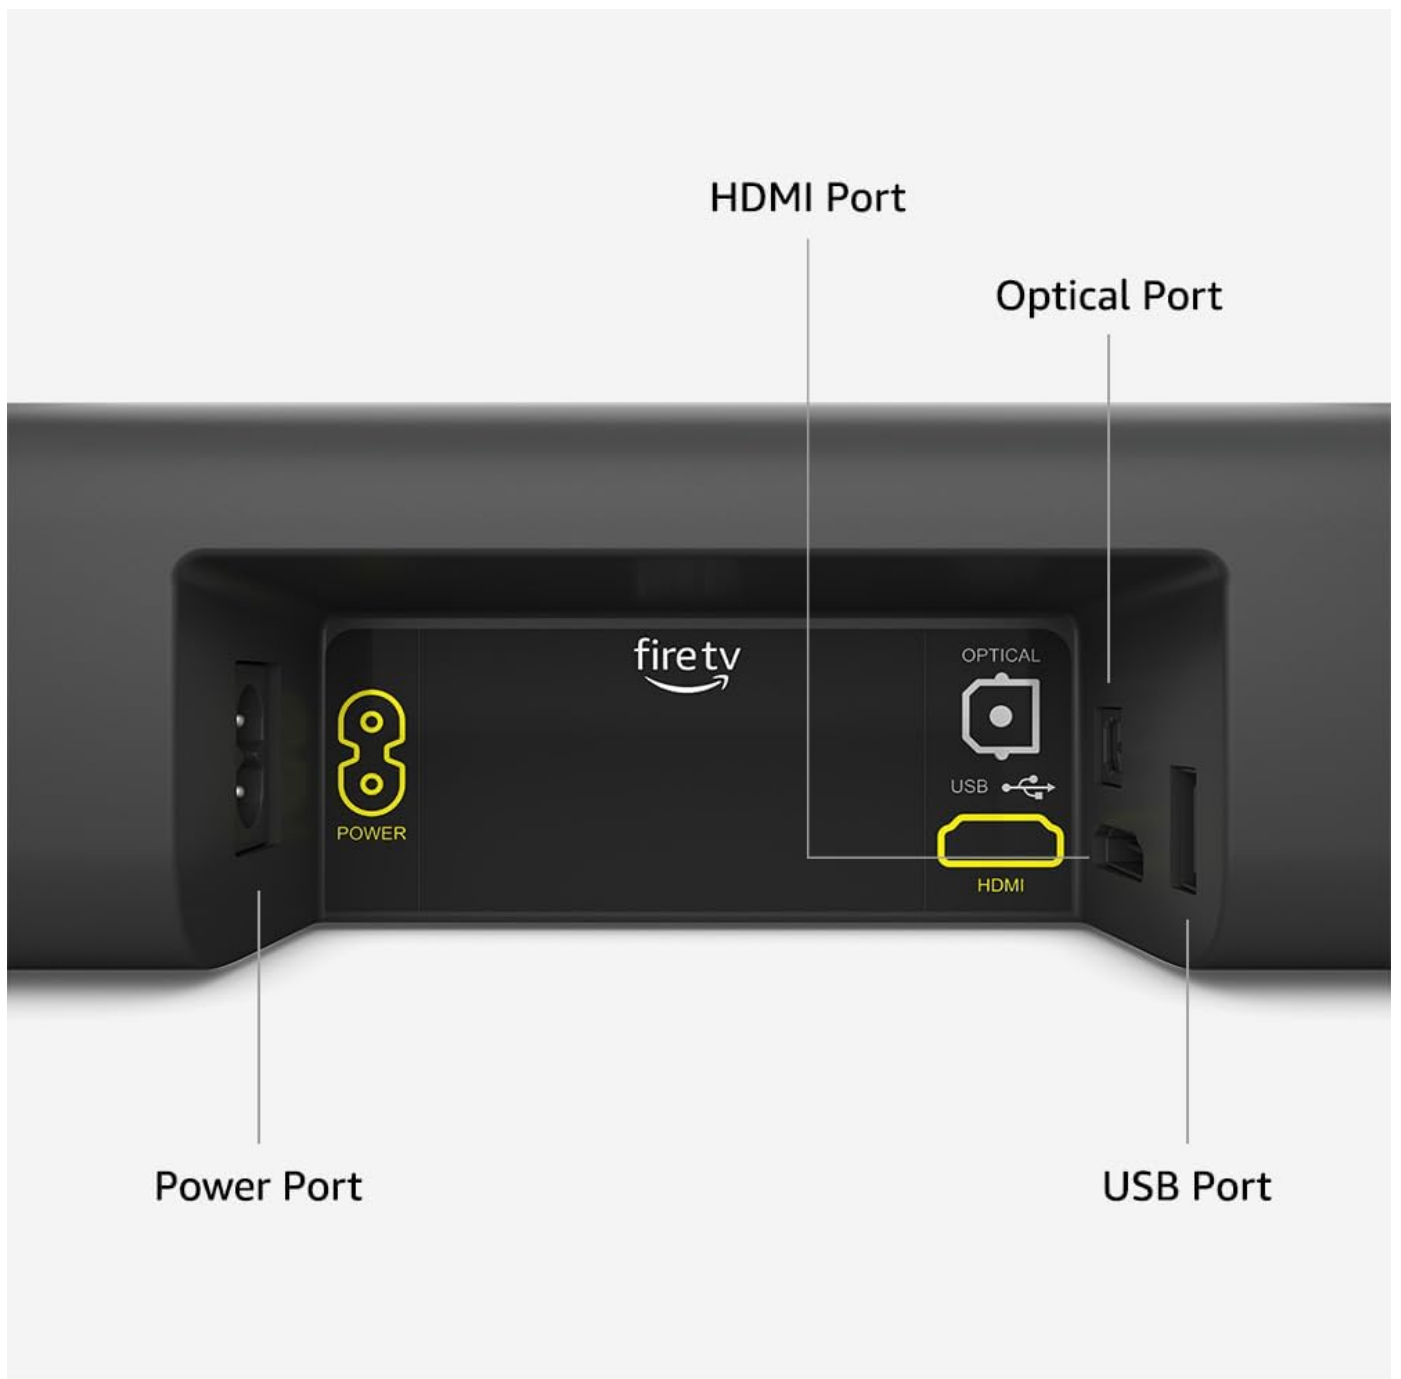 


Image: A smartphone screen showing a music streaming application, positioned in front of the Fire TV Soundbar, demonstrating its Bluetooth audio streaming capability.

EQ Modes

The Fire TV Soundbar offers preset equalizer modes to optimize audio for different content types:

- **Movies:** Enhances cinematic soundscapes.
- **Music:** Optimized for musical playback.
- **Dialogue:** Improves clarity of spoken words.

Select the desired EQ mode using the corresponding button on the remote.

MAINTENANCE

Cleaning the Soundbar

To maintain the appearance and performance of your soundbar:

- Unplug the soundbar from the power outlet before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior surfaces.
- Do not use liquid cleaners, aerosols, or abrasive cleaning agents.
- Avoid getting moisture into any openings.

Storage

If storing the soundbar for an extended period, disconnect it from power and store it in a cool, dry place, preferably in its original packaging to protect it from dust and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from soundbar.	Soundbar not powered on; incorrect input selected; TV audio output settings incorrect; loose cables.	Ensure soundbar is plugged in and powered on. Verify correct input (HDMI ARC/Optical). Check TV audio settings to output to external speakers. Reconnect HDMI or optical cables securely.
Sound is distorted or unclear.	Volume too high; audio source quality; EQ mode.	Lower the volume. Check the audio source for quality issues. Try different EQ modes (e.g., Dialogue for clearer speech).
Bluetooth device won't pair.	Soundbar not in pairing mode; device too far; interference.	Ensure soundbar is in Bluetooth pairing mode (flashing light). Move device closer to soundbar. Turn off other Bluetooth devices nearby.
Remote control not working.	Dead batteries; obstruction; remote out of range.	Replace batteries. Remove any obstructions between remote and soundbar. Ensure you are within operating range.

SPECIFICATIONS

- **Product Dimensions:** 24 inches (length) x 3.5 inches (width) x 2.5 inches (height)
- **Weight:** 3.97 lbs
- **Speaker Channels:** 2.0
- **EQ Modes:** Movies, Music, Dialogue
- **Surround Sound Support:** DTS Virtual:X, Dolby Digital
- **Ports:** HDMI (ARC/eARC compatible), Optical, AC Power, USB-A
- **Bluetooth Support:** Yes
- **Compatibility:** Smart TVs and TVs with streaming media players

WARRANTY AND SUPPORT

The Amazon Fire TV Soundbar comes with a **1-year limited warranty and service**. Extended warranty options (1-Year, 2-Year, and 3-Year) are available for U.S. customers and sold separately.

For further assistance, please refer to the official Amazon support resources or the Quick Start Guide included with your product.

© 2025 Amazon. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question