



[Manuals.plus](#) /

> [Kidsera](#) /

> Kidsera 24V Ride-On Tractor with Front Loader User Manual

Kidsera B0C4D8P239

Kidsera 24V Ride-On Tractor with Front Loader User Manual

Model: B0C4D8P239

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings before assembly and operation. Failure to follow these instructions may result in serious injury.

- This product is battery operated. Charge the battery according to the included instruction manual.
- Adult supervision is required at all times.
- Ensure the safety belt is securely fastened before operation.
- Operate only on flat, level surfaces away from roads, pools, or steep inclines.
- Keep hands and feet clear of moving parts, especially the front loader mechanism.

2. PRODUCT OVERVIEW

The Kidsera 24V Ride-On Tractor with Front Loader is an electric vehicle designed for children aged 36 months to 6 years, with a maximum weight capacity of 65 lbs. It features dual 24V motors, a functional front loader, and all-terrain wheels for various surfaces.



Figure 1: Kidsera 24V Ride-On Tractor with Front Loader. This image displays the complete yellow tractor with its front loader attachment and roof canopy.

Key Features:

- **24V Dual Motors:** Provides stable power and speeds of 2.5-5 MPH.
- **Functional Front Loader:** Manually operated for scooping, lifting, carrying, and dumping.
- **4-Gearbox Metal Frame:** Ensures durability and robust performance.
- **Soft Start Technology:** Prevents sudden acceleration or braking for child safety.
- **Comfortable Seat with Safety Belt:** Designed for secure and enjoyable riding.
- **Large All-Terrain Wheels:** Suitable for grass, gravel, dirt, and pavement.
- **Multifunctional Central Control Display:** Includes music, horn, and power indicator lights.
- **Realistic Appearance:** Features bright headlights, gear shift handle, and steering wheel.

3. SETUP AND ASSEMBLY

The tractor requires assembly before first use. Please follow the steps outlined in the video below and refer to the detailed manual included in the box for specific instructions and diagrams.

Your browser does not support the video tag.

Video 1: Assembly Guide for the Kidsera 24V Ride-On Tractor. This video demonstrates the step-by-step process of assembling the tractor, including attaching wheels, the steering wheel, and the front loader.

Initial Steps:

1. **Unpacking:** Carefully remove all components from the packaging. Verify all parts are present against the packing list.
2. **Battery Connection:** Locate the battery compartment (usually under the seat) and connect the battery terminals as instructed. Ensure a secure connection.
3. **Wheel Installation:** Attach the wheels to the axles, securing them with the provided washers and pins.
4. **Steering Wheel Assembly:** Install the steering wheel, ensuring it is properly aligned and secured.
5. **Front Loader Attachment:** Secure the front loader arms and bucket to the main body of the tractor.
6. **Canopy Installation:** Attach the roof canopy to the support pillars.
7. **Trailer Attachment (if applicable):** Connect the trailer to the rear hitch if your model includes one.

4. OPERATING INSTRUCTIONS

Familiarize your child with the controls before allowing independent operation. Always supervise children during use.

Starting the Tractor:

1. **Power On:** Locate the main power switch (usually on the dashboard) and turn it to the "ON" position.
2. **Speed Selection:** Use the gear shift lever to select between High (5 MPH) or Low (2.5 MPH) speed. A reverse option is also available.
3. **Acceleration:** Press the foot pedal to engage the motors and move the tractor. The soft start feature ensures a smooth acceleration.

Using the Front Loader:

The front loader is manually operated using the levers located near the steering wheel. These levers allow for lifting, lowering, and tilting the bucket to scoop and dump materials.

WE ALWAYS ENDEAVORING TO DO STILL BETTER FOR CHILDREN



**HIGH&LOW SPEED
BACKWARD**



FOOT PEDAL



SEAT AND SEAT BELTS



**RUGGED AND ADJUSTABLE
BUCKET**



BRIGHT HEADLIGHTS



ALL TERRAIN TIRES



TRACTOR ROOF



CONTROL ROOM

Figure 2: Detailed view of the tractor's controls, including the high/low speed selector, foot pedal, seat with safety belt, bright headlights, all-terrain tires, tractor roof, and control room.

Multimedia Features:

The central control display offers various entertainment options:

- **Music Mode:** Press the music button to play pre-loaded tunes.
- **Horn:** Press the horn button on the steering wheel for sound effects.
- **Bluetooth Connectivity:** Connect a compatible device via Bluetooth to play custom audio.
- **USB/MP3 Input:** Use the USB or MP3 port for additional audio playback.

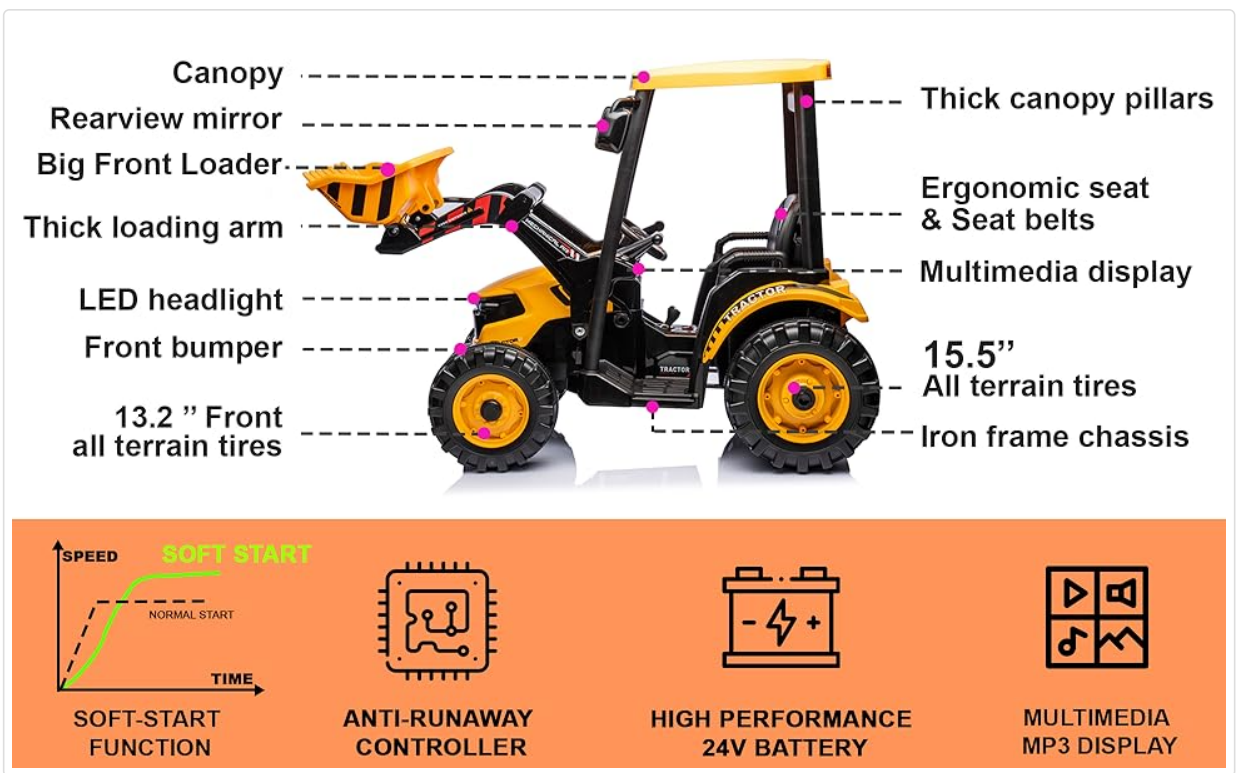


Figure 3: The multifunctional dashboard showing controls for volume, storytelling mode, power, music, play/pause, and track selection, along with a digital voltmeter.

Your browser does not support the video tag.

Video 2: Demonstration of the Kidsera 24V Tractor's operation, including driving with the front loader and trailer.

5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your Kidsera 24V Ride-On Tractor.

- **Battery Charging:** Charge the 24V lead-acid battery fully after each use. The digital voltmeter on the dashboard indicates battery level; recharge when below 24.5V. Refer to the manual for charging port location and procedure.
- **Cleaning:** Wipe down the tractor with a damp cloth. Avoid using harsh chemicals or submerging electrical components in water.
- **Storage:** Store the tractor in a dry, covered area when not in use. If storing for extended periods, ensure the battery is fully charged and disconnect it if recommended by the manual.
- **Inspection:** Periodically check all screws, nuts, and moving parts for tightness and wear. Replace any damaged components immediately.

6. TROUBLESHOOTING

If you encounter issues with your tractor, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Tractor does not move.	Battery is low or disconnected.	Charge the battery or ensure it is properly connected.
Tractor moves slowly.	Low battery charge; operating on uneven terrain.	Recharge battery; switch to low speed or operate on smoother surfaces.

Problem	Possible Cause	Solution
Front loader not functioning.	Lever not engaged correctly; mechanical obstruction.	Ensure levers are fully engaged; check for debris or obstructions.
No sound from multimedia.	Volume too low; device not connected properly.	Increase volume; re-connect Bluetooth device or check USB/MP3 connection.

7. SPECIFICATIONS

- **Brand:** Kidsera
- **Model:** B0C4D8P239 (Yellow Riding Tractor with Front Loader)
- **Power:** 24V (Dual Motors)
- **Battery:** 24V Rechargeable Lead Acid Battery
- **Speed:** 2.5-5 MPH (High/Low settings)
- **Maximum Weight Capacity:** 65 lbs
- **Recommended Age:** 36 months - 6 years
- **Product Dimensions:** 87.8 x 28.4 x 51.2 inches
- **Item Weight:** 65 pounds
- **Certifications:** ASTM and CPSIA

8. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the documentation included with your product or contact Kidsera customer service directly. Contact details can typically be found on the manufacturer's website or in the product manual.