

[manuals.plus](#) /

- › [Sweetcrispy](#) /
- › [Sweetcrispy TV Stand with 5 Fabric Drawers, Model BK-TV5BC - Instruction Manual](#)

**Sweetcrispy BK-TV5BC**

# Sweetcrispy TV Stand with 5 Fabric Drawers, Model BK-TV5BC - Instruction Manual

Brand: Sweetcrispy | Model: BK-TV5BC

## INTRODUCTION

Thank you for choosing the Sweetcrispy TV Stand with 5 Fabric Drawers. This versatile furniture piece is designed to provide both storage and a stable surface for your television, suitable for various rooms including bedrooms, living rooms, and hallways. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal use and longevity of your product.



*Image: The Sweetcrispy TV Stand, featuring a top shelf for a television and multiple fabric drawers below, shown in a festive setting.*

## SAFETY INFORMATION

Please refer to the included instructions for safety warnings regarding assembly, wall fixing, and tip-over prevention. Always ensure the unit is stable and securely fastened to prevent accidents, especially in households with children.

## SETUP AND ASSEMBLY

Assembly of your Sweetcrispy TV Stand is designed to be straightforward and typically takes approximately 30 minutes. All necessary tools are provided in the package. For a visual guide, please refer to the official installation video below. Follow the steps carefully to ensure correct and secure assembly.

### Installation Video Guide

*Video: Official installation guide for the Sweetcrispy Fabric Dresser, demonstrating each step of the assembly process.*

### Assembly Steps Overview (Refer to video for details):

#### 1. Step 1: Prepare Components

Unpack all components and verify against the parts list. Ensure all screws, frames, and boards are present.

#### 2. Step 2: Assemble Side Frames

Attach the adjustable feet to the bottom of the side frames.

#### 3. Step 3: Connect Cross Tubes

Connect the side frames using the cross tubes, ensuring proper alignment and securing with bolts.

#### 4. Step 4: Install Middle Frames

Attach the middle frames to the cross tubes using bolts to create the drawer compartments.

#### 5. Step 5: Secure Middle Board

Install the middle board onto the assembled frame, securing it with bolts to create the open storage shelf.

#### 6. Step 6: Attach Top Board

Place the top board onto the frame and tighten the bolts to secure it.

#### 7. Step 7: Prepare Fabric Drawers

Insert the base board into each expanded fabric drawer and install the drawer handles.

#### 8. Step 8: Insert Drawers

Place the assembled fabric drawers into their respective compartments within the frame.

#### 9. Step 9: Install Anti-Tilt Device (Optional but Recommended)

If desired, fix the TV stand to the wall using the provided anti-tilt device for added stability and safety.



*Image: Detailed diagram of all components and hardware included for assembly.*



*Image: Illustration of the sturdy frame construction and the anti-tilt mechanism for enhanced safety.*

## OPERATING INSTRUCTIONS

Your Sweetcrispy TV Stand offers versatile storage and display options:

- **Open Storage Shelf:** The top wooden surface and the middle open shelf provide unobstructed views, allowing easy access to frequently used items or for displaying decorative pieces. The wooden top can accommodate a TV up to 45 inches.
- **Fabric Drawers:** The unit features 5 removable fabric drawers: 3 smaller drawers on the upper level and 2 larger drawers on the lower level. These drawers are ideal for organizing various items, from clothing and accessories to toys and media. The upper drawers are suitable for frequently accessed items, while the lower, larger drawers can store less frequently used belongings.



### 3 medium drawers

hold about 45-50 Socks or 10-12 T-shirts



45-50 Socks



10-12 T-shirts

### 2 Large drawers

hold about 16-20 T-shirts or 10-12 jeans



16-20 T-shirts



10-12 jeans



*Image: The TV stand integrated into a living room, showcasing its functionality as a media console and storage unit.*



*Image: The TV stand in a bedroom, demonstrating its use as a dresser and entertainment center.*

## MAINTENANCE

To maintain the appearance and longevity of your Sweetcrispy TV Stand, follow these simple care instructions:

- **Cleaning:** Wipe the wooden surfaces and metal frame with a dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Fabric Drawers:** The fabric drawers are durable and breathable. For minor spills, spot clean with a damp cloth and mild detergent. Allow to air dry completely.
- **Water Resistance:** The wooden top is designed to be water-resistant. However, promptly wipe away any spills to prevent potential damage.



*Image: Visual representation of the water-resistant wooden top, emphasizing ease of cleaning and durability.*

## TROUBLESHOOTING

- **Wobbly Unit:** Ensure all bolts are securely tightened. Adjust the height-adjustable feet to balance the unit on uneven surfaces.
- **Drawers Not Sliding Smoothly:** Check that the fabric drawers are correctly expanded and the base boards are properly inserted. Ensure no items are obstructing the drawer's movement within the frame.
- **Missing Parts:** If any parts are missing or damaged upon arrival, please contact Sweetcrispy customer support immediately.

## SPECIFICATIONS

Feature	Detail
Brand	Sweetcrispy
Model Name	Black TV stand
Item Model Number	BK-TV5BC
Product Dimensions	11.81"D x 38"W x 30.7"H
Item Weight	30 pounds
Material	Metal frame, Fabric drawers, Wooden top
Color	Black
Number of Drawers	5

Feature	Detail
Assembly Required	Yes
Product Care Instructions	Wipe with Dry Cloth
UPC	810108658689

## WARRANTY AND SUPPORT

For any questions regarding your Sweetcrispy TV Stand, including warranty information, missing parts, or assembly assistance, please contact Sweetcrispy customer support. Refer to the product packaging or the official Sweetcrispy website for contact details.