

[Manuals.plus](#) /

› [Dpofirs](#) /

› Dpofirs USB3.0 External DVD Drive User Manual

Dpofirs Dpofirsn8c3t5s7x6

Dpofirs USB3.0 External DVD Drive User Manual

Model: Dpofirsn8c3t5s7x6

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Dpofirs USB3.0 External DVD Drive. This portable optical drive is designed to provide CD/DVD read and write capabilities for laptops, desktops, and MacBooks without a built-in drive.

SETUP

The Dpofirs USB3.0 External DVD Drive features a plug-and-play design, requiring no additional drivers for most operating systems. Follow these steps to connect and begin using your drive:

1. **Connect the Drive:** Locate the integrated USB cable at the bottom of the external DVD drive. This cable features both a USB 3.0 Type-A connector and a USB-C connector for broad compatibility.
2. **Insert into Computer:** Plug the appropriate USB connector (USB-A or USB-C) into an available USB port on your computer (laptop, desktop, or MacBook).
3. **System Recognition:** Your operating system (Windows XP/7/8/10, Linux, OS X) should automatically detect and install the necessary drivers. The drive will be ready for use once recognized.



Image: The Dpofirs external DVD drive connected to a laptop via its integrated USB cable, ready for use.



Image: A close-up view of the dual USB-A and USB-C connectors, highlighting the versatile connectivity options of the drive.

OPERATING INSTRUCTIONS

Once connected, the external DVD drive functions similarly to an internal optical drive. Here's how to use it:

1. **Insert a Disc:** Press the eject button located on the front panel of the drive. The disc tray will open. Carefully place your CD or DVD onto the tray, ensuring it is centered, and then gently push the tray back into the drive until it clicks shut.
2. **Accessing Disc Content:** Your computer's operating system will typically prompt you to choose an action for the inserted disc (e.g., play DVD movie, open folder to view files, install software). If no prompt appears, navigate to "This PC" or "My Computer" and double-click on the drive letter assigned to the external DVD drive.
3. **Ejecting a Disc:** To eject a disc, either press the eject button on the drive's front panel or right-click on the drive icon in "This PC" and select "Eject".

The drive supports various functions including watching DVD movies, installing software from discs, and burning files to compatible CD-R/RW or DVD+/-RW media.



Image: The external DVD drive with its disc tray extended, showing the spindle and laser assembly where a CD or DVD would be placed.



Image: A detailed view of the drive's front edge, featuring the eject button and a small indicator light.

MAINTENANCE

To ensure the longevity and optimal performance of your Dpofirs external DVD drive, consider the following maintenance tips:

- **Handling:** The drive is designed to be shockproof. However, avoid dropping it or subjecting it to strong impacts.
- **Placement:** Operate the drive on a stable, flat surface. It supports both horizontal and self-standing operation. Ensure adequate ventilation around the drive.
- **Cleaning:** Keep the exterior of the drive clean with a soft, dry cloth. Do not use liquid cleaners directly on the drive. For the optical lens, use a specialized CD/DVD lens cleaning kit if necessary, following the kit's instructions carefully.
- **Storage:** Its portable design allows for easy transport. When not in use, store the drive in a clean, dry place, away from extreme temperatures and direct sunlight.



Image: A top-down view of the closed external DVD drive, showcasing its compact and textured design.

TROUBLESHOOTING

If you encounter issues with your external DVD drive, refer to the following common solutions:

- **Drive Not Recognized:**

- Ensure the USB cable is securely connected to both the drive and your computer.
- Try connecting the drive to a different USB port on your computer.
- If using a desktop, try a USB port on the back of the computer, which often provides more power.
- Restart your computer.

- **Disc Not Reading/Writing:**

- Check if the disc is clean and free from scratches or smudges.

- Ensure the disc is placed correctly on the tray, label side up.
 - Verify that the disc type is supported by the drive (CD-R/RW, DVD+/-RW).
 - Try a different disc to rule out a faulty disc.
 - The drive has error correction capabilities, but severely damaged discs may not be readable.
- **Slow Performance:**
 - Ensure you are connected to a USB 3.0 port for optimal speeds. While backward compatible with USB 2.0, performance will be reduced.
 - Close other demanding applications running on your computer.
 - **Eject Button Not Working:**
 - Try ejecting the disc through your operating system (right-click on the drive icon and select "Eject").
 - If the drive has a manual eject hole (often a small pinhole), you can gently insert a straightened paperclip to manually open the tray.

The drive supports DOS startup and system recovery, which can be useful for advanced troubleshooting or system restoration processes.

SPECIFICATIONS

Brand	Dpofirs
Model Number	Dpofirsn8c3t5s7x6
Hardware Interface	USB 3.0, USB-C (backward compatible with USB 2.0)
Optical Storage Read Speed	8x (DVD)
Maximum Write Speed (DVD+R/DVD-R)	8X (10.8MB/sec)
Maximum Read Speed (CD-R/CD-RW)	4X (3.6MB/sec)
Compatibility	Windows XP, Win 7, Win 8, Win 10, Linux, OS X systems
Hardware Platform	Laptop, Notebook, PC
Special Features	Horizontal Mountable, Portable, Shockproof, Low Noise, Error Correction
Item Weight	13 ounces
Package Dimensions	6.61 x 6.54 x 1.14 inches

WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance with your Dpofirs USB3.0 External DVD Drive, please refer to the documentation included with your purchase or contact the seller directly. You may also visit the official [Dpofirs Store on Amazon](#) for more product details and contact options.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C4DN4FTZ>

More documents and user manuals: <https://manuals.plus/>