

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LEXiBOOK](#) /

› [LEXiBOOK Marvel Spider-Man Electronic Pinball Game Instruction Manual JG610SP](#)

LEXiBOOK JG610SP

LEXiBOOK Marvel Spider-Man Electronic Pinball Game

MODEL: JG610SP

Introduction

The LEXiBOOK Marvel Spider-Man Electronic Pinball Game offers an engaging action and reflex experience for children and families. Featuring a vibrant Spider-Man design, digital scoring on an LCD screen, and realistic light and sound effects, this table-top pinball machine provides hours of entertainment. It includes four flippers, five bumpers, and one metal ball for dynamic gameplay. The unit is designed with two adjustable stands to achieve the optimal playing angle.

Safety Information

WARNING! Not suitable for children under 3 years due to small parts which present a choking hazard. This product also contains a long cord which may present a strangulation hazard.

Package Contents

- 1 x Electronic Table Pinball Machine
- 1 x Metal Ball
- 2 x Stands (pre-attached or easily attachable)

Please ensure all components are present and undamaged before proceeding with setup.

Setup

1. **Unboxing:** Carefully remove the pinball machine and all its components from the packaging.
2. **Placement:** Place the pinball machine on a stable, flat surface.
3. **Battery Installation:** The device requires 3 x LR14 / C 1.5V batteries (not included). Locate the battery compartment, typically on the underside of the unit. Use a screwdriver to open the compartment, insert the batteries according to the polarity markings, and securely close the cover.
4. **Attaching Stands:** If not already attached, secure the two provided stands to the designated slots on

the underside of the pinball machine. These stands allow you to adjust the playing angle for optimal gameplay.



Image: The Lexibook Spider-Man Electronic Pinball Game shown with its two stands attached, providing an elevated playing angle. The main playfield features Spider-Man themed graphics and various bumpers and flippers.

Operating Instructions

1. **Power On:** Locate the power switch (usually on the side or back) and slide it to the 'ON' position. The LCD screen will light up, and the game will emit sounds and light effects.
2. **Launch the Ball:** Use the designated launch button or plunger to propel the metal ball onto the playfield.
3. **Gameplay:** Utilize the four flippers and five bumpers to keep the ball in play and hit various targets to score points. The game features realistic sounds and light effects that activate during play.
4. **Digital Scoring:** Your current score and the highest score will be displayed on the LCD screen at the top of the machine.
5. **Music Control:** The pinball machine offers the possibility to cut the music, allowing for quieter gameplay if desired. Refer to the specific button or switch for this function.
6. **Reset Game:** To start a new game or reset the score, press the reset button.
7. **Power Off:** When finished playing, slide the power switch to the 'OFF' position to conserve battery life.



Image: A child is actively engaged in playing the Lexibook Spider-Man Electronic Pinball Game, demonstrating the interactive nature of the flippers and bumpers on the playfield.

Features

- **Spider-Man Design:** Features an attractive Marvel Spider-Man theme.
- **Digital Scoring:** LCD screen displays current and high scores.
- **Interactive Elements:** Equipped with 4 flippers and 5 bumpers for dynamic play.
- **Light & Sound Effects:** Provides an immersive arcade-like experience.
- **Adjustable Angle:** Includes 2 stands for customizable playfield tilt.
- **Music Control:** Option to turn off background music.

Maintenance

- **Cleaning:** Wipe the surface of the pinball machine with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the game in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the device will not be used for an extended period to prevent leakage.

Troubleshooting

- **No Power:** Ensure batteries are correctly installed with the correct polarity and are not depleted. Replace with fresh batteries if necessary.
- **Lights/Sounds Not Working:** Check battery power. If issues persist, ensure no debris is obstructing sensors or speakers.

- **Ball Not Launching/Moving Freely:** Verify the launch mechanism is clear and the playfield is free of obstructions.

Specifications

| Attribute | Detail |
|-----------------------|---|
| Brand | LEXIBOOK |
| Model Number | JG610SP |
| Age Range | 5+ years (60-1188 months) |
| Material Type | Plastic |
| Color | Blue / Red |
| Theme | Superhero (Spider-Man) |
| Item Dimensions | 10.04 x 15.55 x 8.78 inches |
| Item Weight | 1.56 Pounds |
| Power Source | Battery (3 x LR14 / C 1.5V, not included) |
| Number of Players | 1 |
| Educational Objective | Improve motor skills, hand-eye coordination, and reflexes |

Warranty and Support

This LEXIBOOK product comes with a **2-Year Limited Warranty**. For warranty claims or technical support, please refer to the contact information provided in your product packaging or visit the official LEXIBOOK website.