

## TASVAC N7

# TASVAC N7 Cordless Foldable Bagless Lightweight Vacuum Cleaner User Manual

Model: N7-1k

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

## INTRODUCTION

Thank you for choosing the TASVAC N7 Cordless Foldable Bagless Lightweight Vacuum Cleaner. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The TASVAC N7 is designed for versatile cleaning across various surfaces, including carpeted floors, wooden floors, and upholstery. Its cordless and foldable design enhances convenience and storage.

## IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged charger cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by charger cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging the charger.
- Use extra care when cleaning on stairs.
- Do not use to pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

## PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your TASVAC N7 vacuum cleaner.

- Main Body (Motor Unit with Battery)
- Dust Cup
- HEPA Filter
- Sponge Filter
- Extension Tube (Foldable)
- Floor Brush Head
- Crevice Tool
- 2-in-1 Brush Tool
- Charging Adapter
- Wall Mount Bracket (Optional)



Image: Overview of the TASVAC N7 vacuum cleaner and its main components, including the motor unit, dust cup, extension tube, and various attachments.

## SETUP AND ASSEMBLY

### 1. Initial Charging

Before first use, fully charge the vacuum cleaner. Connect the charging adapter to the charging port on the main body and plug it into a power outlet. The charging indicator light will show the charging status. A full charge typically takes 4-5 hours.

### 2. Assembling the Vacuum Cleaner

- 1. Attach the Extension Tube:** Insert the top end of the extension tube into the main body until it clicks securely into place.
- 2. Attach the Floor Brush Head:** Insert the bottom end of the extension tube into the floor brush head until it clicks securely.

3. **Alternative Attachments:** For handheld use, attach the crevice tool or 2-in-1 brush tool directly to the main body.



Image: Step-by-step illustration of how to assemble the main body, extension tube, and floor brush head of the TASVAC N7 vacuum cleaner.

### 3. Wall Mount Installation (Optional)

If using the wall mount bracket, choose a suitable location near a power outlet. Mark the drilling points, drill holes, insert wall plugs, and secure the bracket with screws. Ensure the bracket is firmly attached before hanging the vacuum cleaner.

## OPERATING INSTRUCTIONS

### 1. Powering On/Off

Press the power button on the main body to turn the vacuum cleaner on. Press it again to turn it off.

### 2. Adjusting Suction Power

The TASVAC N7 typically features multiple suction modes. Press the mode button (if available) to switch between standard and max suction power, depending on your cleaning needs.

### 3. Cleaning Different Surfaces

- **Hard Floors:** Use the floor brush head on standard suction mode.
- **Carpets/Rugs:** Use the floor brush head, consider max suction mode for deeper cleaning.
- **Upholstery/Delicate Surfaces:** Use the 2-in-1 brush tool directly attached to the main body.
- **Tight Spaces/Corners:** Use the crevice tool directly attached to the main body.

### 4. Foldable Feature

To fold the vacuum cleaner for compact storage or to clean under low furniture, press the folding release button on the extension tube and gently bend the tube until it locks into the folded position. To unfold, press the release button again and straighten the tube until it locks.



Image: Demonstration of how to use the foldable feature of the TASVAC N7 vacuum cleaner for easy storage or reaching under furniture.

# MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

## 1. Emptying the Dust Cup

Empty the dust cup after each use or when the MAX fill line is reached. Press the dust cup release button, detach the dust cup, and empty its contents into a waste bin. Reattach the dust cup securely.

## 2. Cleaning Filters

The TASVAC N7 uses a HEPA filter and a sponge filter. These should be cleaned regularly, ideally after every 3-5 uses, or more frequently depending on usage.

1. Remove the dust cup.
2. Twist and pull out the filter assembly from the dust cup.
3. Separate the HEPA filter and sponge filter.
4. Rinse both filters under cold running water until the water runs clear. Do not use detergent.
5. Allow filters to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.
6. Reassemble the filters and place them back into the dust cup, then reattach the dust cup to the main body.



Image: Visual guide on how to remove, clean, and reinsert the HEPA and sponge filters in the TASVAC N7 vacuum cleaner.

### 3. Cleaning the Brush Roll

Periodically check the brush roll in the floor brush head for tangled hair or debris. Use scissors to carefully cut away any tangled hair and remove it. Ensure the brush roll spins freely.

### 4. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Store the vacuum cleaner in a cool, dry place when not in use, and charge it periodically if stored for extended periods.

## TROUBLESHOOTING

Refer to this section for common issues and their solutions.

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                          | Possible Cause                                                           | Solution                                                                                          |
|----------------------------------|--------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| Vacuum cleaner does not turn on. | Battery is not charged.<br>Power button not pressed correctly.           | Charge the battery fully.<br>Ensure the power button is pressed firmly.                           |
| Low suction power.               | Dust cup is full.<br>Filters are clogged.<br>Obstruction in nozzle/tube. | Empty the dust cup.<br>Clean and dry the filters.<br>Check for and remove any blockages.          |
| Brush roll not spinning.         | Hair or debris tangled in brush roll.<br>Brush roll motor issue.         | Clean the brush roll.<br>Contact customer support if problem persists.                            |
| Vacuum cleaner stops suddenly.   | Battery is depleted.<br>Overheating protection activated.                | Recharge the battery.<br>Turn off the vacuum, allow it to cool down for 30 minutes, then restart. |

## SPECIFICATIONS

| Feature              | Detail                                     |
|----------------------|--------------------------------------------|
| Model Number         | N7-1k                                      |
| Brand                | TASVAC                                     |
| Power Source         | Rechargeable Lithium-ion Battery           |
| Battery Type         | 1 Lithium-ion (included)                   |
| Special Feature      | Foldable, Bagless, Lightweight             |
| Recommended Uses     | Carpeted floors, Wooden floors, Upholstery |
| Dimensions (Package) | 44 x 33 x 19 cm                            |
| Weight (Package)     | 3 kg                                       |
| Color                | Blue                                       |

## WARRANTY AND SUPPORT

TASVAC products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included in your product packaging or visit the official TASVAC website.

If you encounter any issues or have questions regarding your TASVAC N7 vacuum cleaner, please contact our customer support team. Have your model number (N7-1k) and purchase details ready when contacting support.

**Customer Support:** Please refer to your purchase documentation or the manufacturer's website for the most up-to-date contact information.



