

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PTHTECHUS](#) /

› [PTHTECHUS P2 Kids Phone Toy Instruction Manual](#)

PTHTECHUS P2

PTHTECHUS P2 Kids Phone Toy Instruction Manual

Model: P2

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your PTHTECHUS P2 Kids Phone Toy. This device is designed as an educational and entertainment tool for children, featuring a touchscreen, dual camera, MP3 player, games, and various learning applications. Please read this manual thoroughly before operating the device.

SAFETY INFORMATION

WARNING: CHOKING HAZARD -- Small parts. Not for children under 3 years.

- Ensure the device is used under adult supervision.
- Do not expose the device to extreme temperatures or direct sunlight for prolonged periods.
- Keep the device away from water and moisture.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Use only the provided charging cable.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x PTHTECHUS P2 Kids Phone Toy
- 1 x Charging Cable
- 1 x User Manual
- 1 x Hanging Rope (Lanyard)
- 1 x Boot Prompt Card (Quick Start Guide)



Image: Contents of the PTHTECHUS P2 Kids Phone Toy package, showing the pink phone, a white charging cable, a pink lanyard, and a small manual.

SETUP

1. Charging the Device

Before first use, fully charge the device. Connect the provided charging cable to the charging port on the phone and the other end to a standard USB power adapter (not included) or a computer USB port. The charging indicator will show the charging status. A full charge typically takes 2-3 hours.

2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side) for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the Power button until a power-off option appears on the screen. Select "Power Off" to shut down the device.

3. Inserting a Micro SD Card (Pre-installed)

The device comes with a pre-installed SD card for storing photos, videos, and music. If you need to replace or access the card, locate the SD card slot (refer to the device diagram if available) and gently insert or remove the card. Ensure the device is powered off before inserting or removing the SD card to prevent data corruption.

OPERATING INSTRUCTIONS

Basic Navigation

The PTHTECHUS P2 features a 2.8-inch touchscreen. Navigate through menus and applications by tapping icons and swiping across the screen. The home button (circular button below the screen) typically returns you to the main menu.



Image: The PTHTECHUS P2 Kids Phone Toy displaying its home screen with icons for Camera, Flashlight, Stopwatch, Music, Game, and Video applications.

Camera and Video Recording

The device is equipped with a dual HD rotating camera, allowing children to take photos and record videos from various angles. The camera can rotate 180 degrees.

- **Taking Photos:** Tap the "Camera" icon. Frame your shot and tap the shutter button on the screen.
- **Recording Videos:** Switch to video mode within the camera application. Tap the record button to start and stop recording.
- **Applying Stickers:** The camera app includes 23 fun stickers to add creative effects to photos. Select a sticker before or after taking a photo.
- **Viewing Media:** Access saved photos and videos through the "Picture" or "Video" application.



HD rotating camera
Video recording and playback

Image: Children using the PTHTECHUS P2 Kids Phone Toy to take pictures, highlighting the rotating camera feature and various fun stickers that can be applied to photos.

MP3 Music Player

The built-in MP3 player allows children to listen to their favorite songs. The device supports 3.5mm headphones (not included).

- **Playing Music:** Tap the "Music" icon. Select a song from the list to play.
- **Adding Music:** Connect the device to a computer using the charging cable. The phone will appear as a removable drive. Drag and drop MP3 format music files into the designated music folder on the SD card.



Image: A child wearing headphones and listening to music on the PTHTECHUS P2 Kids Phone Toy, demonstrating the MP3 player function.

Games and Parental Controls

The device includes 13 educational puzzle games designed for various age groups. Parents can manage screen time using the anti-addiction mode.

- **Playing Games:** Tap the "Game" icon and select from the available games.
- **Parental Controls (Anti-Addiction Mode):** Access the settings menu to configure daily play time limits. This feature helps manage how long children can play games.

13 Puzzle games



Image: A child engaged in playing games on the PTHTECHUS P2 Kids Phone Toy. An inset shows the parental control interface for setting daily usage limits.

Educational Features

- **ABC Alphabet:** Interactive cards to learn letters and expand vocabulary.
- **Habit Tracker:** Helps children develop good habits through tracking activities like brushing teeth or going to school.
- **Audiobooks/Stories:** Access a selection of audio stories for listening and learning.
- **Buildings:** Learn about famous buildings around the world.

Let children find fun in learning



24 buildings



12 Habit Tracker



Funny ABC



10 audio stories

Image: Displays various educational applications on the PTHTECHUS P2 Kids Phone Toy, such as "Funny ABC" for alphabet learning, "Habit Tracker" for daily routines, and "Audio Stories" for listening to narratives.

Other Functions

- **Flashlight:** Activate the built-in flashlight for illumination.
- **Calculator:** A basic calculator for simple arithmetic.
- **Alarm Clock:** Set alarms for reminders or wake-up times.
- **Timer:** Use the timer for various activities.
- **Recorder:** Record voice memos.
- **Calendar:** View the date and manage simple schedules.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly.

TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the device is fully charged. Connect to a charger and try again.
Screen is unresponsive.	Restart the device by holding the Power button. If the issue persists, ensure the screen is clean and dry.
Music files are not playing.	Verify that music files are in MP3 format and correctly placed in the music folder on the SD card.
Camera not working.	Ensure the camera lens is clean. Restart the device. Check if the SD card has sufficient storage space.

SPECIFICATIONS

Model: P2

Product Dimensions: 4.13 x 2.17 x 0.59 inches

Item Weight: 1.76 ounces

Screen Size: 2.8 inches (Visible screen diagonal: 3" / 8 cm)

Battery: 1 Lithium Metal battery (included)

Camera: HD Dual Rotating Camera

Storage: Supports Micro SD Card (pre-installed)

Recommended Age: 3-7 years

WARRANTY AND SUPPORT

PTHTECHUS offers a warranty and lifetime friendly customer service for this product. If you encounter any issues or have questions regarding your PTHTECHUS P2 Kids Phone Toy, please do not hesitate to contact our customer support team. We aim to reply within 24 hours.

For support, please refer to the contact information provided on the product packaging or the official PTHTECHUS website.

IMPORTANT NOTE ON VIDEOS

While the PTHTECHUS P2 Kids Phone Toy supports video recording, no official product videos from the seller were available in the provided data for embedding in this manual. Please refer to the device's video recording function for capturing your own moments.