

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Remote Control Instruction Manual for Craig CVD505, CVD401A, CVD512A Portable CD DVD Video Players

ECONTROLLY CVD505, CVD401A, CVD512A

ECONTROLLY Replacement Remote Control User Manual

Compatible with Craig CVD505, CVD401A, CVD512A Portable CD DVD Video Players

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your ECONTROLLY replacement remote control. This remote is designed to be compatible with various Craig portable CD DVD video player models, including CVD505, CVD401A, and CVD512A. No programming is required; simply install batteries to begin use.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 1: Rear view of the remote control with the battery compartment. To install batteries, slide the cover down as indicated by the 'OPEN' arrow.

2.2 Initial Use

Once batteries are installed, the remote control is ready for immediate use with compatible Craig portable CD DVD video players. No additional programming or pairing is necessary.

3. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared sensor on your Craig portable CD DVD video player. Ensure there are no obstructions between the remote and the player.



Figure 2: Front view of the remote control displaying all functional buttons.

3.1 Button Functions

- **POWER (Red Button):** Turns the player on or off.
- **OPEN/CLOSE (Blue Button):** Opens or closes the disc tray.
- **Number Buttons (0-9, 10+):** Used for direct track/chapter selection or inputting numerical values.
- **VOLUME (+/-):** Increases or decreases the audio volume.
- **MUTE:** Silences the audio output.

- **SETUP:** Accesses the player's system setup menu.
- **MENU:** Displays the disc menu.
- **ENTER:** Confirms a selection or action.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **Playback Controls** (Play, Pause, Stop, Fast Forward, Rewind, Next Track, Previous Track): Controls media playback.
- **TITLE:** Returns to the disc title menu.
- **AUDIO:** Changes the audio track or language.
- **VIDEO:** Adjusts video output settings.
- **STOP:** Stops playback.
- **STEP:** Advances playback frame by frame.
- **OSD (On-Screen Display):** Toggles on-screen information display.
- **SUBTITLE:** Changes subtitle language or turns subtitles on/off.
- **H/P (Headphone):** Toggles headphone output or related settings.
- **WIDE:** Changes the aspect ratio of the video display.
- **ZOOM:** Zooms in or out on the video.
- **ANGLE:** Changes the camera angle on compatible DVDs.
- **REPEAT:** Repeats a track, chapter, or entire disc.
- **A-B:** Repeats a specific segment between two marked points (A and B).
- **SLOW:** Plays video in slow motion.
- **CLEAR:** Clears current selection or input.
- **RANDOM:** Plays tracks in a random order.
- **GOTO:** Jumps to a specific time, title, or chapter.
- **PROG (Program):** Creates a custom playback program.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's finish or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new alkaline batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.

- Check for any obstructions between the remote control and the player's infrared sensor.
- Ensure you are within the effective operating range and pointing the remote directly at the player.
- **Specific buttons not working:**
 - This remote is a direct replacement and does not require programming. If specific buttons do not function, ensure your player model is listed as compatible (CVD505, CVD401A, CVD512A).
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any debris.

6. SPECIFICATIONS

Brand	ECONTROLLY
Compatible Models	Craig CVD505, CVD401A, CVD512A Portable CD DVD Video Player
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	2 ounces
Special Feature	Ergonomic design

7. WARRANTY AND SUPPORT

This product is a replacement remote control. Instructions and batteries are not included in the package. For any issues or further assistance, please refer to the documentation provided with your Craig portable CD DVD video player or contact the seller directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C4F53ZS1>

More documents and user manuals: <https://manuals.plus/>