

[Manuals.plus](#) /

› [OIMIS](#) /

› OIMIS 30L X-Large Air Fryer Toaster Oven Combo User Manual

OIMIS AFO-10D-RS3

OIMIS 30L X-Large Air Fryer Toaster Oven Combo User Manual

MODEL: AFO-10D-RS3

Thank you for choosing OIMIS. Please read this manual carefully before use.

1. Introduction

This manual provides essential information for the safe and efficient operation of your OIMIS 30L X-Large Air Fryer Toaster Oven Combo. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.

Important Safety Instructions

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- OIMIS Air Fryer Toaster Oven is equipped with an auto shut-off sensor. Opening the door will stop heating, and closing it will resume heating.

2. Product Overview

The OIMIS 30L X-Large Air Fryer Toaster Oven Combo is a versatile kitchen appliance designed for various cooking methods, including air frying, toasting, baking, roasting, and rotisserie. It features a patented dual air duct system and 360° rapid air circulation for efficient and even cooking.



Image: The OIMIS 30L X-Large Air Fryer Toaster Oven Combo with its digital control panel, large viewing window, and stainless steel finish.

Key Features:

- **30L X-Large Capacity:** Accommodates a 3.5 kg chicken, 13-inch pizza, or 6 slices of toast.
- **21-in-1 Multifunctional Presets:** Offers a wide range of cooking programs including Air Fry, Roast, Bake, Grill, Dehydrate, and more.

- **Patented Dual Air Duct System:** Features both hot and cold air systems for optimal cooking and rapid cooling.
- **360° Rapid Air Circulation:** Ensures even cooking and crispy results with 1800W power.
- **Dual Cook Function:** Allows combining two cooking programs to run in sequence.
- **Double Insulated Glass Door:** Reduces surface temperature during operation for safety.
- **Precise Temperature Control:** Equipped with NTC temperature sensor and PID temperature chip.



30L Extra Large Capacity



1 kg
French Fries



21
Chicken Wings



 
6
Bagels



3.5 kg
Chicken



13 inch
Pizza

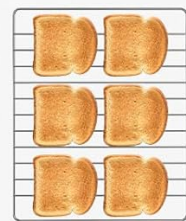

6 Slices
of Toast

Image: Diagram illustrating the 30L capacity of the OIMIS Air Fryer Oven, showing it can fit a whole chicken, pizza, or multiple items.

Patented Hot and Cold Air System

The **hot** air system release the heat and drain excess moisture from the ingredients for a crispy texture

The **cold** air system allowing the oven to cool down quickly. Low Surface temperature.



Overheating Protection



Auto Shut off

Stainless Steel Handle
Cool Touch



1

2

Toughened LOW-E

Double Insulated Glass

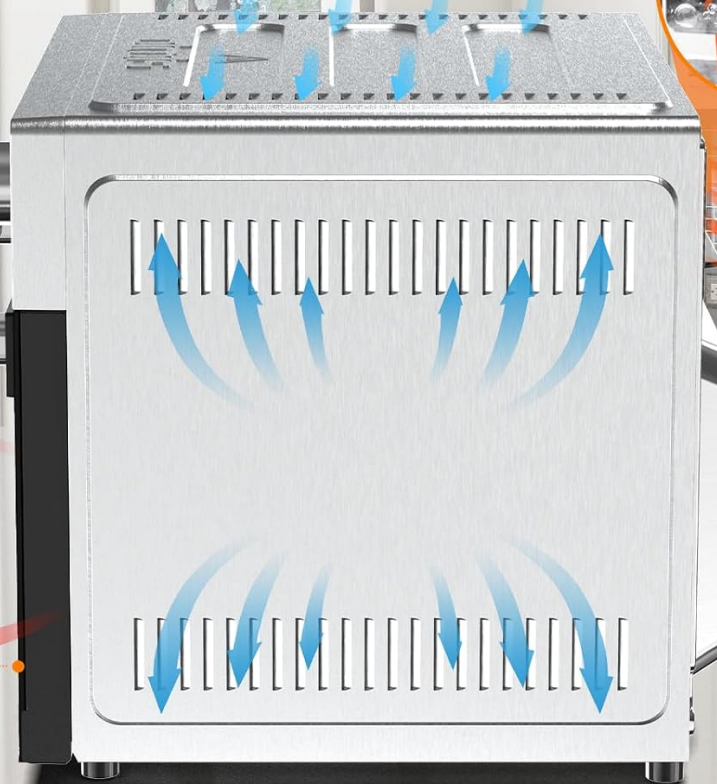 


Image: Illustration of the patented hot and cold air system, showing hot air for cooking and cold air for cooling, along with double insulated glass.



360° Rapid Air Circulation

Cook every dish evenly for irresistibly crispy and juicy results!



1800W



50% Faster Cooking



90% Less Oil

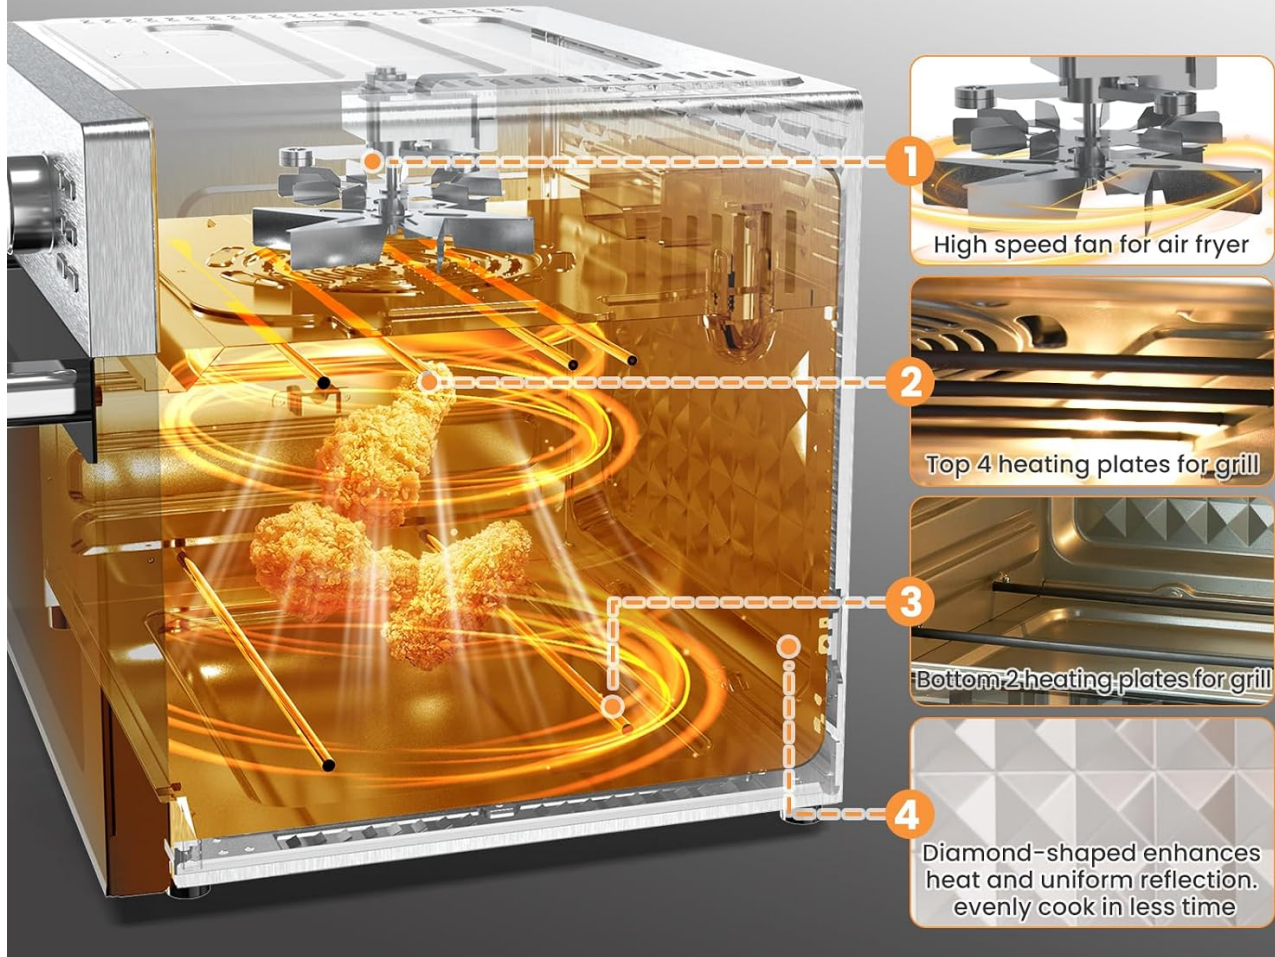 


Image: Cutaway view of the oven interior demonstrating 360° rapid air circulation, highlighting the high-speed fan, top heating elements, bottom heating elements, and diamond-shaped interior for enhanced heat reflection.

Included Accessories:

Your OIMIS Air Fryer Toaster Oven comes with 7 essential accessories:

1. 304 Stainless Steel Oven Rack x 1
2. 304 Stainless Steel Air Fry Basket x 1
3. Teflon Non-stick Coating Baking Tray x 1
4. 304 Stainless Steel Rotisserie Fork x 1
5. 430 Stainless Steel Rotisserie Basket x 1
6. Galvanised Crumb Tray x 1
7. Galvanised Remove Handle x 1



1

**304 stainless steel
Oven Rack * 1**



2

**304 stainless steel
Air Fry Basket * 1**



3

**Teflon non-stick coating
Baking Tray * 1**



4

**304 stainless steel
Rotisserie Fork * 1**

 
 


Comes with 7 Accessories, Meet all cooking needs



5

**430 Stainless steel
Rotisserie Basket *1**

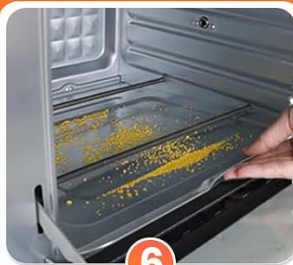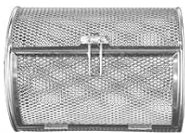


6

**Galvanised
Crumb Tray * 1**



7

 **Galvanised
Remove Handle*1**

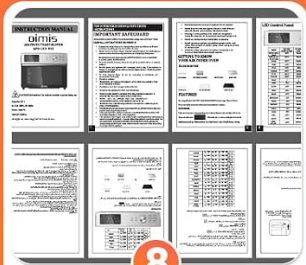

8

Instruction Manual*1



Image: A display of the seven included accessories: oven rack, air fry basket, baking tray, rotisserie fork, rotisserie basket, crumb tray, and remove handle.

3. Setup

Unpacking and Initial Inspection:

1. Carefully remove the appliance and all accessories from the packaging.
2. Remove any packaging materials, stickers, or labels from the appliance.
3. Inspect the appliance for any damage. Do not operate if damaged. Contact customer support.

Placement:

- Place the appliance on a stable, level, heat-resistant surface.
- Ensure there is adequate clearance (at least 10-15 cm) on all sides and above the appliance for proper

ventilation.

- Do not place the appliance near flammable materials or heat sources.

Initial Cleaning:

Before first use, clean all accessories and the interior of the oven.

1. Wash the oven rack, air fry basket, baking tray, rotisserie fork, rotisserie basket, and crumb tray with warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the interior and exterior of the oven with a damp cloth. Do not use abrasive cleaners.
3. Ensure all parts are dry before plugging in the appliance.

Power Connection:

- Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (1800W).
- The appliance is now ready for use.

4. Operating Instructions

Control Panel Overview:

The control panel features a digital display, various preset buttons, and a rotary knob for adjusting time and temperature. Specific button functions include ON/OFF, START/STOP, TEMP/TIME, LIGHT, and PREHEAT.

Basic Operation:

1. Plug in the appliance. The display will illuminate.
2. Press the **ON/OFF** button to turn on the oven.
3. Select a cooking function using the preset buttons or manually set temperature and time.
4. Press **START/STOP** to begin cooking.

Using Preset Functions (21-in-1):

The oven offers 21 preset cooking modes for convenience. These include:



21 Cooking Preset Mode

Everyone can be a chef!

Image: A grid displaying 21 cooking preset modes, including Air Fry, Chips, Wings, Pizza, Steak, Grill, Root Veggies, Snacks, Broil, Toast, Bake, Bagel, Veggies, Dehydrate, Roast, Bacon, Proof, Warm, Reheat, Defrost, and Cookies.

1. Place food inside the oven with the appropriate accessory.
2. Press the desired preset button (e.g., 'AIR FRY', 'ROAST', 'BAKE'). The display will show the default temperature and time for that preset.
3. You can adjust the temperature and time using the rotary knob if needed. Press **TEMP/TIME** to toggle between temperature and time adjustment.
4. Press **START/STOP** to begin.

Dual Cook Function:

The Dual Cook function allows you to combine two cooking programs to run in sequence automatically.

Innovative Function-- Dual Cook

Combine two cooking programs to run in sequence

For example, put a bread in the oven, set it to bake then broil, and it will cook through with a golden crisp topping to finish. Just set it and forget it. Enjoy your favorite fried food without any extra operation. Make complex recipes effortless and rich the dish's flavor



Image: Illustration of the Dual Cook function, showing how two programs (e.g., Air Fry + Warm, Bake + Broil) can be combined for sequential cooking.

1. Select the first cooking program (e.g., 'BAKE') and set its temperature and time.
2. Press the **DUAL COOK** button.
3. Select the second cooking program (e.g., 'BROIL') and set its temperature and time.
4. Press **START/STOP**. The oven will execute the first program, then automatically switch to the second program.

Using Rotisserie Function:

1. Assemble the rotisserie fork or basket with your food item.
2. Insert the rotisserie assembly into the designated slots inside the oven.
3. Select a rotisserie-compatible preset or manually set temperature and time.
4. Press the **ROTISSERIE** button (if available) or ensure the rotisserie function is activated.
5. Press **START/STOP**.
6. Use the galvanised remove handle to safely extract the hot rotisserie assembly after cooking.

5. Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your OIMIS Air Fryer Toaster Oven.

General Cleaning:

1. Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. Wipe the exterior of the oven with a soft, damp cloth. Do not use harsh or abrasive cleaners.

3. Clean the interior walls with a damp cloth and mild detergent. For stubborn stains, a non-abrasive sponge can be used.
4. Ensure no water enters the control panel or electrical components.

Cleaning Accessories:

- All removable accessories (oven rack, air fry basket, baking tray, rotisserie fork, rotisserie basket, crumb tray) can be washed in warm, soapy water.
- For baked-on food, soak accessories in warm water before cleaning.
- Rinse thoroughly and dry completely before storing or re-inserting into the oven.

Crumb Tray Cleaning:

The galvanised crumb tray should be cleaned regularly to prevent grease buildup and potential fire hazards.



Image: Close-up view of the removable crumb tray, showing how it collects food debris and can be easily pulled out for cleaning.

1. Pull out the crumb tray from the bottom of the oven.
2. Discard any crumbs or food particles.
3. Wash the tray with warm, soapy water, rinse, and dry thoroughly.
4. Re-insert the crumb tray into its position.

Cleaning the Glass Door:

The double insulated glass door can be cleaned to maintain visibility.

Double Glass Door

Two layers of glass reduce the oven temperature during operation and the oven door temperature is below 80°C



Always Crystal Clear Window

Just remove screws and use suction cups to remove glass for cleaning. Always keep crystal clear window. Monitor cooking progress all the time.



Auto Shut-off Sensor

Equipped with safety switch. Open the door, stop heating. Close the door, resume heating. Upgrade your security!



Premium Door Handle

Experience the quality and cool touch of a stainless steel grip. Equipped with a three-stop position to open and close the door for added safety.

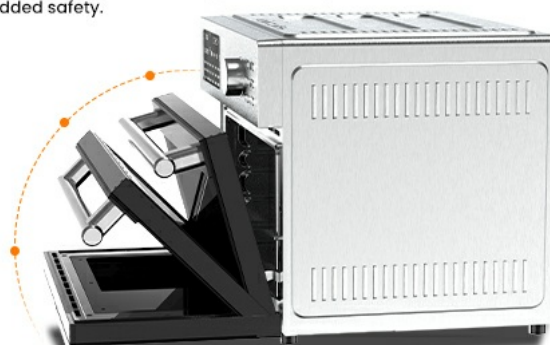 


Image: Details of the double glass door, auto shut-off sensor, and instructions for cleaning the clear window by removing screws and using suction cups.

- Wipe the glass door with a damp cloth and a mild glass cleaner.
- For thorough cleaning, the inner glass panel can be accessed by removing screws and using suction cups to detach it, as illustrated in the product images. Exercise caution when performing this.

6. Troubleshooting

If you encounter any issues with your OIMIS Air Fryer Toaster Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction; Appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooking evenly.	Overcrowding the oven; Incorrect temperature/time settings; Food not rotated.	Avoid overcrowding; ensure proper air circulation. Adjust temperature and time as per recipe. For larger items, rotate halfway through cooking.
Smoke coming from the oven.	Excess oil/grease on heating elements or crumb tray; Food residue.	Unplug the oven immediately. Allow to cool. Clean the crumb tray and interior thoroughly. Ensure food is not touching heating elements.

Problem	Possible Cause	Solution
Rotisserie function not working.	Rotisserie assembly not properly installed; Function not activated.	Ensure the rotisserie fork/basket is correctly seated in the drive and support slots. Activate the rotisserie function on the control panel.
Digital display shows an error code.	Internal sensor issue; Overheating.	Unplug the oven for 10-15 minutes to reset. If the error persists, note the code and contact customer support.

7. Specifications

Feature	Specification
Brand	OIMIS
Model Name	AFO-10D-RS3
Capacity	30 Liters (32 Quarts)
Power / Wattage	1800 watts
Material	Stainless Steel
Item Weight	13.4 Kilograms
Package Dimensions	51.5 x 48.7 x 45.1 cm
Special Features	Dual Zone Features, 21-in-1 Multifunction, Dual Cook, Rotisserie
Control Type	Knob And Push Button
Door Style	Dropdown Door
Door Material Type	Tempered Glass
Finish Type	Polished

8. Warranty and Support

Warranty Information:

OIMIS products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official OIMIS website. Keep your proof of purchase for warranty claims.

Customer Support:

If you have any questions, require technical assistance, or need to report a problem with your appliance, please contact OIMIS customer support. Contact details can typically be found on the product packaging, the official OIMIS website, or your purchase documentation.

© 2023 OIMIS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C4F5489J>

More documents and user manuals: <https://manuals.plus/>