

ECONTROLLY ONA18DP001

Instruction Manual for ECONTROLLY Replacement Remote Control

Model: ONA18DP001 (Compatible with ONN DVD Player ONA18DP001, ONA19DP005)

Brand: ECONTROLLY

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY LR03 100008761 Replacement Remote Control. This remote is designed to be a direct replacement for the original remote controls of specific ONN DVD Player models, including ONA18DP001 and ONA19DP005. It operates using infrared technology and requires no programming; simply install batteries to begin use.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 2.1: Back view of the remote control with the battery compartment. The compartment is located at the bottom rear of the remote, designed for easy access to insert or replace batteries.

Once batteries are installed, the remote is ready for use with compatible ONN DVD Players without any additional programming.

3. OPERATING INSTRUCTIONS

This replacement remote control functions identically to the original ONN DVD Player remote. Point the remote directly at the DVD player's infrared sensor for optimal performance. Below is an overview of common button functions:





Figure 3.1: Front view of the ECONTROLLY replacement remote control. This image displays the layout of all buttons, including power, navigation, playback controls, and numerical keys.

- **Power Button** (●): Turns the DVD player on or off.
- **Number Buttons (0-9)**: Used for direct track selection or inputting numerical values.
- **Navigation Buttons (Up, Down, Left, Right, ENTER)**: Used to navigate menus and confirm selections.
- **Play/Pause** (▶): Starts or pauses disc playback.
- **Stop** (■): Stops disc playback.
- **Rewind (REV) / Fast Forward (FWD)**: Skips backward or forward through content.
- **Previous (PREV) / Next (NEXT)**: Skips to the previous or next track/chapter.
- **Volume Up (VOL+) / Volume Down (VOL-)**: Adjusts the audio volume.
- **Mute**: Silences the audio output.
- **Menu**: Accesses the disc or system menu.
- **Subtitle**: Toggles subtitle display.
- **Audio**: Changes audio tracks or languages.
- **Setup**: Enters the system setup menu.
- **Return**: Goes back to the previous screen or menu.



Figure 3.2: Angled view of the remote control, providing a perspective of its ergonomic design and button layout from the side.

4. MAINTENANCE

4.1 Cleaning the Remote

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

5. TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote is not responding.	• Dead or incorrectly installed batteries. • Obstruction between remote and DVD player. • Remote is too far from the DVD player.	• Replace batteries with new AAA alkaline batteries, ensuring correct polarity. • Remove any objects blocking the line of sight between the remote and the DVD player. • Move closer to the DVD player.

Problem	Possible Cause	Solution
Some buttons are not working.	• Low battery power. • Dirt or debris under the buttons.	• Replace batteries. • Clean the remote control as described in the Maintenance section.
Remote works intermittently.	• Weak batteries. • Interference from other electronic devices.	• Replace batteries. • Ensure no strong light sources (like direct sunlight) or other infrared devices are interfering.

6. SPECIFICATIONS

Feature	Detail
Model Number	ONA18DP001 (Replacement for LR03 100008761)
Compatible Devices	ONN DVD Player ONA18DP001, ONA19DP005
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches (approx.)
Item Weight	1.58 ounces (approx.)
Special Feature	Ergonomic design
Manufacturer	ECONTROLLY Factory
Country of Origin	China

7. WARRANTY AND SUPPORT

This ECONTROLLY replacement remote control is designed for reliable performance. For any issues or inquiries, please contact the seller or refer to the product listing on the platform where it was purchased for specific warranty information and customer support details.

Manufacturer: ECONTROLLY Factory

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question