

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Jectse](#) /

› [Jectse MP3 Player User Manual - Model Jectsee6gvakth98-11](#)

## Jectse Jectsee6gvakth98-11

# Jectse MP3 Player User Manual

Model: Jectsee6gvakth98-11

## 1. INTRODUCTION

Thank you for choosing the Jectse MP3 Player. This portable music player is designed to provide a high-quality audio experience with versatile features. Please read this manual carefully to understand the device's functions and ensure optimal performance.



*Image: Overview of the Jectse MP3 Player's multi-functional capabilities.*

## 2. PACKAGE CONTENTS

Ensure all items are present in the package:

- Jectse MP3 Player (Model: Jectsee6gvakth98-11)
- Wired Earphones
- USB-A to USB-C Charging/Data Cable
- 64GB Micro SD Card
- USB-A to Micro SD Card Reader
- Screen Protectors (2x)
- Clear Protective Case
- Instruction Manual



*Image: Jectse MP3 Player and its primary accessories.*

### 3. DEVICE LAYOUT

Familiarize yourself with the physical components of your MP3 player:

- **1.8-inch Touchscreen Display:** For navigation and content viewing.
- **Control Buttons:** Capacitive touch buttons below the screen for playback and menu navigation.
- **Power/Lock Button:** Located on the side for turning the device on/off and locking the screen.
- **Volume Buttons:** Dedicated buttons on the side for adjusting audio output.
- **USB-C Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** For wired earphone connection.
- **Micro SD Card Slot:** For expanding storage capacity.
- **Built-in Speaker:** Located on the rear of the device for audio playback without earphones.

TOUCH BACKLIGHT AT NIGHT

OPEN THE ERA OF SILENT TOUCH  
**FEARLESS DARK  
BACKLIGHT BUTTON**

MILLISECOND LEVEL CAPACITIVE TOUCH, SILENT OPERATION NO LONGER NEED TO WORRY ABOUT DISTURBING OTHER PEOPLE'S TOUCH TO REACH

NO PRESSURE CONTROL, NO JAMMING, CONVENIENT OPERATION AT NIGHT, KEY BACKLIGHT

The melody of lossle  
ssmusic



*Image: Front view of the MP3 player highlighting the touch-sensitive buttons.*

BUILT IN HIGH FREQUENCY HORN UNIT

## BETA SPEAKER OUT

BUILT IN TWEETER UNIT and CUSTOMIZED METAL DIAPHRAGM HIDDEN IN THE BACK TWEETER  
EXPERIENCE sound-VISUAL FEAST WITHOUT HEADPHONES

The melody of losle  
ssmusic



*Image: Rear view of the MP3 player, indicating the built-in speaker.*

## 4. SETUP

### 4.1. Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB-A to USB-C cable to the device's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port. A full charge takes approximately 1.5 hours.

### 4.2. Inserting the Micro SD Card

The device comes with 32GB of internal storage and supports expansion up to 128GB via a Micro SD card. A 64GB Micro SD card is included in your package.

1. Locate the Micro SD card slot on the side of the device.
2. Gently insert the Micro SD card into the slot until it clicks into place.
3. To remove, gently push the card inward until it springs out.

### 4.3. Transferring Files

You can transfer music, videos, images, and e-books to your MP3 player using two methods:

- **Direct USB Connection:** Connect the MP3 player to your computer using the provided USB-A to USB-C cable. The device will appear as a removable disk. Drag and drop your files into the appropriate folders (e.g., 'Music', 'Video', 'Pictures', 'E-book').
- **Using the SD Card Reader:** Remove the Micro SD card from the player and insert it into the provided USB-A to Micro SD card reader. Plug the card reader into your computer's USB-A port. Transfer files directly to the Micro SD card. This method is generally faster for large file transfers.

*Video: Demonstration of using a format converter for MP3 player files. This can be useful if your files are not in a compatible format.*

## 5. OPERATING INSTRUCTIONS

### 5.1. Power On/Off and Screen Lock

- **Power On:** Press and hold the Power/Lock button on the side until the screen lights up.
- **Power Off:** Press and hold the Power/Lock button until a power-off option appears, then select it.
- **Screen Lock:** Briefly press the Power/Lock button to lock the screen and prevent accidental touches.
- **Screen Unlock:** Briefly press the Power/Lock button again to unlock the screen.



*Image: The screen lock feature of the MP3 player.*

## 5.2. Navigation and User Interface

The MP3 player features a 1.8-inch touchscreen and capacitive buttons for navigation. The main menu displays icons for various functions such as Music, Movie, Radio, E-book, Files, Record, Tools, and Settings.


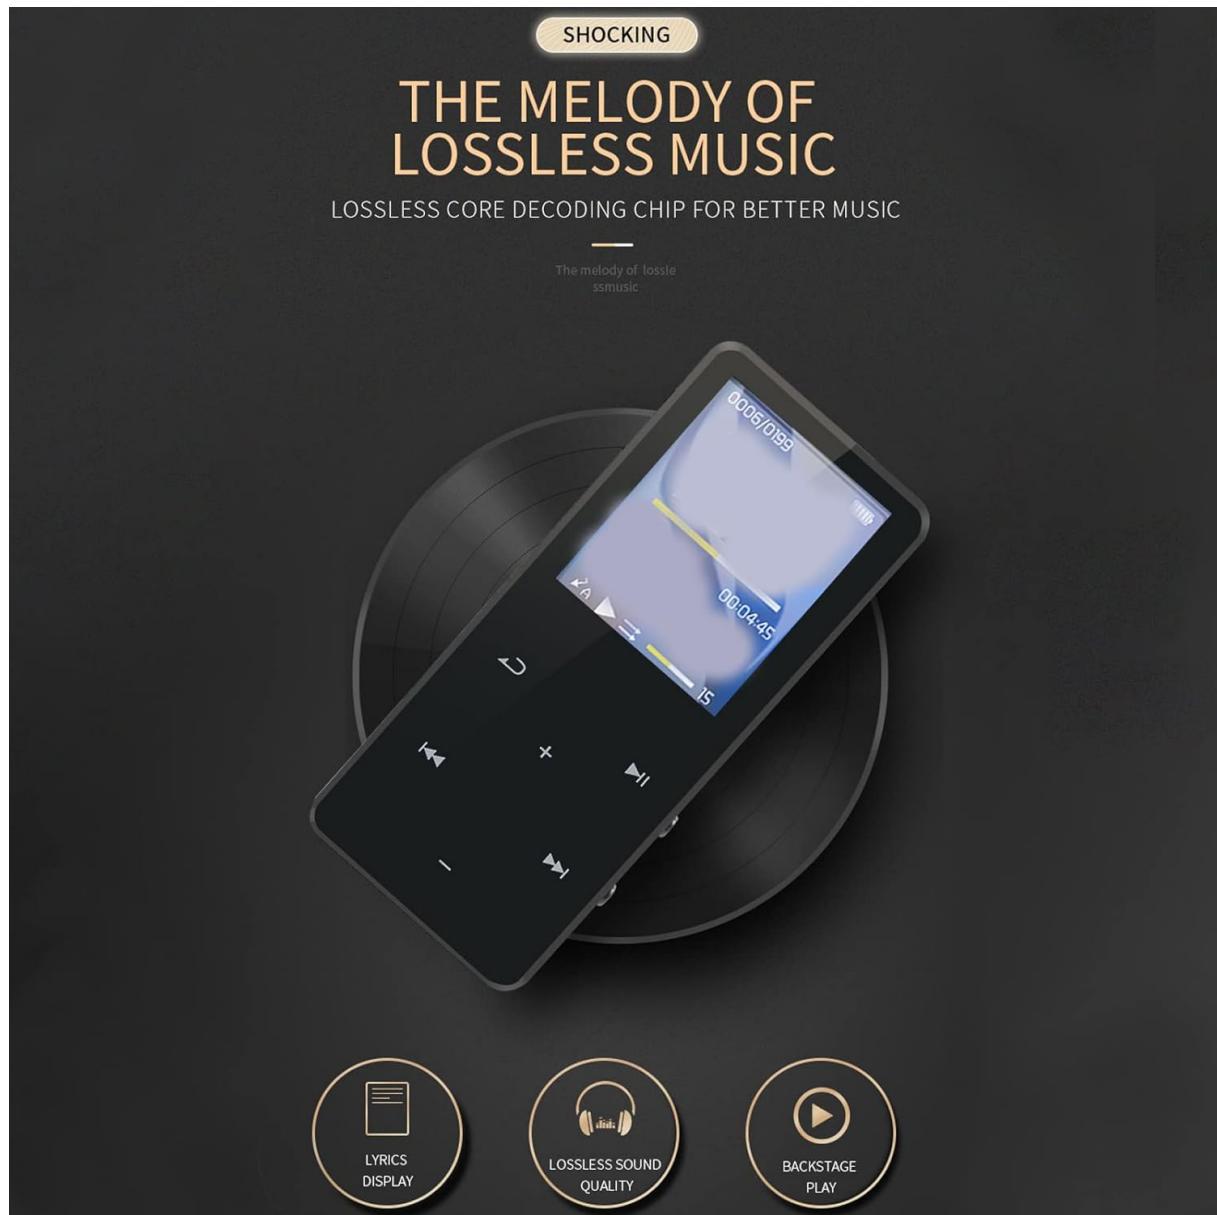


Image: Main menu interface of the MP3 player.

## 5.3. Music Playback

The player supports MP1, MP2, MP3, WMA, WAV, OGG, APE, FLAC, AAC LC, and ACELP audio formats, offering HiFi lossless sound quality.

- From the main menu, select 'Music'.
- Browse your music library by artist, album, or song.
- Tap on a song to begin playback.
- Use the on-screen controls or physical buttons for play/pause, skip track, and volume adjustment.
- Play Modes:** The player supports various play modes including Loop All, Shuffle, Loop Single, and Sequential Play. Access these options from the music playback screen.
- Variable Speed Playback:** Adjust playback speed for learning or other purposes.

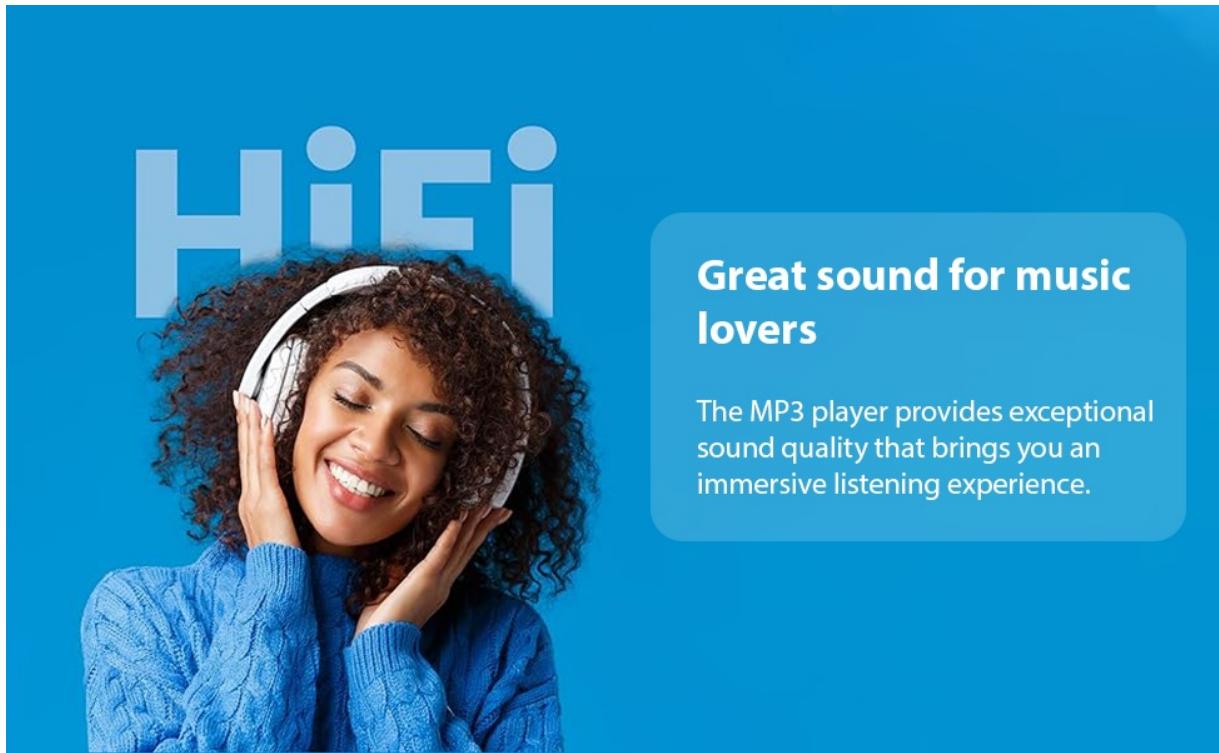


*Image: Highlighting the HiFi lossless sound quality feature.*

*Video: Demonstration of the MP3 player's shuffle playing feature.*

#### 5.4. Bluetooth Connectivity

The device features Bluetooth 5.0 for stable and fast wireless connections to compatible headphones or speakers.

1. From the main menu, select 'Settings' then 'Bluetooth'.
2. Turn on the Bluetooth switch.
3. Ensure your Bluetooth audio device is in pairing mode.
4. Select your device from the 'Available Devices' list to pair.

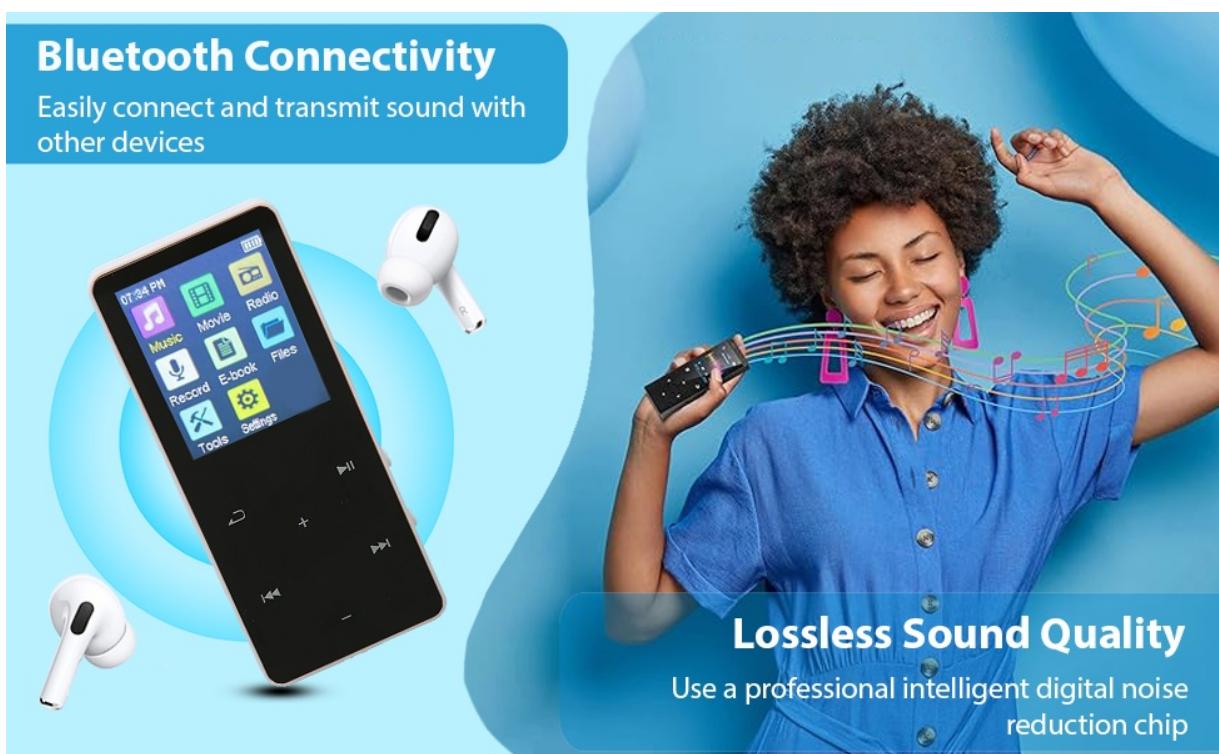

*Image: Bluetooth connectivity feature of the MP3 player.*

## 5.5. FM Radio

To use the FM Radio, connect wired earphones as they act as the antenna.

1. From the main menu, select 'Radio'.
2. The player will automatically scan for available stations.
3. Use the navigation buttons to tune to your desired station.

## 5.6. Voice Recorder


The built-in microphone allows for voice recordings.

1. From the main menu, select 'Record'.
2. Tap the record button to start and stop recording.
3. Recordings are saved to the device's internal storage or Micro SD card.

## 5.7. E-book Reader

View TXT format e-books on the device.

1. From the main menu, select 'E-book'.
2. Browse and select your desired TXT file.
3. Use the navigation controls to scroll through pages.

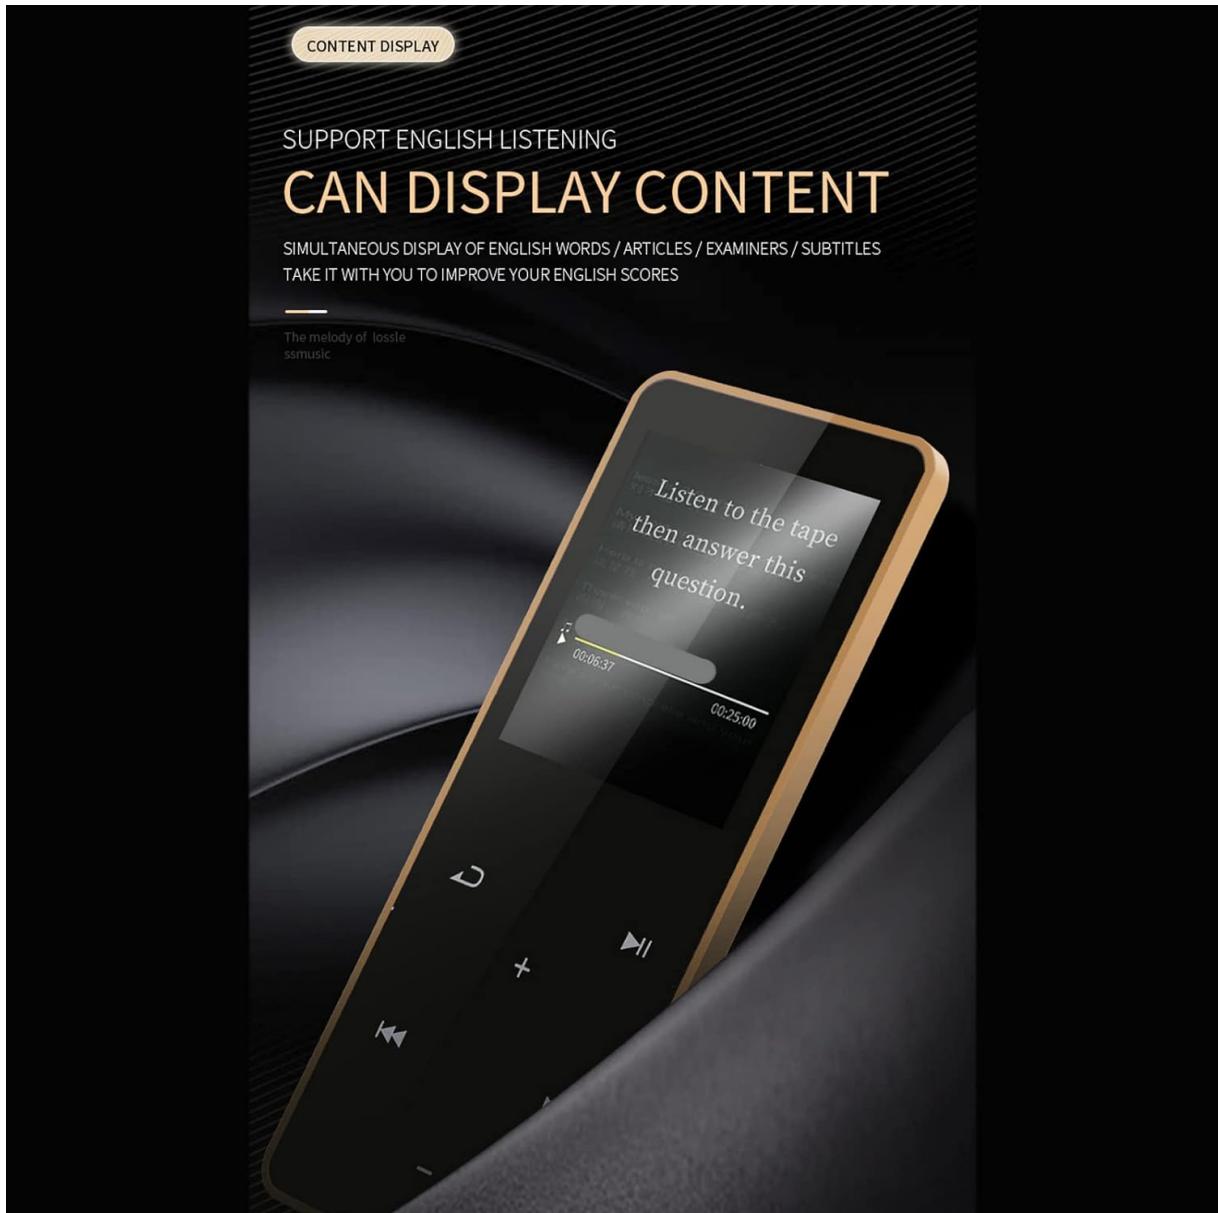

*Image: E-book reading feature with English content display.*

## 5.8. Video Playback and Image Viewer

The player supports video playback and image viewing (JPEG, BMP, GIF).

- Select 'Movie' or 'Photo' from the main menu.
- Browse your files and select to view.

## 6. MAINTENANCE

- Keep the device dry and clean. Avoid exposure to extreme temperatures.
- Use a soft, dry cloth to clean the screen and body. Do not use harsh chemicals.
- Protect the screen with the provided screen protectors.
- Use the clear protective case to prevent scratches and minor impacts.
- For optimal battery life, avoid fully discharging the battery frequently.

## 7. TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is charged. Connect to a power source and try again.
- **Cannot transfer files:** Ensure the USB cable is securely connected. Try a different USB port or cable. If using a Micro SD card, ensure it is properly inserted and not corrupted.
- **No sound:** Check the volume level. Ensure earphones are properly plugged in or Bluetooth device is correctly paired and connected.
- **Bluetooth not connecting:** Ensure Bluetooth is enabled on both the player and the audio device. Place devices close to each other and try re-pairing.
- **Screen unresponsive:** Try restarting the device by holding the Power/Lock button.

## 8. SPECIFICATIONS

Feature	Description
Model	Jectsee6gvakth98-11
Screen Size	1.8 Inches
Resolution	128x160 Pixels
Internal Memory	32 GB
Expandable Memory	Up to 128 GB (Micro SD card)
Connectivity	Bluetooth 5.0, USB-C
Battery	300mAh Lithium Battery
Battery Life (Music)	Up to 30 hours
Charging Time	Approx. 1.5 hours
Supported Audio Formats	MP1, MP2, MP3, WMA, WAV, OGG, APE, FLAC, AAC LC, ACELP
Supported Image Formats	JPEG, BMP, GIF
Supported E-book Format	TXT
Other Features	FM Radio, Voice Recorder, Video Playback, Games, Calendar, Stopwatch, Calculator
Item Weight	3.21 ounces
Package Dimensions	3.94 x 2.76 x 1.18 inches

## 9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided on the product packaging or visit the official Jectse website. Keep your purchase receipt for warranty claims.

