



Manuals.plus /

› Jectse /

› Jectse Digital Voice Recorder Watch (Model Jectsetqeg4s2wir-13) User Manual

Jectse Jectsetqeg4s2wir-13

Jectse Digital Voice Recorder Watch User Manual

Model: Jectsetqeg4s2wir-13

1. INTRODUCTION

Thank you for choosing the Jectse Digital Voice Recorder Watch. This device is designed for convenient and discreet audio recording, featuring voice activation, noise reduction, and timestamp capabilities. This manual provides essential information for the proper setup, operation, and maintenance of your new voice recorder watch.

2. PRODUCT OVERVIEW

Key Features:

- **Voice Activated Recording:** Automatically records when sound is detected and pauses when silent, conserving battery and memory.
- **Noise Reduction:** Built-in professional chip for clear audio capture.
- **Timestamp Function:** Records the exact start and end times of each recording for accurate referencing.
- **Rechargeable Battery:** Integrated 110mAh polymer lithium battery, supports recording while charging.
- **Long Battery Life:** Up to 20 hours of continuous recording and 30 days of standby time.
- **Memory Storage:** 32 GB internal memory.
- **Recording Format:** WAV.
- **Playback Formats:** MP3, WMA, WAV.

Package Contents:

- 1 x Voice Recorder Watch
- 1 x Charging Cable
- 1 x Earphone
- 1 x Instruction Manual (this document)
- 1 x Adapter Cable



With Timestamp
Accurate recording of each
recording data generation
time and end time
Ideal for electronic
commerce and legal forensics



Image 1: The Jectse Digital Voice Recorder Watch, showcasing its sleek design and the timestamp feature for accurate recording data generation.



Image 2: All items included in the package: the voice recorder watch, charging cable, earphone, and adapter cable.

3. SETUP

Initial Charging:

1. Before first use, fully charge the device.
2. Connect the provided charging cable to the watch's USB port.
3. Plug the other end of the charging cable into a USB power adapter (not included) or a computer's USB port.
4. The device will indicate charging status (e.g., an LED light). Allow sufficient time for a full charge.



Image 3: A detailed view of the USB charging port on the side of the voice recorder watch, with its protective cover open.

Connecting to a Computer:

To transfer recorded files or set the timestamp, connect the watch to your computer using the provided USB cable. The device will appear as a removable storage drive.

4. OPERATING INSTRUCTIONS

Power On/Off:

- To power on, locate the power button (refer to device diagram if available) and press and hold it until the indicator light activates.
- To power off, press and hold the power button again until the indicator light turns off.

Recording:

- Once powered on, the device is typically in standby mode, ready for voice-activated recording.
- When sound is detected, the recorder will automatically begin recording.
- When silence is detected, the recorder will automatically pause, saving memory and battery.
- Recordings are saved as WAV files.

Playback:

- Connect the provided earphone to the watch's earphone jack.
- Use the control buttons on the watch (refer to device diagram) to navigate through recordings and initiate playback.
- The device supports MP3, WMA, and WAV playback formats.

Timestamp Function:

The watch automatically embeds a timestamp into each recording, indicating the generation time and end time. To ensure accuracy, synchronize the watch's internal clock by connecting it to a computer. The computer's system time will typically update the device's timestamp.

Charging While Recording:

The device supports recording while connected to a power source, allowing for extended recording sessions.

5. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth.
- Avoid exposing the watch to extreme temperatures, direct sunlight, or moisture.
- Do not attempt to disassemble the device, as this will void the warranty and may cause damage.
- Store the device in a cool, dry place when not in use.

6. TROUBLESHOOTING

Device not turning on:

- Ensure the battery is charged. Connect to a power source and allow it to charge for at least 30 minutes.
- Press and hold the power button firmly for a few seconds.

Cannot record:

- Check if the device has sufficient memory. Transfer files to a computer to free up space if needed.
- Ensure the battery is not critically low. Charge the device.

Poor audio quality:

- Ensure the recording environment is not excessively noisy.
- Check if the microphone is obstructed.

Timestamp is incorrect:

- Connect the watch to a computer. The device's internal clock should synchronize with the computer's system time.

7. SPECIFICATIONS

Brand	Jectse
Model Number	Jectsetqeg4s2wir-13
Item Type Name	Digital Voice Recorders
Material	ABS
Recording Format	WAV
Playback Formats	MP3, WMA, WAV
Memory Storage Capacity	32 GB
Built-in Battery	110mAh Polymer Lithium Battery
Battery Average Life (Recording)	20 Hours
Standby Time	Up to 30 Days
Microphone Form Factor	Built-In
Microphone Operation Mode	Noise Cancellation
Hardware Interface	USB
Headphones Jack	Yes (via included earphone)

8. WARRANTY AND SUPPORT

Specific warranty details for the Jectse Digital Voice Recorder Watch are not provided in this manual. For information regarding warranty coverage, technical support, or service, please refer to the product packaging or contact the manufacturer directly through their official website or customer service channels.