

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux Pure Multi 700 Air Purifier EPU72571UG User Manual

Electrolux EPU72571UG

Electrolux Pure Multi 700 Air Purifier EPU72571UG User Manual

Model: EPU72571UG

Brand: Electrolux

1. PRODUCT OVERVIEW

The Electrolux Pure Multi 700 is a 2-in-1 connected air purifier and fan designed to provide advanced air filtration and comfortable airflow. Its innovative Pure2Me airflow system directs purified, fresh air where you need it, thanks to an adjustable hood and oscillating deflectors with three different options.

The 4-phase antibacterial/virus filtration system, including a pre-filter, HEPA filter, and active carbon filter, captures up to 99.97% of airborne particles as small as 0.3 microns, such as household dust, pet dander, and pollen. This system also neutralizes 99.99% of trapped bacteria and filters 99% of airborne viruses, contributing to a healthier home environment.

Control your home's air quality, adjust settings, and schedule operations from anywhere using the Electrolux app. The device can also connect to third-party internet-connected smart home devices. Enjoy purified air year-round, with a high-performance fan function for cooling in summer and purification without the fan in winter.



Réglage automatique

Lorsque le purificateur est en mode Smart, le système PureSense adapte la vitesse du ventilateur automatiquement

Figure 1: Electrolux Pure Multi 700 Air Purifier.

2. SETUP INSTRUCTIONS

2.1 Unpacking and Placement

- Carefully remove the air purifier from its packaging.
- Place the unit on a flat, stable surface. Ensure there is adequate space around the unit for optimal airflow. The recommended floor area for effective purification is 30 square meters.

2.2 Filter Installation

The Pure Multi 700 features a 4-phase filtration system. Ensure all filters are correctly installed before first use.

1. Open the filter compartment cover, typically located on the side or back of the unit.
2. Remove any protective packaging from the pre-filter, HEPA filter, and active carbon filter.

3. Insert the filters in the correct order as indicated by markings inside the compartment.
4. Close the filter compartment cover securely.



Figure 2: 4-Stage HEPA Filtration System. This filtration removes up to 99.97% of dust, pollen, and other pollutants down to 0.3 μm in size.

2.3 Power Connection

- Plug the power cord into a suitable electrical outlet.

2.4 App Connection

- Download the Electrolux app from your device's app store.
- Follow the in-app instructions to connect your air purifier to your home Wi-Fi network (2.4 GHz).

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

- Press the power button on the control panel or use the Electrolux app to turn the unit on or off.
-



Purifiez pendant votre sommeil

Le mode silencieux (20 dB*) permet de profiter d'un air plus sain pendant la nuit

*Son mesuré à la vitesse la plus faible du ventilateur et à 1 mètre du produit.

Figure 3: Control Panel.

3.2 Operating Modes

- **Smart Mode:** When in Smart mode, the PureSense system automatically adjusts the fan speed based on detected air quality.
- **Silent Mode:** For quiet operation, especially during the night, select Silent mode. The noise level is approximately 20 dB.
- **Fan Function:** The unit can operate as a fan, directing purified air towards you. Adjust the hood and oscillating deflectors for desired airflow direction.



Figure 4: Purify During Your Sleep. Silent mode (20 dB*) allows you to enjoy healthier air during the night.



Figure 5: Pure2Me System. With an adjustable air outlet and oscillating flaps, it directs a purified and refreshing airflow.

3.3 App Control

- Use the Electrolux app to monitor real-time air quality, change settings, set schedules, and receive notifications.
- The app allows for remote control and integration with other smart home systems.



Figure 6: Control via the App. Check your home's air quality, modify settings, and schedule via the Electrolux app.

4. MAINTENANCE

4.1 Filter Replacement

The air purifier's filters need regular replacement to maintain optimal performance. The Electrolux app will notify you when it's time to replace the filters.

- Turn off and unplug the unit before replacing filters.
- Open the filter compartment and remove the old filters.
- Dispose of old filters responsibly.
- Install new genuine Electrolux filters, ensuring they are correctly seated.
- Close the filter compartment.
- Reset the filter life indicator via the control panel or the app.

Spare parts are available for up to 10 years.



Un air plus sain

La haute filtration vous protège, vous et votre famille, contre 99% des virus et des bactéries*

*Filtre jusqu'à 99% des virus aéroportés et neutralise jusqu'à 99,99% des bactéries capturées. Testé sur Escherichia coli, Staphylococcus aureus, Klebsiella pneumoniae et Serratia marcescens selon les normes GB 21551.2-2010 Annexe B en 2021 et le virus de la grippe A H1N1 : A/PR/8/34 (ATCC VR - 1469) Cellule hôte : MDCK selon la norme ISO 18184: 2019 (E)

Figure 7: Healthier Air. High filtration protects you and your family against 99% of viruses and bacteria*.

4.2 Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- Periodically vacuum the pre-filter (if applicable and reusable) to remove larger dust particles.

5. TROUBLESHOOTING

If you encounter issues with your Electrolux Pure Multi 700, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unit does not turn on	No power supply	Check if the power cord is securely plugged into the outlet. Ensure the outlet is functional.
Poor air purification	Clogged or old filters	Check filter status via the app or unit indicator. Replace filters if necessary.
App connectivity issues	Wi-Fi signal weak or incorrect settings	Ensure your Wi-Fi network is 2.4 GHz. Restart your router and the air purifier. Re-pair the device in the app.
Unusual noise	Obstruction or loose part	Turn off and unplug the unit. Check for any foreign objects or loose components.

For further assistance, consult the Electrolux app or contact customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	EPU72571UG
Dimensions (L x W x H)	25.6 x 41 x 64.6 cm
Weight	9.8 Kilograms
Power Source	Corded Electric
Control Method	App, Voice Assistant
Filter Type	HEPA (4-phase filtration)
Floor Area Coverage	30 square meters
Noise Level	20 Decibels (in Silent Mode)
Filtration Capacity	99.97% of 0.3 micron particles
Special Features	Air Filter, Neutralizes Bacteria, Fan Function
Country of Origin	China
Spare Parts Availability	10 Years

7. WARRANTY AND SUPPORT

Electrolux products are manufactured to the highest quality standards and are covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions.

For technical support, spare parts, or service inquiries, please visit the official Electrolux website or contact your local Electrolux customer service center. Have your model number (EPU72571UG) and purchase details ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C4FKQJC8>

More documents and user manuals: <https://manuals.plus/>