

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AV:Link](#) /

› [AV:Link 8-in-1 Universal Remote Control User Manual \(Model 149.505UK\)](#)

AV:Link 149.505UK

AV:Link 8-in-1 Universal Remote Control User Manual

Model: 149.505UK

[Overview](#) [Setup](#) [Operation](#) [Introduction](#) [Product](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

Thank you for choosing the AV:Link 8-in-1 Universal Remote Control. This remote is designed to simplify your home entertainment experience by controlling up to eight different devices, including TVs, DVDs, Satellite receivers, and HiFi systems. This manual provides detailed instructions for setup, operation, and troubleshooting to ensure optimal performance.

2. PRODUCT OVERVIEW

The AV:Link 8-in-1 Universal Remote Control is a versatile device capable of replacing multiple original remote controls. Its ergonomic design and intuitive button layout make it easy to use.

2.1 Remote Control Layout



Image 1: Front view of the AV:Link 8-in-1 Universal Remote Control, showing all buttons and their labels. This image illustrates the general layout and design of the remote.

The remote features dedicated buttons for various functions and device types. Key sections include:

- **Device Selection Buttons:** TV, VCR, AUX, COM, DVD, HIFI, SAT, TNT (located at the top).
- **Power Button:** Located at the top right.
- **Numeric Keypad:** For channel selection and code entry (0-9, -, SUB).
- **Navigation and OK Buttons:** Central directional pad for menu navigation.
- **Volume and Channel Control:** Dedicated buttons for adjusting volume (+/- VOL) and changing channels (+/- CH).
- **Menu and Function Buttons:** MENU, TEXT, AV, BACK, EXIT, and colored function buttons (Red, Green, Yellow, Blue).
- **Sleep Button:** For setting a sleep timer.

3. SETUP

Before using your universal remote, you need to install batteries and program it to control your devices.

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA 1.5V batteries (not supplied), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



Image 2: Rear view of the remote control with the battery compartment open, showing where to insert two AAA batteries. This image helps users correctly install batteries.

Note: Always use new batteries and dispose of old batteries responsibly. If the remote is not used for an extended period, remove the batteries to prevent leakage.

3.2 Programming the Remote Control

The remote can be programmed using either manual code entry or an automatic search function. Refer to the included code list for your specific device brands.

3.2.1 Manual Code Entry

1. Turn on the device you wish to control (e.g., TV, DVD player).
2. Press and hold the corresponding device selection button (e.g., **TV**) for approximately 3 seconds until the indicator light illuminates.
3. Enter the 3-digit code for your device brand from the provided code list using the numeric keypad.
4. After entering the code, the indicator light will turn off.
5. Point the remote at your device and test its functions (e.g., Power, Volume, Channel). If the device responds correctly, the programming is complete.
6. If the device does not respond, repeat the process with the next code listed for your brand, or try the automatic search method.

3.2.2 Automatic Code Search

1. Turn on the device you wish to control.
2. Press and hold the corresponding device selection button (e.g., **TV**) for approximately 3 seconds until the indicator light illuminates.
3. Press the **SET** button (if available, otherwise refer to specific instructions for your model, often the Power button can

initiate search after holding device button). The indicator light will start flashing.

4. Point the remote at your device and repeatedly press the **POWER** button (or **CH+** button) slowly, pausing briefly after each press.
5. When your device turns off (or changes channel), immediately press the **OK** button to save the code. The indicator light will turn off.
6. Test the remote's functions. If successful, programming is complete. If not, repeat the automatic search, as you may have passed the correct code.

Important: The remote may not be compatible with certain Smart TV models.

4. OPERATING INSTRUCTIONS

Once programmed, operating your devices with the AV:Link universal remote is straightforward.



Image 3: A hand holding the AV:Link universal remote control, pointing it towards a television screen. This demonstrates the typical use of the remote for controlling a device.

- 1. Select Device:** Press the corresponding device selection button (e.g., **TV**, **DVD**) for the device you wish to control. The indicator light will briefly illuminate to confirm selection.
- 2. Power On/Off:** Press the **POWER** button to turn the selected device on or off.
- 3. Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the volume.

4. **Channel Control:** Use the **CH+** and **CH-** buttons to change channels.
5. **Numeric Input:** Use the numeric keypad (0-9) to directly enter channel numbers or other numerical inputs.
6. **Menu Navigation:** Use the **MENU** button to access device menus and the directional arrow buttons **UP, DOWN, LEFT, RIGHT** and **OK** button to navigate and confirm selections.
7. **Other Functions:** Utilize specific buttons like **TEXT, AV, BACK, EXIT**, and the colored function buttons as you would on your original remote.

5. MAINTENANCE

Proper care will extend the life of your universal remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Batteries:** Replace batteries when the remote's performance degrades or if the indicator light does not illuminate. Remove batteries if the remote will not be used for an extended period to prevent corrosion.
- **Avoid Drops:** Protect the remote from drops and impacts, which can damage internal components.

6. TROUBLESHOOTING

If you encounter issues with your AV:Link universal remote, try the following solutions:

Problem	Possible Cause	Solution
Remote does not work at all.	Dead or incorrectly inserted batteries.	Check battery polarity. Replace with new AAA batteries.
Remote controls some functions but not others.	Incorrect code programmed.	Try another code from the list for your device brand, or use the automatic search function.
Device does not respond to remote.	Remote not pointed correctly; Obstruction; Device not selected.	Ensure remote is pointed directly at the device's IR sensor. Remove any obstructions. Press the correct device selection button.
Automatic search passes the correct code.	Not pressing OK button fast enough.	Repeat the automatic search, pressing the OK button immediately when the device responds.
Remote does not control my Smart TV.	Compatibility limitation.	The remote may not be compatible with certain Smart TV models as stated in the product features.

7. SPECIFICATIONS

- **Model Number:** 149.505UK
- **Brand:** AV:Link
- **Color:** Black
- **Connectivity Technology:** Infrared (IR)
- **Special Feature:** Universal, 8-in-1 control
- **Compatible Devices:** TV, DVD, SAT, HiFi, VCR, AUX, COM, TNT (up to 8 devices)

- **Number of Buttons:** 20
- **Controller Type:** Button control
- **Maximum Range:** 10 meters
- **Power Source:** 2 x AAA 1.5V batteries (not supplied)
- **Dimensions:** 175 x 45 x 18 mm
- **Weight:** 55 g

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

For further assistance, you may visit the AV:Link official website or contact their customer service department.

© 2023 AV:Link. All rights reserved.