

SMAEL B0CQ2CC67H

SMAEL Men's Outdoor Sport Waterproof Wristwatch Instruction Manual

Model: B0CQ2CC67H

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your SMAEL Men's Outdoor Sport Waterproof Wristwatch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

PRODUCT OVERVIEW

The SMAEL Sport Watch features a dual-time display, LED backlight, stopwatch, alarm, and is designed for outdoor activities with its water-resistant and shockproof construction. It combines a Japanese quartz movement for analog time with a digital movement for additional functions.



Image: Front view of the SMAEL Men's Outdoor Sport Waterproof Wristwatch, showcasing its analog and digital displays, and control buttons.

Key Features:

- Dual Time Display (Analog and Digital)
- LED Backlight Function
- Stopwatch
- Alarm
- 12/24 Hour Time Format
- Calendar (Date, Day of Week)
- 50M Water Resistance
- Shockproof Design
- Durable TPU Strap

SETUP

Setting Analog Time:

1. Pull out the crown (the knob on the right side of the watch) to the first position.
2. Rotate the crown to adjust the hour and minute hands to the desired time.
3. Push the crown back in to secure the time setting.

Setting Digital Time and Date:

The digital display is controlled by the four buttons around the watch case. Refer to the watch diagram for button identification (typically: LIGHT, MODE, START, RESET).

1. Press the **MODE** button repeatedly to cycle through the different digital modes: Time Display → Stopwatch → Alarm → Time Setting.
2. When in the Time Setting mode (often indicated by flashing digits), press the **RESET** button to select the digit you wish to adjust (seconds, minutes, hours, month, date, day of week).
3. Use the **START** button to increase the selected digit.
4. Press the **MODE** button to exit the setting mode and save your changes.
5. To switch between 12-hour and 24-hour format, while in the normal time display mode, press the **START** button.

OPERATING INSTRUCTIONS

Using the LED Backlight:

Press the **LIGHT** button (usually top-left) to illuminate the digital display for a few seconds.

Using the Stopwatch:

1. Press the **MODE** button until the stopwatch display appears (usually 00:00:00).
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to zero.
5. To resume timing after pausing, press the **START** button.

Setting and Using the Alarm:

1. Press the **MODE** button until the alarm setting display appears (often indicated by "AL" or a bell icon).
2. Press the **RESET** button to select the hour or minute digits.
3. Use the **START** button to adjust the alarm time.
4. Press the **MODE** button to exit the alarm setting mode.
5. To turn the alarm on or off, while in the alarm display mode, press the **START** button. An alarm icon will typically appear or disappear to indicate its status.
6. When the alarm sounds, press any button to stop it.

WATER RESISTANCE GUIDELINES

This watch is rated for 50 meters (5 ATM) water resistance. This means it is suitable for everyday use, splashes, rain, and short periods of recreational swimming. It is **not** suitable for diving, snorkeling, or high-pressure water activities.

- **Do not** press any buttons while the watch is submerged in water.
- Avoid exposing the watch to hot water or steam (e.g., hot showers, saunas), as this can compromise the waterproof seals.

- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.

MAINTENANCE

Cleaning:

Wipe the watch case and strap regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or solvents.

Battery Replacement:

The watch uses a long-life battery. When the display dims or the watch stops functioning, it indicates a low battery. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

Storage:

Store your watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not keeping accurate time (digital)	Incorrect time setting; low battery.	Re-set the digital time. If problem persists, consider battery replacement.
Watch not keeping accurate time (analog)	Crown not fully pushed in; low battery.	Ensure crown is fully pushed in. If problem persists, consider battery replacement.
Digital display is dim or blank	Low battery.	Replace the battery.
Buttons are unresponsive	Watch may be in a locked mode; internal malfunction.	Try pressing the MODE button repeatedly to cycle through modes. If unresponsive, consult a technician.
Moisture inside the watch	Water resistance compromised; exposure to steam/hot water.	Immediately take the watch to a qualified technician for inspection and repair to prevent further damage.

SPECIFICATIONS

- **Brand:** SMAEL
- **Model:** B0CQ2CC67H
- **Movement:** Japan Original Digital Movement & Quartz Movement
- **Water Resistance:** 50M (5 ATM)
- **Strap Material:** TPU
- **Clasp Type:** Hook Buckle
- **Display:** Analog and Digital (LED Backlight)
- **Functions:** Dual Time, Stopwatch, Alarm, 12/24H Time, Calendar

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.



Image: The SMAEL watch worn on a wrist, demonstrating its fit and style during outdoor use.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question