

Cyrank Cyrank4vzubh0rs9

Cyrank Double-Sided Diamond Knife Sharpener (400/600 Grit) Instruction Manual

Model: Cyrank4vzubh0rs9

INTRODUCTION

Thank you for choosing the Cyrank Double-Sided Diamond Knife Sharpener. This compact and versatile sharpening tool is designed to maintain the sharpness of various blades, including kitchen knives, garden tools, and outdoor equipment. Featuring two diamond-electroplated surfaces with different grits, it provides efficient and effective sharpening for both coarse edge setting and fine honing. Please read this manual carefully to ensure proper use and longevity of your sharpener.

PRODUCT OVERVIEW

The Cyrank Double-Sided Diamond Knife Sharpener is a portable, foldable tool featuring two distinct diamond grit surfaces for comprehensive blade maintenance.

- **Double-Sided Sharpening:** Equipped with a coarse 400 grit (38 micron) side for quick edge setting and a fine 600 grit (23 micron) side for honing and refining the blade.
- **Portable Design:** Its lightweight and foldable structure makes it ideal for outdoor activities and easy storage. The closed length is approximately 12.5 cm, and the unfolded length is about 23 cm.
- **Durable Material:** Features diamond-electroplated surfaces for efficient and sharp results, outperforming conventional sharpening stones.
- **Versatile Application:** Suitable for sharpening metal knives, ceramic knives, scissors, and various outdoor, garden, and agricultural tools.



Image: The Cyrank Double-Sided Diamond Knife Sharpener in its unfolded state, displaying the orange handle and the diamond-coated sharpening surface. This view highlights the tool's readiness for use.



Lightweight and foldable, easy to carry
The closed length is 12.5cm, and the
expanded length is about 23cm.



Image: A detailed view of the sharpener's diamond surfaces, clearly indicating the 400 and 600 grit markings. The image

also illustrates the sharpener in both its compact, folded form and its extended, ready-to-use configuration, emphasizing its dual-grit functionality and portability.

SETUP

The Cyrank Diamond Knife Sharpener is designed for immediate use with minimal setup.

1. **Unfold the Sharpener:** Gently unfold the orange handles until the diamond sharpening plate is fully extended and locked into position. The sharpener should be stable and rigid when open.
2. **Identify Grits:** Observe the markings on the diamond plate. One side is typically marked '400' for coarse sharpening, and the other '600' for fine honing.
3. **Prepare Your Blade:** Ensure the blade you intend to sharpen is clean and free of debris.

OPERATING INSTRUCTIONS

Follow these steps to effectively sharpen your tools using the Cyrank Double-Sided Diamond Knife Sharpener.

General Sharpening Guidelines:

- No oil is needed; you can sharpen dry or with a small amount of water. Water can help clear away metal particles and keep the stone clean.
- Maintain a consistent angle throughout the sharpening process. The ideal angle varies by blade type (e.g., kitchen knives often 15-20 degrees per side, outdoor tools may be steeper).

Sharpening Process:

1. **Coarse Sharpening (400 Grit):** If your blade is very dull, chipped, or requires significant reshaping, begin with the 400 grit side. Place the blade edge against the 400 grit surface at your desired sharpening angle. Using light to moderate pressure, push the blade across the sharpener, moving from the heel to the tip. Repeat this motion, alternating sides of the blade, until a burr forms along the opposite edge.
2. **Fine Honing (600 Grit):** Once a burr is established, switch to the 600 grit side. This side is used to refine the edge, remove the burr, and achieve a sharper finish. Use lighter pressure and repeat the same heel-to-tip motion, alternating sides. Continue until the edge feels smooth and sharp.
3. **Check Sharpness:** Carefully test the sharpness of your blade. If not sufficiently sharp, repeat the fine honing steps.



Simple operation and effective polishing
The sharpening of the diamond surface
is reliable and durable.



Image: A user demonstrating the sharpening process with a kitchen knife on the Cyrank Diamond Sharpener. This image illustrates the proper hand placement and angle for effective blade sharpening.

MAINTENANCE

Proper care will extend the life and effectiveness of your diamond sharpener.

- **Cleaning:** After use, especially if using water, rinse the diamond surface with clean water to remove any metal particles or residue. You can use a soft brush if necessary.
- **Drying:** Ensure the sharpener is completely dry before folding and storing to prevent rust or damage.
- **Storage:** Fold the sharpener for compact storage. Store it in a dry place, away from extreme temperatures and direct sunlight.

SAFETY INFORMATION

Always exercise caution when handling sharp objects and sharpening tools.

- Keep fingers away from the blade edge during sharpening.
- Ensure a stable grip on both the sharpener and the blade to prevent slips.
- Keep out of reach of children.
- Do not use excessive force, as this can damage the blade or the sharpener.

SPECIFICATIONS

Feature	Detail
Brand	Cyrank
Model Number	Cyrank4vzubh0rs9
Material	Diamond-electroplated surface
Grit Sizes	400 Grit (Coarse), 600 Grit (Fine)
Closed Length	Approximately 12.5 cm
Unfolded Length	Approximately 23 cm
Product Dimensions	13 x 3 x 2 cm (folded)
Item Weight	60 g (0.06 Kilograms)

SUPPORT

For any questions or assistance regarding your Cyrank Double-Sided Diamond Knife Sharpener, please refer to the retailer or manufacturer's customer support channels.