

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Mr IRONSTONE](#) /
- › Mr IRONSTONE L Shaped Desk with Power Outlets & LED Lights User Manual

Mr IRONSTONE CD04RB

Mr IRONSTONE L Shaped Desk with Power Outlets & LED Lights User Manual

Model: CD04RB

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Mr IRONSTONE L Shaped Desk with Power Outlets & LED Lights. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

SAFETY INFORMATION

Always assemble the desk according to the instructions provided. Do not exceed the weight limit of 300 lbs. Ensure the desk is stable and properly anchored to the floor to prevent tipping. Keep the workspace clear of obstacles to prevent accidents.

WHAT'S IN THE BOX

- L Shaped Computer Desk (all required components)
- All necessary assembly tools
- Power Outlet with 2 AC outlets & 2 USB ports
- LED Light Strip with remote control
- Fabric Storage Bag
- Monitor Stand components



Image: Illustration of the main components included in the package.

ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to have two people for assembly to ensure stability and ease of construction. Please refer to the assembly video for visual guidance.

Your browser does not support the video tag.

Video: Step-by-step assembly guide for the Mr IRONSTONE L Shaped Computer Desk (Model CD04).

- Step 1: Assemble Leg Frames**
Attach two Support Bars (H and I) to Leg Frames (J and K) using Screws (1). Tighten screws to 50% before all steps are finished.
- Step 2: Attach Storage Shelves**
Attach two Storage Shelves (L) to Leg Frames (H and I) using Screws (3).
- Step 3: Attach Support Bar (F)**
Attach two Support Bars (F) to the Leg Frames using Screws (8).
- Step 4: Attach Short Bar (E)**
Attach the Short Bar (E) to the Leg Frame (C) using Screws (1).
- Step 5: Attach Connecting Bars**
Attach two Upper Connecting Bars (D1, D2) and Bottom Connecting Bar (G) to the Leg Frames using Screws (1).
- Step 6: Attach Frame to Storage Shelf**
Attach the main frame to the storage shelf using Screws (1) and (8).
- Step 7: Attach Additional Support Bars (F)**
Attach two more Support Bars (F) to the Leg Frames using Screws (8).
- Step 8: Connect Desktop Boards**
Connect Desktop Board (A) and Side Desktop Board (B) with Wood Dowel (4). Use Hole Stickers (6) on the holes of the side. Ensure the desktop boards are seamless.
- Step 9: Fix Desk Board and Leg Frame**
Fix the Desk Board and Leg frame with Screws (2). Attach six Feet (5) as shown, then tighten all screws to 100% tightness.
- Step 10: Attach Power Outlet**
Attach the Power Outlet (9) with Screws (7).
- Step 11: Connect Monitor Stand Boards**
Connect Long Stand Board (M) and Short Stand Board (N) with Wood Dowel (4). Stick up Hole Stickers (6) on the holes of the side.
- Step 12: Attach Monitor Shelf Brackets**
Attach two Monitor Shelf Bracket (O) to Stand Connecting Bar (P) with Screws (1) and tighten the screws to 50% tightness.
- Step 13: Fix Monitor Stand and Stand Board**

Fix Monitor Stand and Stand Board (M) & (N) with Screws (3). Attach two Monitor Shelf Brackets (O) to Short Monitor Stand (N) with Screws (3), then tighten all screws to 100% tightness.

14. Step 14: Attach LED Light Strip

Tear off the sticker of the LED Light strip (11) and stick the Led light strip to the Monitor Stands. Then attach 4 Plastic Pieces (10) to the Monitor Stand by using screws (7).



Image: The L-shaped desk with its reversible design, allowing the shelving unit to be placed on either the left or right side.

OPERATING INSTRUCTIONS

LED Strip & Power Outlet

The desk features a built-in LED strip and power outlet for enhanced functionality. The LED strip offers multiple RGB colors and various modes, controllable via a smart remote. The power outlet includes 2 AC outlets and 2 USB ports for convenient charging of your devices.

- **LED Control:** Use the provided remote control to select RGB colors, adjust modes (e.g., jump, flash, fade, constant), and set timer functions.

- **Power Outlets:** Plug in your laptop, tablet, smartphone, or other electronic devices into the 125V/12A AC outlets or 5V/2.1A USB ports.



Reversible **Corner Desk**

Install the shelves on the left or right of your preference

Image: Detail of the integrated power outlet with USB ports on the desk surface.



Image: Overview of the LED lighting features, including color options, dynamic modes, brightness levels, and flicker frequencies, controlled by a remote.

Reversible Shelves

The L-shaped desk features a reversible design, allowing the shelving units to be installed on either the left or right side. This flexibility helps maximize space utilization in various room configurations.



Image: The L-shaped desk with its reversible design, allowing the shelving unit to be placed on either the left or right side.

Monitor Stand

The integrated monitor stand provides an elevated surface for your display, promoting a comfortable viewing posture and saving valuable desktop space. It is designed to accommodate multiple monitors.

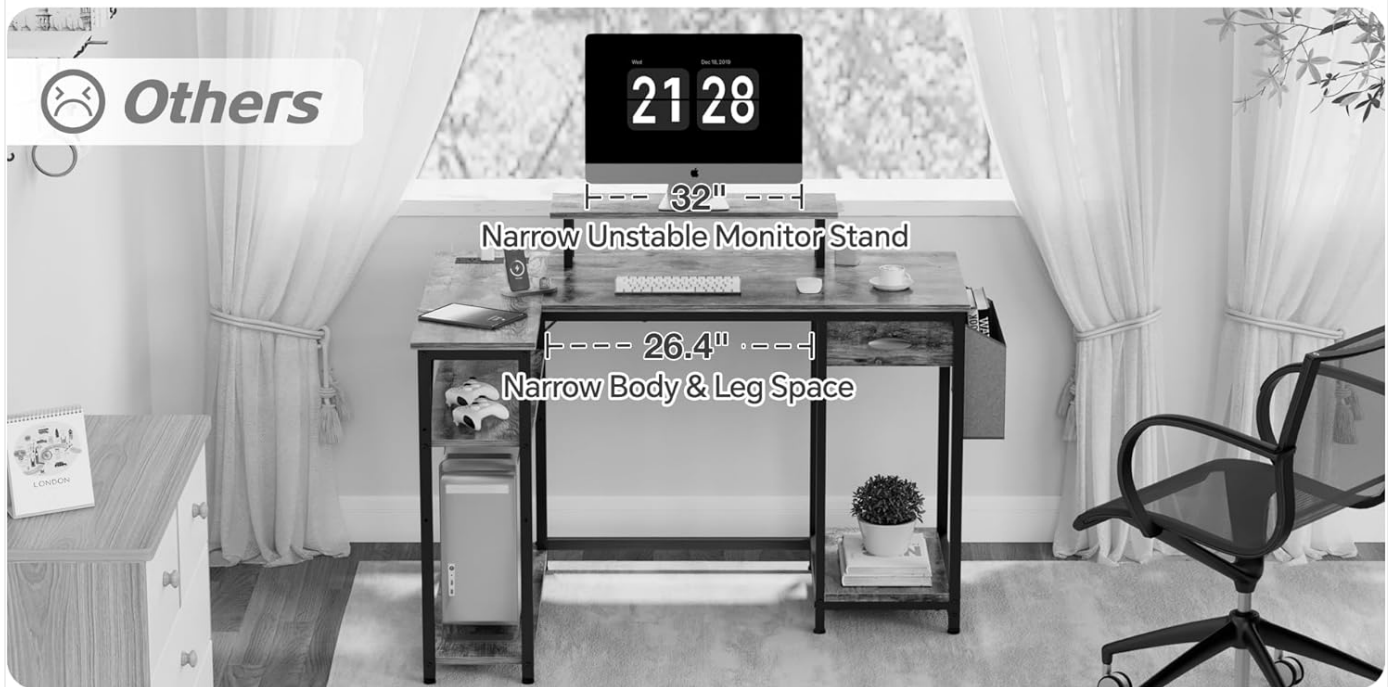


Image: Illustration demonstrating the ergonomic advantages of using the monitor stand for improved posture.

MAINTENANCE

- **Cleaning:** Wipe the desk surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Stability Check:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary to maintain desk stability.
- **LED Care:** Keep the LED strip free from dust. If the remote control is not working, check the battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Desk is wobbly/unstable	Screws are loose; uneven floor.	Ensure all assembly screws are fully tightened. Adjust the non-slip foot pads to level the desk on uneven surfaces.
LED lights not working	Power connection issue; remote battery dead; LED strip damaged.	Check if the power outlet is plugged in and receiving power. Replace the remote control battery. If issues persist, contact customer support.
Power outlets not functioning	Desk power cord not plugged in; circuit breaker tripped.	Ensure the desk's power cord is securely plugged into a working wall outlet. Check your home's circuit breaker.

SPECIFICATIONS

Feature	Detail
Brand	Mr IRONSTONE
Model Number	CD04RB
Product Dimensions	32.48"D x 46.46"W x 31.35"H
Color	Rustic Brown
Style	Modern
Base Material	Metal
Top Material Type	Engineered Wood
Maximum Weight Recommendation	300 Pounds
Power Outlet	2 AC Outlets (125V/12A), 2 USB Ports (5V/2.1A)
Power Cord Length	6.7 FT
Special Features	Monitor Stand, Reversible Storage Shelves, Built-in Outlet, Built-In USB Outlet, Fabric Storage Bag, LED Lights

WARRANTY AND SUPPORT

Mr IRONSTONE offers a **3-year warranty** on this product. Your satisfaction is our top priority. For any issues regarding product quality or problems during use, please contact our professional customer service team. We provide 24/7 all-weather service to ensure you receive satisfactory assistance.

Contact information can typically be found on the product packaging or the official Mr IRONSTONE website.