

[Manuals.plus](#) /

› [Dinosoo](#) /

› Dinosoo RGB Wireless Controller 133-US1 User Manual for PlayStation 4, PlayStation 5, and PC

Dinosoo 133-US1

Dinosoo RGB Wireless Controller 133-US1 User Manual

For PlayStation 4, PlayStation 5, and PC

INTRODUCTION

This manual provides detailed instructions for the Dinosoo RGB Wireless Controller, model 133-US1. Please read this manual carefully before using the product to ensure proper operation. This controller is compatible with PlayStation 4, PlayStation 5, and PC platforms.

PACKAGE CONTENTS

- Dinosoo RGB Wireless Controller
- 2.4G Wireless Adapter
- USB Charging Cable
- User Manual (this document)

CONTROLLER LAYOUT

Familiarize yourself with the buttons and features of your Dinosoo RGB Wireless Controller.



Image: Front view of the Dinosoo RGB Wireless Controller in black, showing illuminated buttons and joysticks, alongside its 2.4G wireless adapter.

- **Share Button:** Located on the top left, used for sharing gameplay.
- **Options Button:** Located on the top right, used for in-game menus and options.
- **Touchpad:** Central interactive surface.
- **Directional Pad (D-Pad):** Left side, for directional input.
- **Action Buttons (Triangle, Circle, Cross, Square):** Right side, for primary actions.
- **Left/Right Analog Sticks:** For precise movement and camera control.
- **PS Button:** Central button, for accessing the console's home menu.
- **L1/R1 Buttons:** Shoulder buttons.
- **L2/R2 Triggers:** Analog triggers.
- **3.5mm Headphone Jack:** For audio output.
- **USB-C Port:** For charging and wired connection.

SETUP AND CONNECTION

Initial Charging

Before first use, fully charge the controller. Connect the supplied USB charging cable to the controller's USB-C port and the other end to a USB power source (e.g., console, PC, USB wall adapter). The controller's indicator light will show charging status and turn off when fully charged. A full charge takes approximately 2-3 hours and provides 8-10 hours of

gameplay.



Image: Diagram illustrating the controller's 1000 mAh battery capacity, 2-3 hours charging time, and 12-15 hours game time. Please note, actual game time may vary, with typical usage around 8-10 hours.

Connecting to PlayStation 4/5 (Wireless)

1. Ensure the controller is powered off.
2. Press and hold the **Share** button, then press and hold the **PS** button simultaneously for approximately 3 seconds until the light bar begins to flash rapidly. This indicates pairing mode.
3. On your PlayStation console, navigate to **Settings** > **Devices** > **Bluetooth Devices**.
4. Select the "Wireless Controller" from the list of available devices.
5. Once connected, the light bar will stop flashing and glow a steady color.

Connecting to PC (Wireless via 2.4G Adapter)

1. Plug the 2.4G wireless adapter into an available USB port on your PC.
2. Ensure the controller is powered off.

3. Press and hold the **PS** button on the controller until it powers on and attempts to connect.
4. The controller should automatically pair with the adapter. The indicator light on the controller will become solid when connected.
5. *Note:* For some games or platforms, additional driver installation or configuration may be required.

Connecting to PC (Wired)

Connect the controller to your PC using the supplied USB charging cable. The controller will be recognized as a gamepad. This method supports Windows systems.

OPERATING INSTRUCTIONS

RGB Lighting Adjustment

The controller features adjustable RGB lighting with seven color options and three modes:

- **Breathing Light Mode:** Colors cycle and fade in/out.
- **Long Bright Mode:** A single color remains steadily lit.
- **No Light Mode:** Lighting is turned off.

Refer to the controller's specific button combinations (usually a combination of the PS button and another button, or a dedicated button) to cycle through colors and modes. Consult the quick start guide included with your controller for exact button presses.

Turbo Function

The Turbo function allows for rapid, repeated input of a button press, useful in certain gaming scenarios.



Image: Diagram showing the Turbo button (T) and its interaction with other buttons (R1, L1, R2, L2) to activate rapid-fire mode at different speeds (5/s, 12/s, 20/s). To activate Turbo for a specific button (e.g., R1):

1. Press and hold the **Turbo (T)** button.
2. While holding **T**, press the desired action button (e.g., **R1**).
3. Release both buttons. The selected button now has Turbo enabled.

To adjust Turbo speed or deactivate, repeat the process or consult the quick start guide for specific instructions.

Other Functions

- **Dual Vibration Motors:** Provides haptic feedback during gameplay.
- **Touchpad:** Functions as an interactive input surface, similar to the original console controller.
- **Integrated Light Bar:** Displays various statuses (e.g., player indicator, charging).
- **Speaker:** Outputs in-game audio effects.
- **3.5mm Stereo Headphone Jack:** Connect compatible headphones for audio and microphone use.
- **Six-axis Sensors:** Provides motion sensing capabilities for games that utilize tilt and rotation.

MAINTENANCE

Charging

To maintain battery health, avoid completely draining the battery frequently. Charge the controller when the low battery indicator appears. Use only the provided USB cable or a certified equivalent.

Cleaning

Wipe the controller with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners. Avoid getting moisture into ports or openings.

Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to approximately 50% every few months to prevent deep discharge.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not power on.	Low battery.	Charge the controller for at least 30 minutes.
Cannot connect wirelessly.	Not in pairing mode; interference; console/PC Bluetooth issue.	• Ensure controller is in pairing mode (Share + PS button). • Move closer to the console/PC. • Restart the console/PC and try pairing again. • Try a wired connection to confirm functionality.
Buttons or joysticks are unresponsive.	Software glitch; physical damage; dirt.	• Restart the controller and console/PC. • Ensure the controller is fully charged. • Clean around the buttons/joysticks. • If issues persist, contact customer support.
RGB lights are not working as expected.	Incorrect mode selected; software issue.	• Cycle through RGB modes and colors using the designated buttons. • Restart the controller.

SPECIFICATIONS

Feature	Detail
Model Number	133-US1
Brand	Dinosoo
Connectivity	Wireless (Bluetooth, 2.4G Adapter), Wired (USB)
Compatible Devices	PlayStation 4, PlayStation 5, PC (Windows), Steam Deck

Feature	Detail
Battery Capacity	1000 mAh
Charging Time	Approx. 2-3 hours
Operating Time	Approx. 8-10 hours
Special Features	Adjustable RGB Lights, Dual Vibration, Touchpad, Integrated Light Bar, Speaker, 3.5mm Headphone Jack, Six-axis Sensors, Turbo Function
Item Weight	10 ounces (approx. 283 grams)
Package Dimensions	1 x 1 x 1 inches (approximate)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Dinosoo website. If you encounter any issues that cannot be resolved using this manual, please contact Dinosoo customer service for assistance.

Contact Information: Please refer to your product packaging or the Dinosoo official website for the most up-to-date contact details.



Image: Graphic indicating customer support availability and quality assurance from Dinosoo.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question