

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [ALLIMITY](#) /

> [ALLIMITY Replacement Remote Control User Manual \(Model: QYSY-PSGA-H-QYSY\) for RCA HKC HD TVs](#)

## ALLIMITY QYSY-PSGA-H-QYSY

# ALLIMITY Replacement Remote Control User Manual

Model: QYSY-PSGA-H-QYSY

### INTRODUCTION

This manual provides comprehensive instructions for the ALLIMITY Replacement Remote Control, designed to operate various RCA and HKC HD TV models. This remote functions as a direct replacement, offering all the features of your original remote without the need for complex programming.

### PRODUCT OVERVIEW

The ALLIMITY replacement remote control is designed for ease of use and immediate functionality. Below are images illustrating the remote's layout and key buttons.





Image 1: Front view of the ALLIMITY Replacement Remote Control. This image displays the full button layout, including power, number keys, volume, channel, menu, navigation, and special function buttons.





Image 2: Angled view of the ALLIMITY Replacement Remote Control, highlighting its ergonomic design and button placement for comfortable use.

## SETUP

1. **Insert Batteries:** Open the battery compartment cover on the back of the remote control. Insert two AAA alkaline batteries, ensuring correct polarity (+ and -).
2. **Close Compartment:** Replace the battery compartment cover securely.
3. **No Programming Required:** This remote control is pre-programmed and ready to use immediately with compatible RCA and HKC HD TV models. No additional setup or code entry is necessary.

## OPERATING INSTRUCTIONS

Familiarize yourself with the remote's buttons for optimal control of your television.

- **Power Button (●):** Press to turn your TV on or off.
- **Number Buttons (0-9):** Use to directly select channels.
- **Volume Up/Down (VOL +/-):** Adjust the sound level.
- **Channel Up/Down (CH +/-):** Change TV channels sequentially.
- **MENU:** Access the TV's main menu.
- **INPUT:** Select different input sources (HDMI, AV, etc.).
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigate through menus and confirm selections.
- **BACK/EXIT:** Return to the previous screen or exit the current menu.
- **GUIDE:** Access the electronic program guide (if supported by your TV).
- **LIST:** View a list of channels or recorded programs.
- **AUDIO:** Change audio tracks or modes.
- **ASPECT:** Adjust the screen aspect ratio.
- **Color Buttons (Red, Green, Yellow, Blue):** These buttons perform specific functions depending on the TV menu or application.

## MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always use new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.

## TROUBLESHOOTING

- **Remote not working:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Make sure you are within the effective operating range (up to 10 meters).
- **Some buttons are unresponsive:**

- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
- If the issue persists after replacing batteries, the remote may require replacement.
- **TV not responding to remote:**
  - Verify that your TV model is listed as compatible.
  - Ensure the TV's power is on.
- **Remote range is limited:**
  - Replace batteries.
  - Ensure no strong light sources (like direct sunlight) are interfering with the IR signal.

## SPECIFICATIONS

- **Brand:** ALLIMITY
- **Model Name:** QYSY-PSGA-H-QYSY
- **Connectivity Technology:** Infrared
- **Color:** Black
- **Special Feature:** Ergonomic design
- **Maximum Range:** 10 Meters
- **Number of Buttons:** 40
- **Compatible Devices:** RCA HKC HD TV models including 13M4, 13M4C, 16M4, 16M4C, 17H2, 32C1NHD-T2, 17H2C, 24C2NB, 24C2NBD, 32C9A, 32D1-H2EU, 40F1, 43F3, 43F6, 50F1, R40F1FHD-EU, RB24H1-UK, RB32H1-EU, RB40F1-EU, RS43F1-EU, RS50U1-EU, RS55U1-EU, RS65U1-EU, and others listed in product description.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's policy or contact the point of purchase. Keep your purchase receipt for any warranty claims.