

## LEIKE B0C4GYKDHR

# LEIKE Alarm Clock Radio User Manual

Model: B0C4GYKDHR

Brand: LEIKE

## INTRODUCTION

Thank you for purchasing the LEIKE Alarm Clock Radio. This device is designed to provide a comprehensive bedside experience, combining a digital alarm clock with FM radio, sleep sound machine, and adjustable RGB lighting. It features dual alarms, a snooze function, and convenient USB charging ports. Please read this manual carefully to ensure proper use and maintenance of your new alarm clock.



Figure 1: LEIKE Alarm Clock Radio, showcasing its digital display and vibrant RGB light base.

## PRODUCT OVERVIEW

### Key Features

- Dual Alarm Clock with everyday, weekday, and weekend settings.
- FM Radio functionality.
- Sleep Timer for automatic shut-off.
- 12/24 Hour Time Display Setting.
- Two USB Charging Ports for external devices.
- Integrated Night Light with dynamic RGB adjustable colors (5 single & 3 RGB colors).
- 9-minute Snooze Function.
- Adjustable Volume Control.
- Sleep Sound Machine with various natural sounds (Rain, Bird, River, Cricket, Seagulls, Frogs, Campfire, Wind, FM Radio Chimes).
- 0-100% LED Adjustable Light for display brightness.

# 8 in1 Multifunctional radio alarm clock



Figure 2: Overview of the 8-in-1 multifunctional features, including dual alarm, FM radio, sleep timer, USB charging, and more.



Figure 3: The sleep music machine feature, offering a variety of natural and soothing sounds for gentle awakening or relaxation.

## SETUP

Follow these steps to set up your LEIKE Alarm Clock Radio:

1. **Unpack:** Carefully remove the alarm clock, data line (USB cable), and power adapter from the packaging.
2. **Placement:** Place the alarm clock on a stable, flat surface such as a bedside table or desk. Ensure it is away from direct sunlight, heat sources, and excessive moisture.
3. **Connect Power:** Connect the data line to the alarm clock's power input port. Then, connect the other end of the data line to the provided power adapter. Plug the power adapter into a standard electrical outlet. The display should illuminate.
4. **Initial Time Setting:** Upon first power-up, the clock display may flash or show a default time. Refer to the "Operating Instructions" section to set the correct time.



Figure 4: Contents of the product package, showing the alarm clock, data line, and power adapters.

## OPERATING INSTRUCTIONS

### Setting the Time

Press the "Time Set" button (usually indicated by a clock icon) to enter time setting mode. Use the "+" and "-" buttons to adjust hours and minutes. Press "Time Set" again to confirm each step. You can also switch between 12-hour and 24-hour formats.

### Setting Alarms

This device supports dual alarms. Press the "Alarm 1" or "Alarm 2" button to activate and set the respective alarm. Use the "+" and "-" buttons to set the desired alarm time. You can choose between everyday, weekday, or weekend alarm settings. Press the alarm button again to confirm.



Figure 5: Illustration of the dual alarm clock settings and the 9-minute snooze function.

## Snooze Function

When the alarm sounds, press the "Snooze" button (often a large button on top) to temporarily silence the alarm for 9 minutes. The alarm will sound again after the snooze period.

## FM Radio Operation

Press the "FM" button to turn on the radio. Use the "Tune" or "+"/"/" buttons to scan for stations. Press and hold to auto-scan and save available stations. Adjust volume using the volume control buttons.

## Sleep Timer

Activate the sleep timer function to automatically turn off the radio or sleep sounds after a set period. Press the "Sleep Timer" button repeatedly to cycle through available timer durations (e.g., 15, 30, 60, 90 minutes).

## Night Light and RGB Colors

Press the "Light" or "RGB" button to cycle through different night light colors and modes. This includes 5 single colors and 3 RGB color modes. You can also adjust the brightness of the display and night light from 0% to 100% using dedicated dimming buttons.

# Dynamic RGB Adjustable Colors

## 5 single & 3 RGB colors night light and time display



Figure 6: Examples of dynamic RGB adjustable colors for the night light and time display, offering various aesthetic options.

# 0-100% LED Adjustable light

## No more disturbing your sweet dreams at night



Figure 7: Demonstration of the 0-100% LED adjustable light feature, allowing users to set the display brightness to their preference.

### Sleep Sound Machine

Press the "Sound" or "Nature Sound" button to activate the sleep sound machine. Cycle through various built-in sounds like rain, bird, river, and more. Adjust the volume as needed.

### USB Charging Ports

The two USB ports on the back of the unit can be used to charge your mobile devices. Simply connect your device's USB charging cable to one of the ports.

## MAINTENANCE

To ensure the longevity and optimal performance of your LEIKE Alarm Clock Radio, follow these maintenance guidelines:

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the exterior of the unit. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- **Dust:** Regularly dust the unit, especially around buttons and display areas, to prevent accumulation.
- **Liquid Exposure:** Avoid exposing the unit to water or excessive moisture. If liquid spills on the unit,

immediately unplug it and allow it to dry completely before reconnecting power.

- **Storage:** If storing the unit for an extended period, unplug it and keep it in a cool, dry place.

## TROUBLESHOOTING

If you encounter issues with your alarm clock, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power/Display off	Power adapter not connected or outlet not working.	Ensure the power adapter is securely plugged into the unit and a working electrical outlet. Try a different outlet.
Alarm not sounding	Alarm not set, alarm volume too low, or alarm turned off.	Verify alarm settings and ensure it is activated. Increase alarm volume.
Radio static/Poor reception	Weak signal or interference.	Adjust the position of the unit. Extend the FM antenna if available. Try auto-scanning for stations again.
Buttons unresponsive	Temporary software glitch.	Unplug the unit from power for a few minutes, then plug it back in to reset.

## SPECIFICATIONS

The following are the technical specifications for the LEIKE Alarm Clock Radio:

Attribute	Detail
Brand	LEIKE
Model Number	B0C4GYKDHR
Color	Black
Display Type	Digital
Style	Art Deco
Special Features	Alarm, Auto Dimmable, Snooze, FM Radio, Sleep Sound Machine, USB Charging Ports, RGB Night Light
Power Source	Corded Electric
Room Type	Bedroom
Shape	Rectangular
Material	Plastic, Acrylonitrile Butadiene Styrene
Mounting Type	Tabletop
Item Weight	331 g
Item Dimensions (LxWxH)	11.9 x 3.8 x 7.9 Centimeters (4.7 x 1.5 x 3.1 inches approx.)

Attribute	Detail
UPC	607029147626

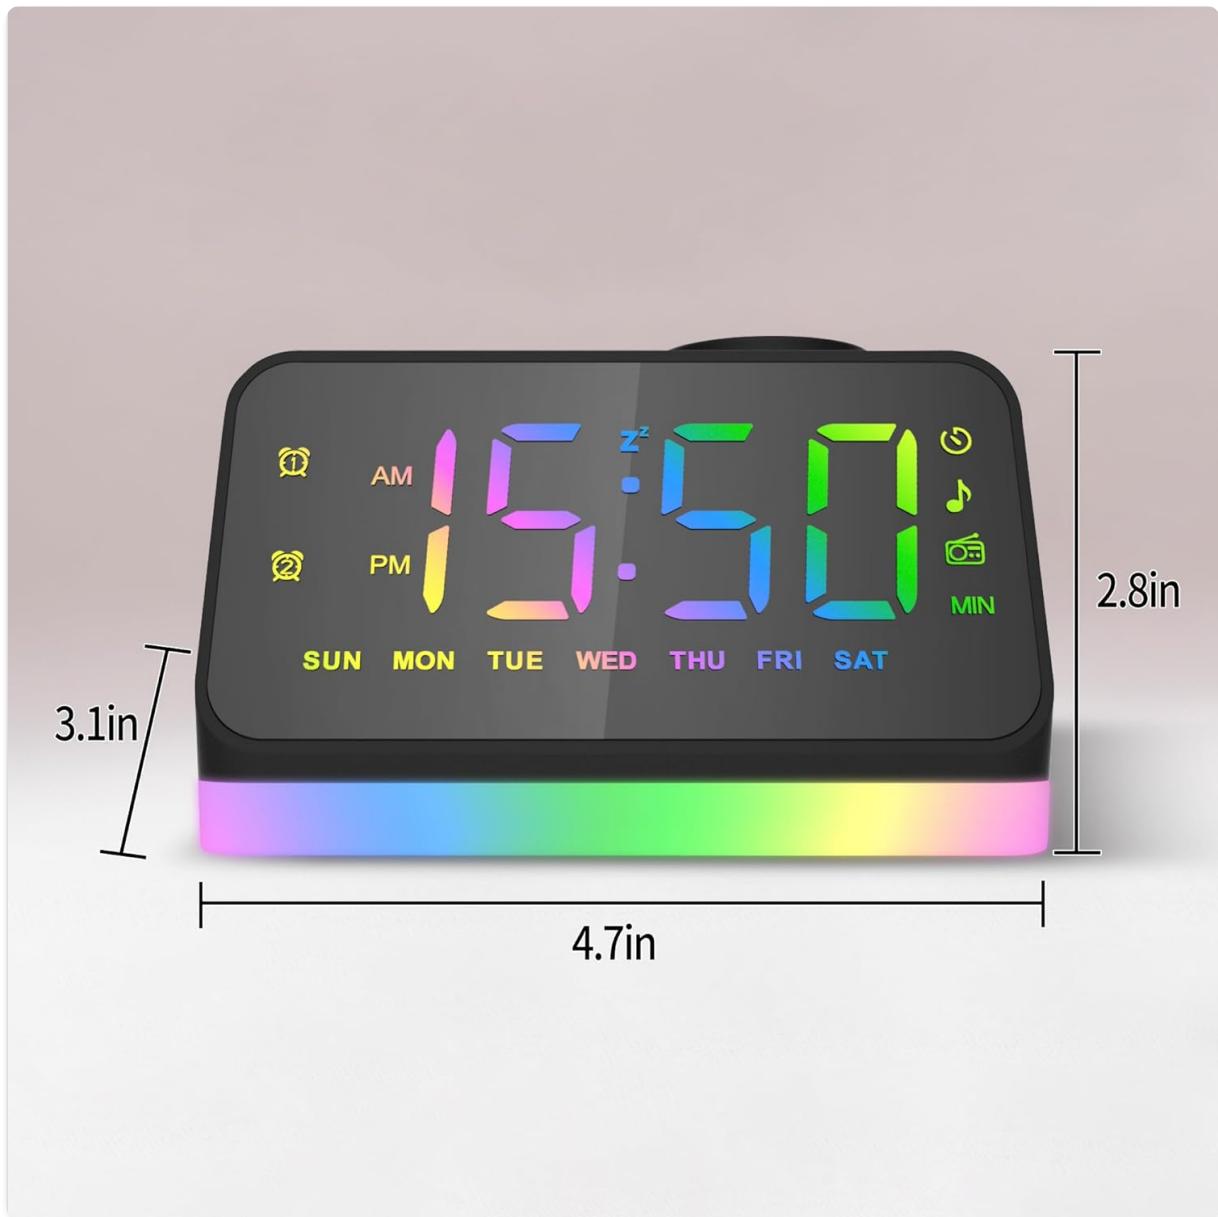


Figure 8: Product dimensions for the LEIKE Alarm Clock Radio.

## WARRANTY AND SUPPORT

LEIKE products are manufactured with high-quality standards. For specific warranty information, please refer to the warranty card included with your product or visit the official LEIKE website. If you require technical support or have questions regarding your alarm clock, please contact LEIKE customer service through the contact information provided on their official website or product packaging.

Please retain your purchase receipt as proof of purchase for warranty claims.