

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bosch](#) /

› [Bosch 60 cm Self Clean Technology Glass Kitchen Chimney DWHA68G60I User Manual](#)

## Bosch DWHA68G60I

# Bosch 60 cm Self Clean Technology Glass Kitchen Chimney

Model: DWHA68G60I

## INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Bosch 60 cm Self Clean Technology Glass Kitchen Chimney, model DWHA68G60I. Please read these instructions carefully before using the appliance and keep them for future reference.

The Bosch DWHA68G60I is a wall-mounted chimney hood designed to effectively remove cooking odors and steam from your kitchen. It features LED illumination, touch controls, and a self-clean function for convenient maintenance.

## SETUP AND INSTALLATION

The Bosch DWHA68G60I chimney is designed for wall-mount installation and is suitable for ducted operation only. Professional installation is highly recommended to ensure proper functioning and safety.

### Included Components:

- 1 x Bosch Kitchen Chimney Unit
- User Manual

### Installation Guidelines:

1. Ensure the wall is structurally sound to support the chimney's weight (approximately 22.1 kg).
2. Maintain the recommended distance between the cooking surface and the chimney for optimal performance and safety. Refer to the detailed installation diagram in the separate installation guide.
3. Connect the chimney to a suitable ducting system with a diameter of 180 mm for efficient air extraction.
4. Ensure electrical connections are made by a qualified electrician, adhering to local regulations. The appliance operates on 240 Volts (AC).



Image: The Bosch DWHA68G60I kitchen chimney, featuring a black glass design, mounted on a kitchen wall above a cooking surface. This image illustrates the typical installation setup.

## OPERATING INSTRUCTIONS

The Bosch DWHA68G60I chimney features intuitive touch controls for easy operation.

### Control Panel Functions:



Image: A close-up view of the touch control panel on the Bosch DWHA68G60I kitchen chimney. The panel displays illuminated icons for power, fan speeds (1, 2, 3), intensive speed, and lighting.

- **Power Button ( )**: Press to turn the chimney on or off.
- **Fan Speed Settings (1, 2, 3)**: Select from three normal fan speeds to adjust extraction power based on cooking

intensity.

- **Intensive Speed Setting (3a):** Activates maximum extraction power for strong odors and heavy steam. This setting automatically resets to a normal speed after a set period to conserve energy.
- **LED Illumination (\*):** Press to turn the integrated LED lights on or off. The chimney is equipped with 2 x 1.5W LED lights, providing 80 lux illumination with a color temperature of 8000 K.

## MAINTENANCE AND CLEANING

---

Regular maintenance ensures optimal performance and longevity of your Bosch kitchen chimney.

### Self Clean Technology:

The chimney features self-clean technology to simplify internal cleaning. Refer to the specific instructions in the detailed manual for activating and utilizing this function. This technology helps in collecting oil and grease efficiently.

### Baffle Filter Cleaning:

The chimney is equipped with baffle filters. These filters should be cleaned regularly, depending on usage, to maintain airflow efficiency. To clean:

1. Turn off the chimney and disconnect it from the power supply.
2. Carefully remove the baffle filters.
3. Wash the filters with warm, soapy water or place them in a dishwasher.
4. Ensure filters are completely dry before re-installing them.

### Exterior Cleaning:

- Wipe the glass and black exterior surfaces with a soft, damp cloth and a mild detergent.
- Avoid abrasive cleaners or scouring pads, as they can damage the finish.
- Ensure the chimney is dry after cleaning.

## TROUBLESHOOTING

---

If you encounter issues with your chimney, refer to the following common troubleshooting steps:

- **Chimney not turning on:** Check the power supply and ensure the appliance is properly plugged in. Verify that the circuit breaker has not tripped.
- **Low suction power:** Clean the baffle filters. Ensure the ducting is not blocked or kinked. Check that the fan speed is set appropriately for the cooking intensity.
- **Lights not working:** Check if the LED illumination button has been pressed. If individual LEDs are out, they may require professional replacement.
- **Unusual noise:** Ensure all components, including filters, are securely in place. Check for any obstructions in the fan or ducting.

For persistent issues or complex repairs, contact Bosch customer service or a qualified service technician.

## SPECIFICATIONS

---

Feature	Specification
---------	---------------

Feature	Specification
Model	DWHA68G60I
Material	Glass
Mounting Type	Wall Mount
Controls Type	Touch
Number of Speeds	3 (plus 1 intensive)
Filter Type	Baffle
Ventilation Type	Ducted
Airflow Displacement	730 CMPH
Noise Level (min./max. normal)	55 dB / 65 dB
Light Source Type	LED (2 x 1.5W)
Light Intensity	80 lux
Color Temperature	8000 K
Voltage	240 Volts (AC)
Annual Energy Consumption	148 Watt Hours
Item Weight	22.1 Kilograms
Product Dimensions (LxWxH)	57.5 x 66 x 60 Centimeters

## WARRANTY AND SUPPORT

Your Bosch DWHA68G60I Kitchen Chimney comes with a standard warranty. Please refer to your purchase documentation for specific warranty terms and conditions. Typically, a 2-year warranty is provided.

### Customer Service:

For technical assistance, service requests, or warranty claims, please contact Bosch customer service. You can find contact details on the official Bosch website or in your warranty card.

**Manufacturer/Importer:** BSH Household Appliances Manufacturing Pvt. Ltd.

Arena House, 2nd Floor Main Building, Plot No.103, Road No.12, MIDC, Andheri East, Mumbai 400093, India.

Tel. No.: 1-800-266-1880