

DEZIN Dezin83002

DEZIN Electric Hot Pot with Steamer

Model: Dezin83002

Brand: DEZIN

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance body in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- The inner pot is NOT removable. Do not submerge the main unit in water.

- Equipped with over-heating protection and boil dry protection for safety.

PRODUCT OVERVIEW

The DEZIN Electric Hot Pot with Steamer (Model Dezin83002) is a versatile kitchen appliance designed for cooking various meals. It features a 1.6-liter capacity stainless steel pot, a steamer basket, and temperature control with a keep warm function.



Image: DEZIN Electric Hot Pot with Steamer in Creamy Beige, showing the main unit with its handle and control knob.

Components:

- **Main Unit:** The primary cooking pot with integrated heating element and control knob.
- **Glass Lid:** Transparent lid for monitoring cooking progress.
- **Steamer Basket:** Stainless steel basket for steaming food.
- **Power Cord:** Detachable power cord for easy storage.



Image: The DEZIN Electric Hot Pot demonstrating its "Steam Above & Cook" function, with food steaming in the upper basket while soup cooks in the main pot.

SPECIFICATIONS

Feature	Detail
Brand	DEZIN
Model Number	Dezin83002
Capacity	1.6 Liters (1.7 Quarts)
Material	304 Food-Grade Stainless Steel (Inner Pot & Steamer)
Color	Creamy Beige
Wattage	200W / 600W
Voltage	110 Volts
Control Method	Mechanical Knob (Push Button)
Operation Mode	Manual
Dishwasher Safe	No
Safety Features	Keep Warm Function (75°C-80°C), Over-heating Protection, Boil Dry Protection, Double Wall Construction

SETUP

- Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- Inspect:** Check the hot pot, steamer basket, glass lid, and power cord for any signs of damage. Do not use if any part is damaged.
- Clean:** Before first use, wash the inner pot, steamer basket, and glass lid with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Ensure no water enters

the electrical components.

4. **Placement:** Place the hot pot on a stable, flat, heat-resistant surface away from flammable materials. Ensure adequate ventilation around the appliance.
5. **Connect Power:** Insert the detachable power cord securely into the power inlet at the base of the hot pot. Then, plug the other end into a standard 110V electrical outlet.

OPERATING INSTRUCTIONS

General Operation:

- The appliance features a mechanical knob for control.
- Turn the knob to "OFF" to ensure the unit is off before plugging in or unplugging.
- The knob has settings for low heat (one flame icon), high heat (two flame icons), and "KEEP WARM".
- An indicator light will illuminate when the unit is active.



Image: Close-up of the DEZIN Electric Hot Pot's control knob, illustrating the "OFF", low heat (200W), high heat (600W), and "KEEP WARM" settings.

Cooking Noodles or Soup (Low Power - 200W):

1. Add desired amount of water or broth to the inner pot. Do not exceed the MAX fill line.
2. Add noodles or soup ingredients.
3. Place the glass lid on the pot.
4. Turn the control knob to the single flame icon (low heat). The indicator light will turn on.
5. Cook until desired doneness. Stir occasionally to prevent sticking.
6. Once cooked, turn the knob to "OFF" and unplug the unit.

Cooking Hot Pot or Steaming (High Power - 600W):

1. For hot pot: Add water or broth and desired ingredients to the inner pot.
2. For steaming: Add water to the inner pot (ensure water level is below the steamer basket). Place the steamer basket with food (e.g., vegetables, dumplings) on top of the main pot.
3. Place the glass lid on the pot/steamer.
4. Turn the control knob to the double flame icon (high heat). The indicator light will turn on.
5. Cook until desired doneness. For hot pot, add ingredients as needed. For steaming, monitor food until tender.
6. Once cooked, turn the knob to "OFF" and unplug the unit.

Keep Warm Function:

- After cooking, you can turn the control knob to "KEEP WARM".
- This function will maintain the temperature of the food between 75°C to 80°C (167°F to 176°F).
- The function activates when the temperature drops below 75°C and deactivates when it rises above 80°C.

Your browser does not support the video tag.

Video: Official DEZIN video demonstrating the use of the 1.6L Stainless Steel Electric Hot Pot for cooking noodles and hot pot, highlighting the dual power settings and detachable cord.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your DEZIN Electric Hot Pot.

1. **Always Unplug:** Before cleaning, ensure the appliance is unplugged from the power outlet and has cooled down completely.
2. **Inner Pot and Steamer Basket:** Wash the stainless steel inner pot and steamer basket with warm, soapy water. Use a soft sponge or cloth to avoid scratching the surface. Rinse thoroughly and dry completely.
3. **Glass Lid:** Wash the glass lid with warm, soapy water, rinse, and dry.
4. **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. **Do Not Submerge:** The main unit of the hot pot is NOT dishwasher safe and should NEVER be submerged in water or any other liquid. This can cause electrical damage and void the warranty.
6. **Storage:** Once clean and dry, store the hot pot in a cool, dry place. The detachable power cord can be stored inside the pot for convenience.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly; power outlet malfunction; unit is in "OFF" position.	Ensure power cord is securely plugged into both the unit and a working outlet. Turn the control knob to a heat setting. Test the outlet with another appliance.
Food is not heating sufficiently.	Incorrect heat setting; too much food/liquid; lid not properly sealed.	Increase heat setting (e.g., to 600W). Reduce the amount of food/liquid. Ensure the lid is securely placed.
Unit automatically shuts off during operation.	Over-heating protection activated; boil dry protection activated.	This is a safety feature. Unplug the unit and allow it to cool down. Check for sufficient liquid in the pot before restarting.
Food sticks to the bottom of the pot.	Insufficient liquid; food not stirred frequently enough.	Ensure adequate liquid is used for cooking. Stir food regularly, especially when cooking items prone to sticking.

If the problem persists after attempting these solutions, please contact DEZIN customer support.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please refer to the contact details

provided with your purchase or visit the official DEZIN website.

Manufacturer: DEZIN

Website: [DEZIN Official Store on Amazon](#)

Please retain your proof of purchase for any warranty claims.