

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [GOLOZA](#) /

› [GOLOZA Digital Alarm Clock TCA-245 User Manual](#)

GOLOZA TCA-245

GOLOZA Digital Alarm Clock User Manual

Model: TCA-245

1. PRODUCT OVERVIEW

The GOLOZA Digital Alarm Clock (Model TCA-245) features a modern curved design with a conspicuous 6-color RGB display. It offers 5 levels of brightness control, including an off option, 2 volume levels, 3 alarm tones, a snooze function, and power-off memory. The clock supports both 12-hour and 24-hour time formats.

Upgraded Larger Digit and Modern Curved Design

Easy to see from any corner of the room

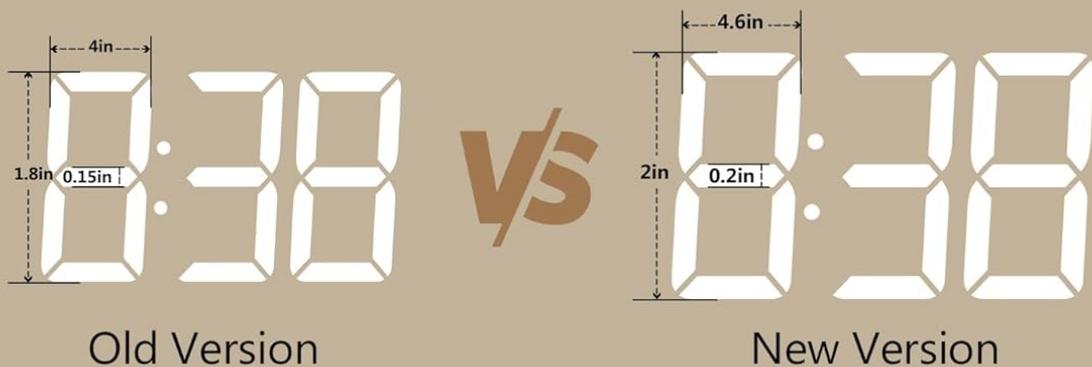


Figure 1: GOLOZA Digital Alarm Clock with its large, easy-to-read display and curved screen.

2. WHAT'S IN THE BOX

Upon opening the package, ensure all the following items are present:

- GOLOZA Digital Alarm Clock
- USB Charging Cable (71 inches / 1.8 meters)
- Power Adapter
- User Manual



Figure 2: Contents of the product package, including the alarm clock, charging cable, power adapter, and user manual.

3. SETUP INSTRUCTIONS

3.1 Power Connection

1. Connect the USB charging cable to the Type-C port on the back of the alarm clock.
2. Plug the other end of the USB cable into the provided power adapter.
3. Insert the power adapter into a standard electrical outlet.

The clock is powered by corded electric. It includes a replaceable battery for power-off memory, which preserves time and settings during a power outage.

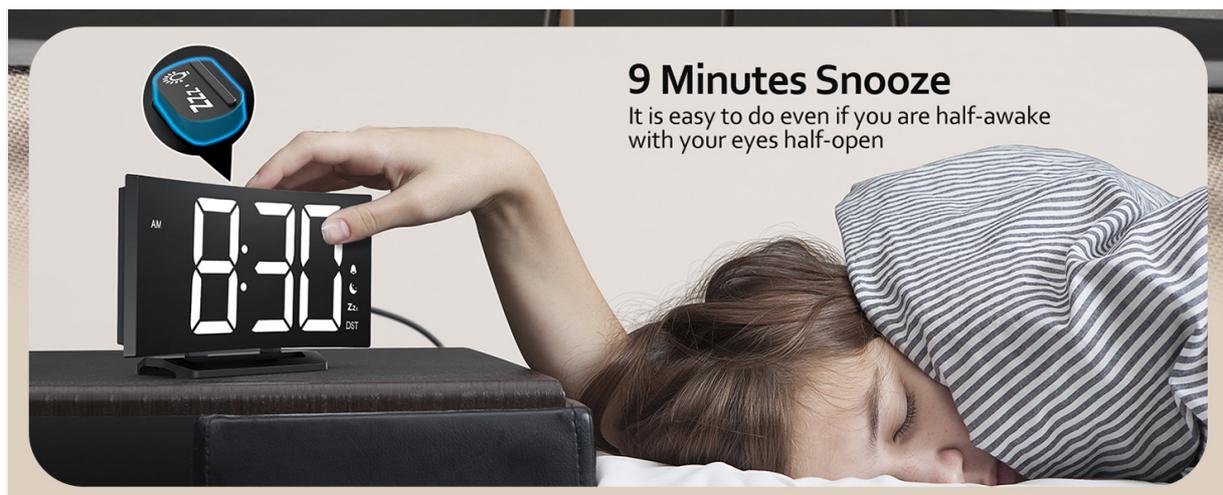


Figure 3: Connecting the Type-C power cable to the alarm clock.

3.2 Initial Placement

Before placing the clock, ensure to remove the plastic covering from the bottom rubber sticker. This non-slip design helps keep the clock stable on your tabletop and protects the surface.



Figure 4: Illustration of the non-slip bottom design, advising to remove the protective film.

4. OPERATING INSTRUCTIONS

4.1 Setting the Time (12/24H Format)

Refer to the user manual included in the box for specific button functions to set the time and switch between 12-hour and 24-hour formats. Typically, a "Time Set" or "Mode" button is used to enter time setting mode, and "+"/"-" buttons adjust the hours and minutes.

4.2 Adjusting Display Brightness

The clock features 5 levels of adjustable brightness, including an 'off' setting. Use the dedicated brightness control button (often indicated by a sun icon) to cycle through the brightness levels. This allows for comfortable viewing in various lighting conditions, from bright daylight to complete darkness.



Figure 5: The clock display showing different brightness levels, from bright to off, for comfortable sleep.

4.3 Setting Alarms and Volume

The alarm clock offers 3 distinct alarm tones and 2 adjustable volume levels. Consult the included user manual for detailed instructions on how to set an alarm, select an alarm tone (Beep, Chord, Birds Song), and adjust the alarm volume.

Chord

Birds Song

Beep

AM 7:30

3 Alarm Sounds

Start your day with wonderful ringtones

Figure 6: Visual representation of the three available alarm sounds: Beep, Chord, and Birds Song.

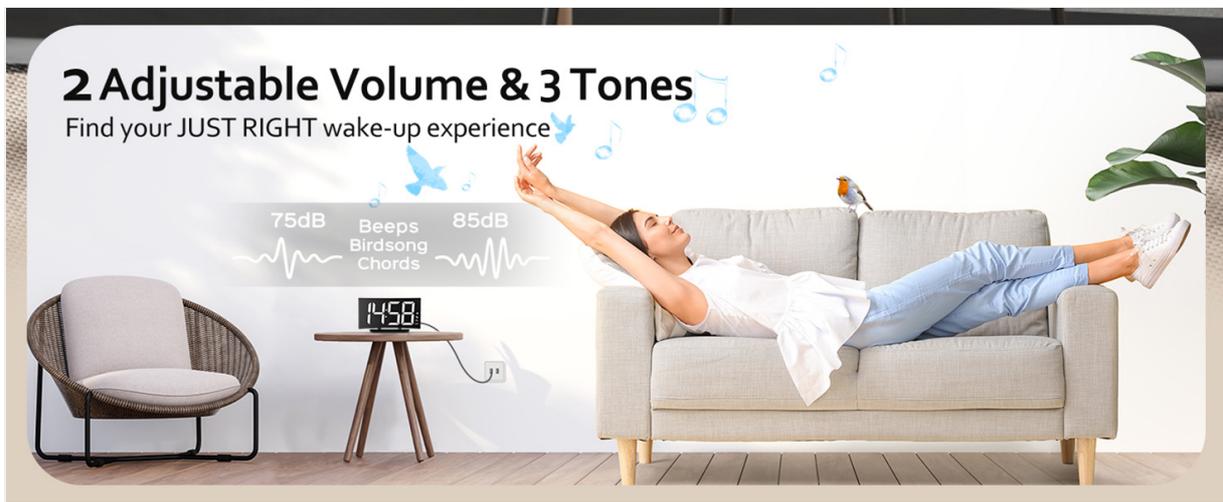


Figure 7: The clock offers two volume levels, 75dB and 85dB, for personalized wake-up experiences.

4.4 Snooze Function

When the alarm sounds, press the large snooze button to activate a 9-minute snooze period. The alarm will sound again after 9 minutes. This function is designed for ease of use, even when half-awake.

Make Sure to Wake You Up

2-level of alarm volume
9-minute snooze function



Figure 8: The clock's snooze function provides an additional 9 minutes of sleep.

5. MAINTENANCE

To ensure the longevity and proper functioning of your GOLOZA Digital Alarm Clock, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the clock's surface. Avoid abrasive cleaners, solvents, or spray cleaners, as they may damage the finish or display.
- **Placement:** Place the clock on a stable, flat surface away from direct sunlight, excessive heat, or moisture.
- **Power:** Always use the provided power adapter and cable. Do not attempt to use incompatible power sources.

- **Battery Replacement:** The internal battery is for power-off memory only. If the clock consistently loses time or settings after a power outage, the internal battery may need replacement. Refer to the full user manual for instructions or contact customer support.

6. TROUBLESHOOTING

If you encounter issues with your GOLOZA Digital Alarm Clock, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Clock display is off or blank.	No power connection or power outage.	Ensure the power adapter is securely plugged into both the clock and the wall outlet. Check if the outlet is functional. If there was a power outage, the clock should retain settings due to power-off memory.
Alarm does not sound.	Alarm not set, alarm volume too low, or alarm is disabled.	Verify that the alarm is set correctly and enabled. Increase the alarm volume.
Time is incorrect.	Time was not set correctly or internal battery issue.	Reset the time according to the operating instructions. If the time consistently drifts or resets after power interruptions, the internal memory battery may need attention.
Display is too bright/dim.	Brightness level needs adjustment.	Use the brightness control button to cycle through the 5 brightness levels until the desired setting is reached.

If these steps do not resolve the issue, please contact GOLOZA customer support for further assistance.

Reliable Memory Keeper

Keeps track of the time and preserves settings when power outage



Figure 9: The clock's power-off memory feature ensures settings are retained during power interruptions.

7. SPECIFICATIONS

Feature	Detail
Brand	GOLOZA
Model Number	TCA-245
Display Type	LED
Display Colors	6 RGB Colors

Feature	Detail
Brightness Levels	5 levels + Off
Alarm Tones	3 (Beep, Chord, Birds Song)
Volume Levels	2
Snooze Duration	9 minutes
Time Format	12H/24H
Power Source	Corded Electric (Type-C)
Power-Off Memory	Yes (via internal battery)
Product Dimensions	5.75"W x 3.73"H
Item Weight	0.25 Kilograms (8.8 ounces)
Frame Material	Plastic
UPC	647697054024
ASIN	B0C4KBQLBS

8. WARRANTY AND SUPPORT

GOLOZA provides a **24-month warranty** for this product. For any questions, concerns, or support needs, please contact GOLOZA customer service through your purchase platform.

How to Contact Support:

1. Go to your Account.
2. Navigate to "Orders".
3. Select "Order Detail" for your GOLOZA Digital Alarm Clock purchase.
4. Find "Sold by: GOLOZA" and click "Ask a question".



Figure 10: GOLOZA customer support details, including warranty information and contact method.