

## TopWit T160B-1

# Topwit Hot Pot Electric with Steamer Instruction Manual

Model: T160B-1 | Brand: TopWit

## 1. INTRODUCTION

Thank you for choosing the Topwit Hot Pot Electric with Steamer. This versatile 1.6L electric cooker is designed for convenience and efficiency, perfect for preparing a variety of meals such as ramen, pasta, oatmeal, soups, and steamed dishes. Its compact and portable design makes it ideal for dorm rooms, offices, travel, and small kitchens. Please read this manual thoroughly before use to ensure safe and optimal operation.

## 2. IMPORTANT SAFETY PRECAUTIONS

- Always ensure the voltage of your power outlet matches the voltage specified on the appliance.
- Do not immerse the main body of the electric hot pot in water or any other liquid. The electrical components are integrated into the base.
- Equipped with overheating protection and boil dry protection, the hot pot will automatically shut off if the temperature exceeds safe limits or if there is no water inside. However, always monitor the appliance during use.
- Keep out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities.
- Use only the provided power cord. Disconnect the power cord when not in use or before cleaning.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner.
- Ensure the appliance is placed on a stable, heat-resistant surface during operation.

## 3. PARTS AND FEATURES

### 3.1 Main Unit with Handle



The main body of the electric hot pot, featuring a comfortable handle for easy portability.

### 3.2 304 Stainless Steel Inner Pot



## 1.6L Large Capacity

With an 304 food-grade stainless steel steamer

The interior of the pot is made of food-grade 304 stainless steel, ensuring no contamination to your food and easy cleaning. It has a 1.6L capacity.

### 3.3 Transparent Glass Lid

# TOPWIT 1.6L ELECTRIC COOKER

02



Visual Glass Cover

01



Stainless Steel Steamer

03



Cool Touch Handle



Allows you to monitor your cooking progress without lifting the lid. Features a steam vent to prevent overflow.

## 3.4 304 Stainless Steel Steamer



## Steam above & Cook below





This accessory allows for steaming food simultaneously while cooking in the main pot, preserving nutrients and flavor.

### 3.5 Dual Power Control Knob

## Dual Power Setting

200W / 600W

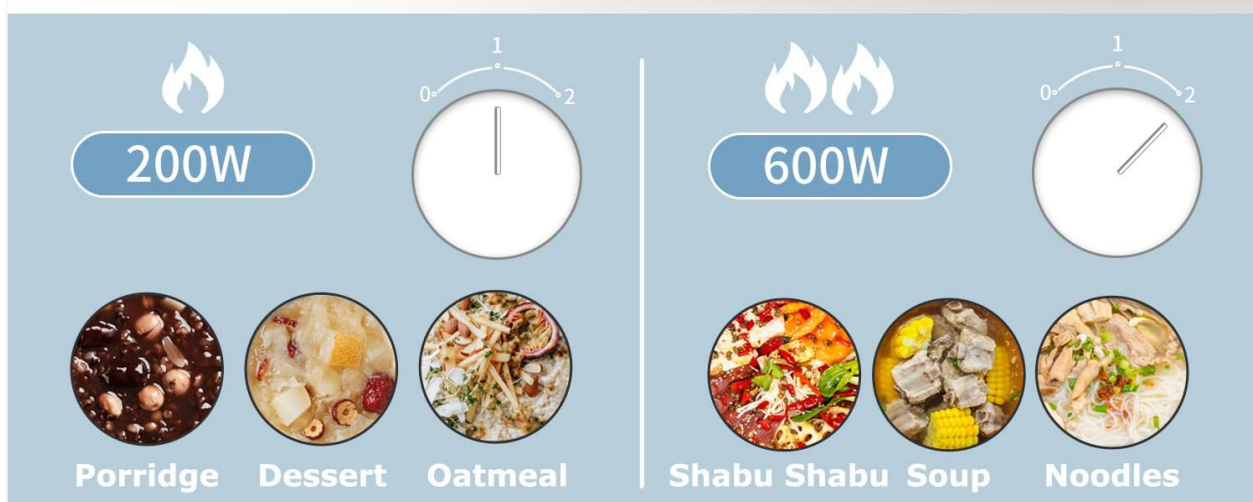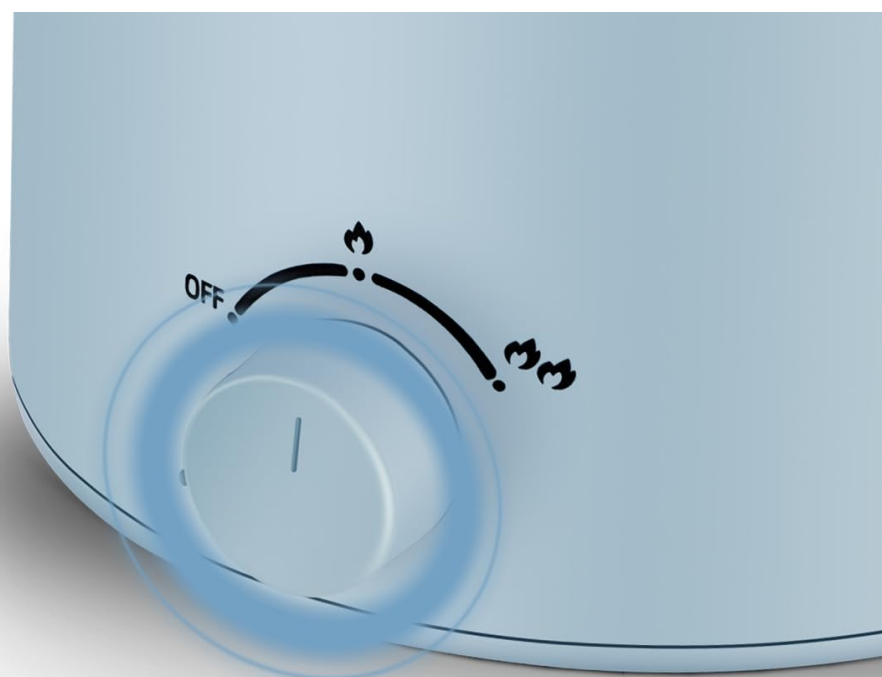

Offers two power settings: 200W for gentle cooking (e.g., soup, porridge) and 600W for rapid boiling (e.g., noodles, pasta).

### 3.6 Detachable Power Cord

For easy storage and portability.

## 4. SETUP

1. Unpack all components and remove any packaging materials.
2. Wipe the interior of the pot and the steamer with a damp cloth before first use. Do not immerse the main unit in water.
3. Place the electric hot pot on a flat, stable, and heat-resistant surface.
4. Connect the detachable power cord to the appliance and then plug it into a suitable electrical outlet.

## 5. OPERATING INSTRUCTIONS

### 5.1 General Cooking

1. Add desired ingredients and water to the stainless steel inner pot. Ensure water level is between MIN and MAX marks.
2. Place the glass lid securely on the pot.
3. Turn the control knob to the desired power setting:
  - **200W (Low)**: Ideal for simmering soups, cooking porridge, oatmeal, or gently boiling eggs.
  - **600W (High)**: For rapid boiling of water, cooking noodles, pasta, or dumplings.
4. The indicator light will illuminate when the appliance is active.
5. Once cooking is complete, turn the control knob to "OFF" and unplug the appliance.

## 5.2 Using the Steamer

1. Add water to the main pot, ensuring it does not exceed the MIN line if only steaming.
2. Place the stainless steel steamer insert into the pot.
3. Arrange food items (e.g., vegetables, seafood, buns) in the steamer.
4. Cover with the glass lid and select the desired power setting.
5. Monitor steaming progress through the glass lid.

## 5.3 Product Demonstration Videos

Your browser does not support the video tag.

Official demonstration of the Topwit electric cooker's features and general use.

Your browser does not support the video tag.

Detailed overview of the Topwit 1.6L Electric Cooker, including its steamer functionality.

---

## 6. MAINTENANCE AND CLEANING

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. **Cleaning the Inner Pot:** The non-stick interior is easy to clean. Wipe with a soft sponge and mild dish soap. Rinse thoroughly, being careful not to get water into the electrical base. Wipe dry immediately.
3. **Cleaning the Steamer and Lid:** These parts are fully washable. Clean with warm soapy water, rinse, and dry.
4. **Removing Limescale:** If mineral deposits (limescale) appear on the bottom of the pot:
  - Fill the pot with water up to the MIN line.
  - Add 1-2 tablespoons of white vinegar or lemon juice.
  - Turn the pot on to the 200W setting and let it boil for 5-10 minutes.
  - Unplug, let cool, then pour out the solution and wipe clean.

# 304# Food-grade Stainless Steel Steamer

## Keep the original taste of the food

- ✓ High temperature resistance
- ✓ Corrosion resistance
- ✓ Easy to clean



Visual guide for removing limescale from the pot's interior.

5. Do not use abrasive cleaners, steel wool, or harsh chemicals, as these can damage the non-stick coating.
6. Store the appliance in a dry place when not in use.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; safety feature activated.	Ensure power cord is securely plugged in. Test the outlet with another appliance. Check if boil-dry or overheating protection has activated (allow to cool).
Food burns at the bottom.	Too high heat setting; insufficient liquid; food stuck to bottom.	Use the 200W setting for delicate foods or simmering. Ensure adequate liquid for cooking. Stir food regularly.
Limescale buildup.	Hard water deposits.	Follow the descaling instructions in Section 6.3.

## 8. SPECIFICATIONS

**Brand:** TopWit

**Model:** T160B-1

**Capacity:** 1.6 Liters

**Material:** Stainless steel (interior)

**Wattage:** 200W / 600W



**Control Method:** Mechanical knob

**Product Dimensions:** 6.7 x 6.7 x 8.26 inches

**Item Weight:** 2.88 pounds

**Safety Features:** Overheating Protection, Boil Dry Protection

---

## 9. WARRANTY AND SUPPORT

TopWit products are manufactured to high-quality standards. For any product inquiries, technical support, or warranty claims, please refer to the contact information provided on your product packaging or visit the official TopWit website. Keep your purchase receipt as proof of purchase for warranty purposes.

---