

Bingozones B7 Pro

Bingozones B7 Pro Wireless Bluetooth Headphones User Manual

Model: B7 Pro

[Overview](#) [Setup](#) [Operating](#) [Introduction](#) [What's in the Box](#) [Product](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing Bingozones B7 Pro Wireless Bluetooth Headphones. These headphones are designed to provide a high-quality audio experience with deep bass, crystal-clear treble, and immersive stereo sound. Featuring Bluetooth 5.3 technology, a long-lasting battery, and a comfortable, foldable design, they are suitable for various activities including gaming, music listening, and sports.

2. WHAT'S IN THE BOX

- B7 Wireless Bluetooth Headphones (1)
- 3.5mm Audio Cable (1)
- USB-C Charging Cable (1)
- User Manual (1)
- Lifetime Customer Support



Image: The Bingozones B7 Pro headphones, a 3.5mm audio cable, a USB-C charging cable, and the user manual are neatly arranged next to the product box, illustrating the package contents.

3. PRODUCT OVERVIEW

The Bingozones B7 Pro headphones feature intuitive controls and a flexible design for ease of use and portability.

3.1 Controls and Ports

The right earcup houses the main controls and ports:

- **Power Switch:** Slide to turn the headphones ON/OFF.
- **Volume Up/Next Track:** Press briefly for volume up, long press for next track.
- **Play/Pause/Call:** Press briefly to play/pause music or answer/end calls. Long press to reject calls.
- **Volume Down/Previous Track:** Press briefly for volume down, long press for previous track.
- **3.5mm Audio Jack:** For wired connection using the included audio cable.
- **USB-C Charging Port:** For charging the headphones.

- **Indicator Light:** Displays power, pairing, and charging status.
- **Microphone:** Built-in for calls.



Image: A detailed view of the right earcup, highlighting the power switch, volume/track control buttons, 3.5mm audio jack, USB-C charging port, indicator light, and microphone.

3.2 Foldable and Adjustable Design

The headphones feature a foldable design for easy storage and portability. The headband is adjustable to fit various head sizes, and the earcups swivel for a comfortable fit.



Image: A series of images showing the headphones being folded for compact storage, the adjustable headband, and the swiveling earcups for a customized fit.

4. SETUP

4.1 Charging the Headphones

1. Connect the USB-C charging cable to the charging port on the right earcup.
2. Connect the other end of the cable to a USB power source (e.g., computer, wall adapter).
3. The indicator light will show red during charging and turn blue when fully charged.
4. A full charge takes approximately 2 hours and provides up to 65 hours of playtime.

HASTA 65 HORAS DE REPRODUCCIÓN



Carga de minutos **5=3** horas de tiempo de reproducción



Tiempo en espera de **950** horas



65 horas de tiempo de música



Image: The headphones are shown with a battery icon indicating up to 65 hours of playtime and quick charge capabilities.

4.2 Bluetooth Pairing

1. Ensure the headphones are fully charged.
2. Slide the power switch to the ON position. The indicator light will flash blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth.
4. Search for available Bluetooth devices and select "B7 Pro" from the list.
5. Once connected, the indicator light will turn solid blue.
6. The headphones support dual device connectivity, allowing you to connect to two devices simultaneously.



Image: Two individuals are shown wearing headphones, one wireless and one wired, illustrating the flexibility of connection options.

4.3 Wired Connection

If Bluetooth is not available or preferred, you can use the included 3.5mm audio cable:

1. Plug one end of the 3.5mm audio cable into the audio jack on the right earcup.
2. Plug the other end into the audio output of your device.
3. In wired mode, the headphone's battery is not consumed, and you can still enjoy your audio.

5. OPERATING THE HEADPHONES

5.1 Music Playback

- **Play/Pause:** Press the Play/Pause button once.
- **Volume Up:** Press the Volume Up button once.
- **Volume Down:** Press the Volume Down button once.
- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.

5.2 Call Functions

- **Answer/End Call:** Press the Play/Pause button once.
- **Reject Call:** Long press the Play/Pause button.

5.3 Dual Device Connectivity

The B7 Pro headphones can connect to two Bluetooth devices simultaneously. This allows you to seamlessly switch between audio sources, for example, listening to music on your laptop and answering a call on your phone without re-pairing.



Image: A woman in a kitchen wearing headphones, with graphics showing connection to a phone, tablet, and computer, symbolizing seamless dual device connectivity.

5.4 Usage Scenarios

The lightweight and comfortable design makes these headphones ideal for various environments:

- **Work:** For focused tasks or online meetings.
- **Travel:** Compact and long battery life for commutes or flights.
- **Gym/Sports:** Secure fit and sound isolation for workouts.



Image: A collage showing individuals wearing the headphones in different scenarios: working at a desk, traveling on a plane, and exercising at a gym.

6. MAINTENANCE

6.1 Cleaning

- Wipe the headphones with a soft, dry cloth.
- Do not use harsh chemicals or abrasive materials.
- Keep the charging port and audio jack free of dust and debris.

6.2 Storage

- Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- Utilize the foldable design to store them compactly when not in use.

6.3 Battery Care

- Charge the headphones regularly, even if not used frequently, to maintain battery health.
- Avoid fully discharging the battery for extended periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cannot power on	Low battery	Charge the headphones fully.

Problem	Possible Cause	Solution
Cannot pair via Bluetooth	Headphones not in pairing mode / Device Bluetooth off / Too far from device	Ensure headphones are in pairing mode (flashing blue/red). Turn on Bluetooth on your device. Move headphones closer to your device (within 10 meters).
No sound	Volume too low / Device not connected / Incorrect audio source	Increase headphone and device volume. Re-pair Bluetooth or check wired connection. Select correct audio output on your device.
Poor sound quality	Weak Bluetooth signal / Interference	Move closer to your device. Avoid obstacles between headphones and device.

8. SPECIFICATIONS

- **Brand:** Bingozones
- **Model Number:** B7 Pro.
- **Color:** Pink
- **Ear Placement:** Over Ear
- **Connectivity Technology:** Wireless (Bluetooth), Wired (3.5mm Jack)
- **Bluetooth Version:** 5.3
- **Bluetooth Range:** 10 Meters
- **Battery Average Life:** 65 Hours
- **Battery Charge Time:** 2 Hours
- **Noise Control:** Sound Isolation
- **Audio Driver Type:** Dynamic Driver
- **Audio Driver Size:** 40 Millimeters
- **Impedance:** 32 Ohms
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Additional Features:** Foldable, Lightweight (0.11lbs), HiFi stereo sound, Crystal-clear treble, Built-in microphone, One headset connects two devices, Easy volume control.

9. WARRANTY AND SUPPORT

Bingozones provides the following for your B7 Pro Wireless Bluetooth Headphones:

- **One-Year Money-Back Guarantee:** If you are not satisfied with your purchase within one year.
- **Three-Year Warranty:** Covers manufacturing defects and malfunctions for three years from the date of purchase.
- **Lifetime Worry-Free User Support:** For any product-related questions or assistance.

To contact customer support, please refer to the contact information provided in your product packaging or visit the official Bingozones website. We aim to respond to all inquiries within 14 hours.

OFFICIAL PRODUCT VIDEOS

B7 Pro. Wireless Headphones Bluetooth

Your browser does not support the video tag.

Video: An official product video showcasing the Bingozones B7 Pro Wireless Headphones, highlighting their lightweight, comfortable design, one-click on/off, easy volume control, Bluetooth 5.3 connectivity, immersive deep bass, crystal-clear treble, and 65 hours of playtime. The video demonstrates usage in various settings, including walking and exercising at a gym.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question