

[Manuals.plus](#) /

› [Newbealer](#) /

› Newbealer 2-in-1 Portable Garment Steamer & Iron User Manual

## Newbealer NB316C-plus

# Newbealer 2-in-1 Portable Garment Steamer & Iron

Brand: Newbealer | Model: NB316C-plus

## 1. INTRODUCTION

---

Thank you for choosing the Newbealer 2-in-1 Portable Garment Steamer & Iron. This versatile appliance is designed to quickly and efficiently remove wrinkles from your garments, offering both powerful steaming and dry ironing capabilities. Its compact and rotatable design makes it ideal for both home use and travel.

### Included in the package:

- Garment Steamer Unit
- Silicone Rest
- Silicone Funnel
- User Manual



Figure 1: Newbealer 2-in-1 Portable Garment Steamer and Iron

## 2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance to prevent injury or damage.

- **Voltage Compatibility:** This appliance is intended solely for 110-125 V outlets. For 200-235 V outlets, a transformer plus adapter plug is required.
- **Water Safety:** Always unplug the steamer before filling or emptying the water tank. Do not overfill.
- **Hot Surfaces:** The soleplate and steam nozzle become very hot during operation. Avoid direct contact with skin. Use the provided silicone rest to place the hot iron down.
- **Steam Hazard:** Steam is hot. Keep hands and face away from the steam nozzle during operation.
- **Children and Pets:** Keep the appliance out of reach of children and pets.

- **Storage:** Always empty the water tank and unplug the appliance after each use and before storage. Allow it to cool completely before storing.
- **Damage:** Do not operate the appliance if the cord or plug is damaged, or if the appliance has been dropped or damaged in any manner.

### 3. PRODUCT OVERVIEW & COMPONENTS

Familiarize yourself with the parts of your Newbealer steamer.



Figure 2: Package Contents - Steamer unit, silicone rest, silicone funnel, and user manual.

iron

+

steamer

**Buy one get two (functions)**

**2IN1 IRON AND STEAMER**

Figure 3: The Newbealer unit combines the functions of a traditional iron and a garment steamer.

## Diamond Ceramic Soleplate

- Non-stick ceramic glides effortlessly over delicate fabrics.
- Faster heating, strong steam penetration, more durable.



Plush



Linen



Silk



Cotton



Wool



Nylon

## Suitable for all fabrics

- ✓ Dry Ironing
- ✓ 2 Steam levels (10-20g/min)



Figure 4: Diamond Ceramic Soleplate for smooth gliding and effective wrinkle removal on various fabrics.

## 4. SETUP

1. **Detach Water Tank:** Push the water tank until a slight click is heard to detach it from the main unit.
2. **Fill Water Tank:** Open the cap of the water tank. Use the provided silicone funnel to fill the 120ml detachable water tank with clean water. Do not exceed the maximum fill line. Close the cap securely.
3. **Attach Water Tank:** Reattach the filled water tank to the main unit, pushing until it clicks into place.
4. **Plug In:** Plug the steamer into a standard 110-125V electrical outlet. The indicator light will illuminate.
5. **Heat Up:** The steamer will heat up in just 15 seconds. The indicator light will change or stop blinking when it's ready for use.

## Compact Size for Home & Travel

Included silicone rest for hot iron to avoid burns



Figure 5: Detaching and filling the 120ml water tank is simple and mess-free.

Video 1: Demonstrates how to set up and use the Newbealer Garment Steamer (NB316C model).

Video 2: Unboxing and initial setup of the Handheld Steamer, highlighting its suitability for home use.

## 5. OPERATING INSTRUCTIONS

The Newbealer steamer offers versatile steaming and ironing options.

- **Power On/Steam Levels:** Press the power button to cycle through the two steam settings (10-20 g/min). The indicator light will show the selected level.
- **Horizontal & Vertical Steaming:** The steamer supports both horizontal pressing and vertical steaming. For best results, gently stretch the garment while steaming.
- **Dry Ironing:** The unit can also be used for dry ironing. Allow the soleplate to heat up to 302°F for effective dry ironing.
- **Rotatable Head:** The 90° rotatable head allows for flexible use, making it easy to iron buttons, pleats, collars, pockets, and cuffs.
- **Pointed Tips:** Utilize the pointed tips of the soleplate to reach difficult areas and remove corner wrinkles.

- **Silicone Rest:** When not actively steaming or ironing, place the hot soleplate on the high-temperature resistant silicone rest to protect surfaces.



# Unleash Steaming Freedom

Get the perfect look in a moment

## 90° Rotatable Head

Meet the needs of flat and hanging ironing, give you greater flexibility.



Figure 6: Easily switch between horizontal pressing and vertical steaming with the 90° rotatable head.



# Portable and Effective

## Remove Corner Wrinkles

Two Pointed Front Tips let you iron the hard area like in-between buttons and corner near collar easily

Figure 7: The pointed tips allow for precise ironing in hard-to-reach areas like collars and button plackets.

Video 3: Demonstration of the powerful steaming and ironing capabilities for various garments.

Video 4: Quick demonstration of the steamer's effectiveness for daily garment refreshing.

## 6. MAINTENANCE AND CARE

- **Empty Water Tank:** After each use, always empty any remaining water from the tank to prevent mineral buildup and ensure longevity of the appliance.
- **Unplug:** Always unplug the steamer from the power outlet immediately after use.
- **Cool Down:** Allow the steamer to cool down completely before cleaning or storing.
- **Cleaning:** Wipe the exterior of the steamer with a soft, damp cloth. For the ceramic soleplate, ensure it is cool before gently wiping it clean. Do not use abrasive cleaners or scouring pads.
- **Storage:** Store the steamer in a dry, safe place away from direct sunlight and moisture.

## 7. TROUBLESHOOTING

If you encounter any issues with your Newbealer steamer, please refer to the following common solutions:

- **No Steam/Low Steam:** Ensure the water tank is filled and properly attached. Check if the steamer has fully heated up (indicator light ready). Make sure the power button is pressed to activate steam.
- **Water Leaking:** Ensure the water tank cap is securely closed and the tank is properly seated in the unit. Avoid tilting the steamer excessively during use, especially when dry ironing.
- **Appliance Not Turning On:** Verify that the power cord is securely plugged into a functional 110-125V outlet.

For further assistance or issues not listed here, please contact Newbealer customer support through Amazon.

## 8. SPECIFICATIONS

|                       |                                        |
|-----------------------|----------------------------------------|
| Brand                 | Newbealer                              |
| Model Number          | NB316C-plus                            |
| Power                 | 1200 Watts                             |
| Voltage               | 120 Volts (AC)                         |
| Heat-up Time          | 15 seconds                             |
| Steam Levels          | 2 (10-20 g/min)                        |
| Water Tank Capacity   | 120 ml (4.23 ounces)                   |
| Continuous Steam Time | Up to 15 minutes                       |
| Soleplate Material    | Diamond Ceramic                        |
| Product Dimensions    | 4.7"L x 1.97"W x 10.2"H                |
| Item Weight           | 1.54 lbs (1.65 pounds listed in specs) |

## 9. WARRANTY AND SUPPORT

Newbealer is committed to providing high-quality products and customer satisfaction. If you encounter any issues with your product, please inform us directly through Amazon's messaging system. Our customer service team will be happy to assist you with any concerns or questions.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**<https://manuals.plus/asin/B0C4L49SLG>**

More documents and user manuals: **<https://manuals.plus/>**