

[Manuals.plus](#) /

› [plimpton](#) /

› PlimPad Kids10 Android 13 Tablet User Manual

plimpton PlimPad Kids 10

PlimPad Kids10 Android 13 Tablet User Manual

Model: PlimPad Kids 10 | Brand: plimpton

1. INTRODUCTION

The PlimPad Kids10 is a 10-inch tablet designed for children, featuring the Android 13 operating system and Google Kids Space. It includes parental control functionalities and comes with a durable EVA shockproof case. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.

Android 13 | Google Certified



Private



Personal



Beyond
the Phone

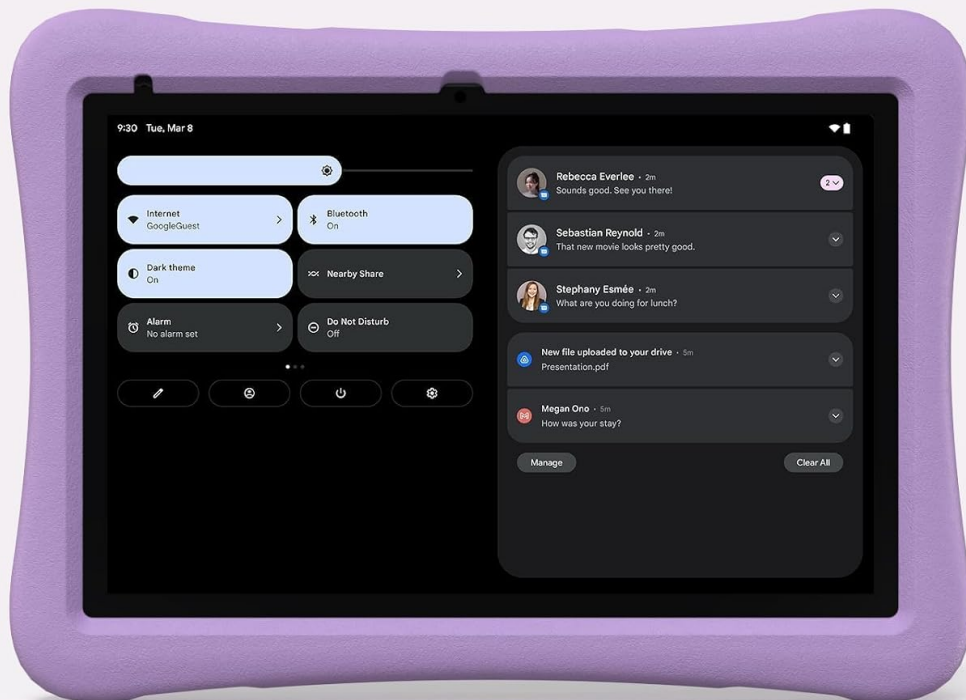 


Image: The PlimPad Kids10 tablet in its protective purple EVA case, showcasing its design.

2. SETUP

2.1 Unboxing and Initial Charge

Upon unboxing, ensure all components are present: the PlimPad Kids10 tablet, USB adapter, USB-C cable, and user manual. The tablet may come partially charged. For optimal performance, fully charge the device before first use. Connect the USB-C cable to the tablet's charging port and the adapter to a power outlet.

2.2 Power On and Wi-Fi Connection

Press and hold the power button located on the side of the tablet until the Plimpton logo appears. Follow the on-screen prompts to select your language and connect to a Wi-Fi network. A stable Wi-Fi connection is necessary for initial setup and app downloads.

2.3 Google Account Setup

You will be prompted to sign in with a Google Account. This account will be used for managing apps, parental controls, and other Google services. If you do not have one, you can create a new account during this step.

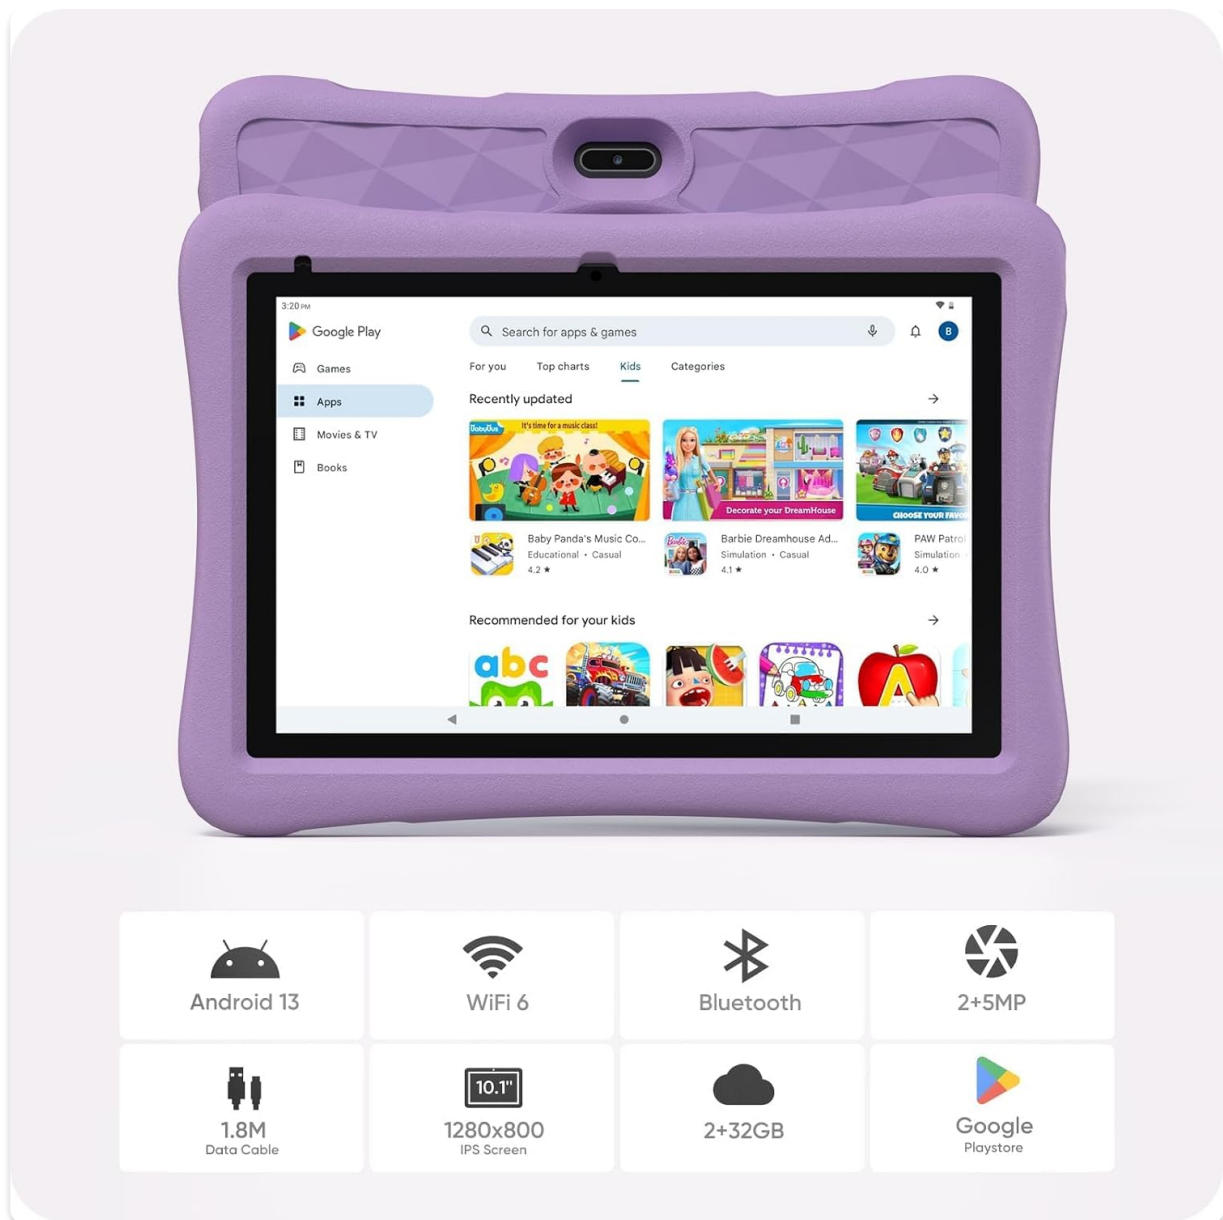 


Image: Overview of the PlimPad Kids10's core features, including its Android 13 OS and Google Playstore access.

3. OPERATING THE TABLET

3.1 Basic Navigation

The tablet operates on Android 13, offering a user-friendly interface. Swipe left or right on the home screen to access different app pages. Tap an app icon to open it. Use the navigation buttons at the bottom of the screen (Back, Home, Recent Apps) to move between applications and screens.

3.2 Google Kids Space

The PlimPad Kids10 comes pre-installed with Google Kids Space, a dedicated environment for children aged 3 and above. This platform offers teacher-approved apps, books, and videos, categorized for easy discovery. Children can engage in activities like animal coloring, crafts, storytelling, and puzzle games.

Google Kids Space

Designed with kids' curiosity in mind

 
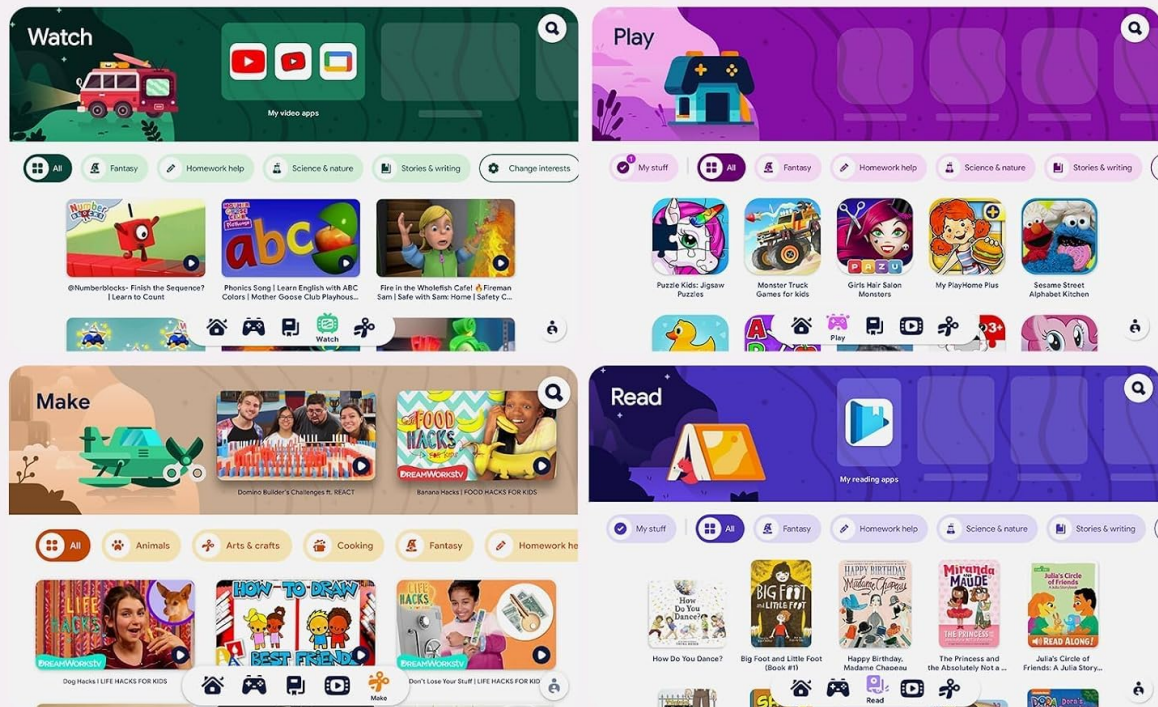 


Image: The Google Kids Space home screen, illustrating various content categories for children.

3.3 Eye Protection Mode

The 10.1-inch HD IPS glass screen features low blue light technology and an eye protection mode. This, combined with automatic brightness adjustment, helps reduce eye fatigue during extended use. The application backgrounds and icons are designed with eye-comfortable colors.

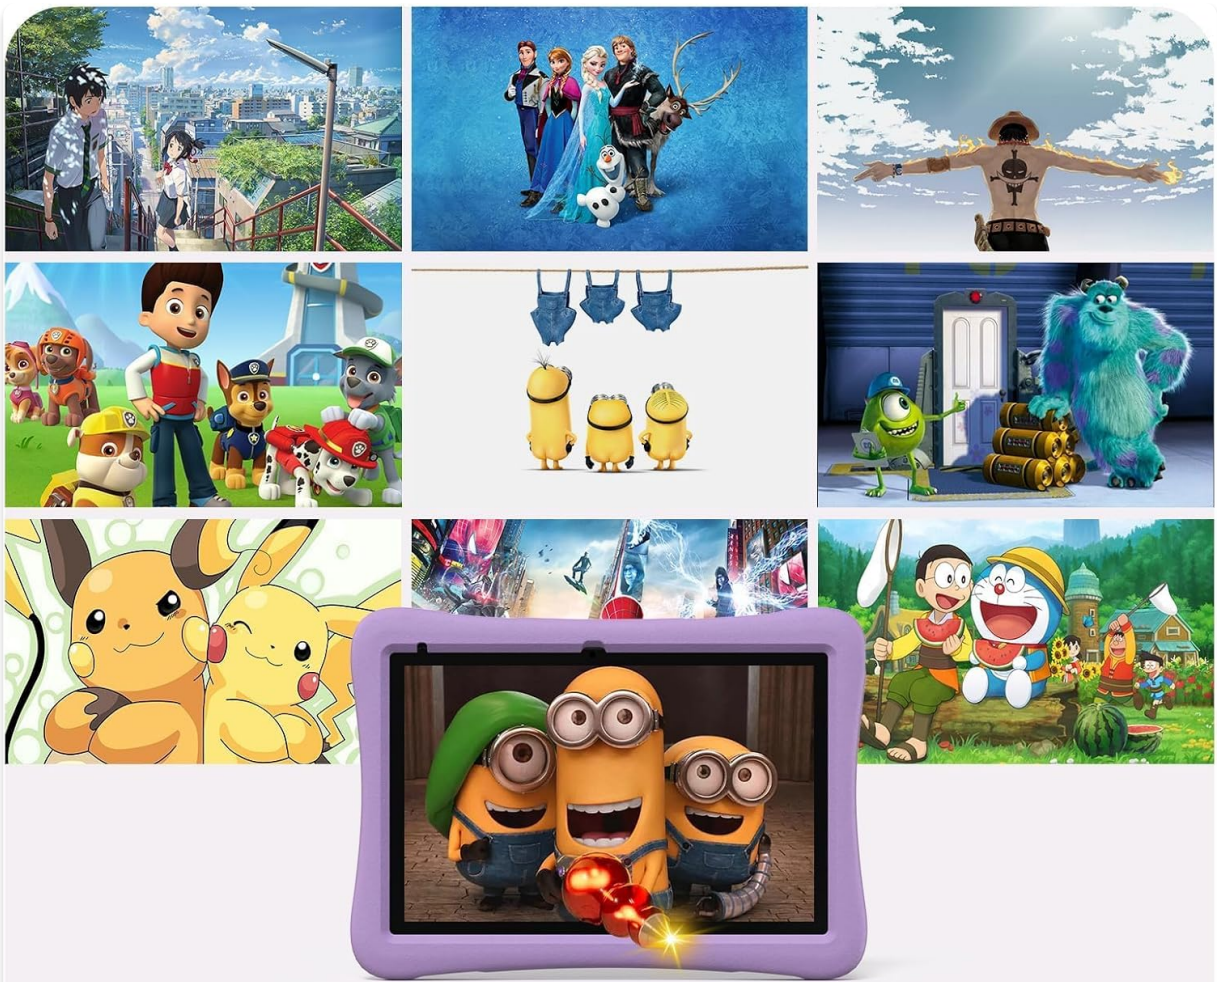

10 inch HD IPS Glass Screen

Good for Watching, Reading, Playing Game

Image: The tablet's 10-inch HD IPS glass screen displaying vibrant, child-friendly content.

4. PARENTAL CONTROLS

The PlimPad Kids10 integrates with Google's Family Link app, allowing parents to manage their child's tablet experience. This includes filtering content, setting educational goals, and establishing time limits for device usage.

4.1 Setting Time Limits

Through the Family Link app on your own device, you can set daily screen time limits and schedule downtime periods. This ensures balanced usage and promotes healthy digital habits.

4.2 Content Management

Parents can approve or block apps, manage web content, and control access to specific websites, creating a safe online environment tailored to their child's age and development.



Set boundaries with parental controls

With parental controls in the Family Link app from Google, you can guide your child's experience by managing content, setting screen time limits, and more, all from your own device.

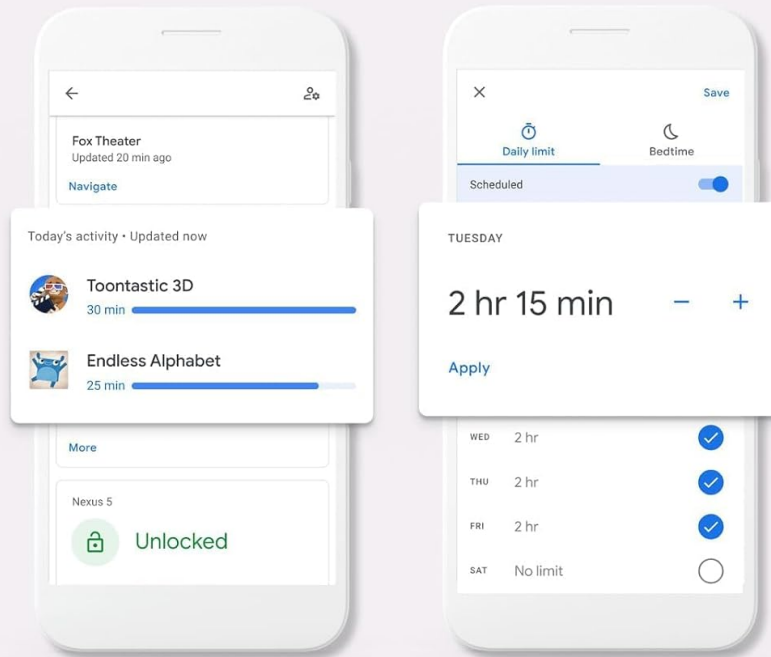 


Image: The Family Link app interface on a smartphone, demonstrating how parents can set screen time and content restrictions.

5. MEDIA INTEGRATION

5.1 Product Overview Video

Your browser does not support the video tag.

Video: An official overview of the 2023 PlimPad Kids10 Android 13 Tablet, highlighting its features and Google Kids Space integration.

6. SPECIFICATIONS

Feature	Detail
Model	PlimPad Kids 10
CPU	Allwinner A133 Pro, Quad-core ARM Cortex-A53@1.8GHz

Operating System	Android 13 (Google Certified)
RAM	2GB (6GB virtual memory)
Storage	32GB (expandable up to 512GB via Micro SD/TF card)
Screen Size	10.1 inch Multi-Touch IPS
Screen Resolution	1280x800 pixels HD
Cameras	Front 2 MP, Rear 5 MP Auto-Focus
Battery	6000 mAh Li-Polymer (up to 8 hours average life)
Connectivity	WiFi 6 (IEEE 802.11.ax, 2.4GHz+5.0GHz), Bluetooth 5.0
Ports	1x Micro SDHC/SDXC, 1x Type-C (no HDMI support), 1x 3.5mm headphone jack
Weight	1 pound
Dimensions	4.28 x 3.08 x 0.48 inches
Case Material	EVA Shockproof

7. WHAT'S IN THE BOX

- 1 x PlimPad Kids Android 13 Tablet
- 1 x USB Adapter
- 1 x USB-C Cable (6ft length)
- User Manual
- 1 x Quick Guide

8. MAINTENANCE

8.1 Cleaning

To clean the tablet screen, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaner. Avoid harsh chemicals. The EVA case can be wiped clean with a damp cloth and mild soap.

8.2 Battery Care

To prolong battery life, avoid fully discharging the tablet frequently. Charge the device using the provided adapter and cable. Do not expose the tablet to extreme temperatures.

8.3 Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to the latest features. Updates can typically be found in the tablet's Settings menu under 'System' or 'About tablet'.

9. TROUBLESHOOTING

9.1 Tablet Not Turning On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- Press and hold the power button for 10-15 seconds to perform a hard reset.

9.2 Screen Unresponsive or Frozen

- Perform a hard reset by holding the power button for 10-15 seconds.
- If the issue persists, consider a factory reset (note: this will erase all data). Back up important data before proceeding.

9.3 Wi-Fi Connectivity Issues

- Toggle Wi-Fi off and on in the tablet's settings.
- Restart your Wi-Fi router.
- Ensure the tablet is within range of the Wi-Fi signal.

10. WARRANTY AND SUPPORT

Plimpton officially provides a 2-year warranty for the PlimPad Kids10 tablet. Additionally, a 30-day worry-free return and replacement policy is offered. For any questions or technical assistance, please contact Plimpton customer support. Refer to the contact information provided in the Quick Guide or on the official Plimpton website.