#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- ANCTOR /
- > ANCTOR King Size Bed Frame Instruction Manual

#### **ANCTOR HK-KBF-016**

## **ANCTOR King Size Bed Frame Instruction Manual**

Model: HK-KBF-016 | Brand: ANCTOR

#### 1. Introduction

Thank you for choosing the ANCTOR King Size Bed Frame. This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your new bed frame. Designed for durability and convenience, this bed frame features a sturdy metal construction, a comfortable upholstered headboard, and integrated power outlets with USB ports. Please read this manual thoroughly before beginning assembly to ensure safe and proper use.



Image 1.1: The ANCTOR King Size Bed Frame, showcasing its vintage brown and gray design with a storage headboard and integrated power features.

## 2. IMPORTANT SAFETY INFORMATION

#### **WARNING:**

- Do not exceed the maximum weight limit of 1000 pounds.
- Follow the assembly instructions carefully to prevent instability or collapse.
- Do not use a box spring with this bed frame.
- Ensure all connections are secure before use. Periodically check and tighten all bolts.
- Keep small parts away from children during assembly.

## 3. PRODUCT FEATURES

• **Sturdiness:** The platform bed frame is very sturdy and does not creak, shift, or bend. It provides excellent back support when sitting up.

- Storage Headboard: The King bed features a convenient shelf to keep items like glasses, phone, and watch within easy reach at night.
- Integrated Outlet: The bed frame includes an outlet with USB ports, a practical addition for charging devices.
- Easy Assembly: The ANCTOR bed frame comes with all necessary components and can be assembled quickly, typically within one hour.
- Single Box Packaging: All components are conveniently packed in one box, eliminating the need to wait for multiple deliveries.

## 4. SPECIFICATIONS

| Attribute                | Detail   |
|--------------------------|--|
| Size                     | King (U.S. Standard)                             |
| Product Dimensions       | 85.4"L x 78"W x 39"H                             |
| Special Features         | No Box Spring Needed, Squeak Resistant, USB Port |
| Color                    | Vintage Brown and Gray                           |
| Finish Type              | Laminated  |
| Included Components      | Bookcase, Headboard, Installation Manual, Slat   |
| Compatible Mattress Size | King 76 x 80 inches (or 198 x 203 cm)            |
| Assembly Required        | Yes  |
| Ground To Item Distance  | 10.6 Inches                                      |
| Item Weight              | 73.7 pounds                                      |

# **King Size Bed**

For Mattress L 80"×W 76" Mattress Recommend : 8-12"

Weight Capacity : 1000lbs

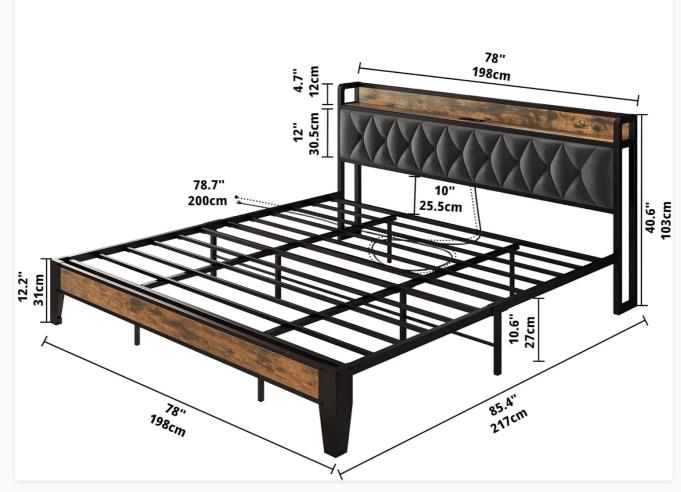


Image 4.1: Detailed dimensions and recommended mattress size for the King bed frame, along with its 1000 lbs weight capacity.

## 5. SETUP (ASSEMBLY)

The ANCTOR King Size Bed Frame is designed for straightforward assembly. All necessary tools and hardware are included in the single package. It is recommended to assemble the bed frame with two people for optimal ease and safety.

#### 5.1 Unpacking and Preparation

- 1. Carefully open the single box and remove all components. Verify that all parts listed in the installation manual are present.
- 2. Lay out all parts on a clean, soft surface (like a rug or blanket) to prevent scratches.
- 3. Familiarize yourself with the hardware and identify each piece according to the manual.



Image 5.1: Visual representation of the bed frame's tufted headboard design, solid and stable construction, and quick installation process.

#### 5.2 Assembly Steps

Refer to the detailed step-by-step instructions provided in the included Installation Manual. Key steps generally include:

- 1. Assemble the headboard and footboard sections.
- 2. Connect the side rails to the headboard and footboard.
- 3. Install the central support beam and support legs.
- 4. Place and secure the metal slats onto the frame. Ensure the anti-slip strips on the slats are facing upwards to prevent mattress movement.
- 5. Attach the power outlet unit to the designated area on the headboard.

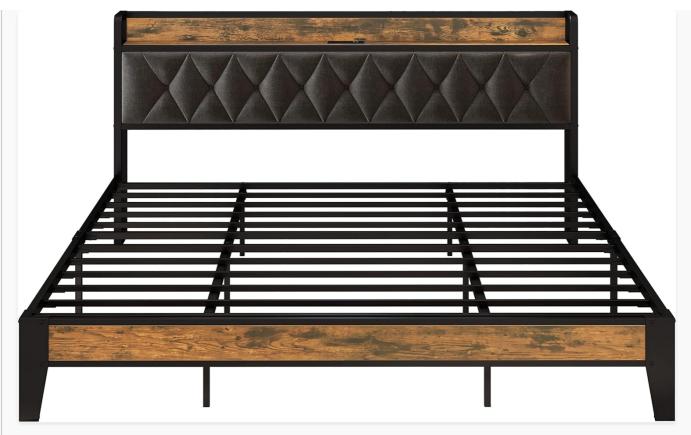


Image 5.2: The assembled bed frame structure, highlighting the robust metal frame and slat system designed to support your mattress without a box spring.

**Important:** Do not fully tighten all bolts until all components are loosely assembled. This allows for easier alignment. Once all parts are in place, go back and securely tighten all bolts.

## 6. OPERATING THE STORAGE HEADBOARD

The ANCTOR bed frame features a multi-functional headboard designed for convenience and organization.

#### 6.1 Storage Shelf

The headboard includes a built-in shelf, approximately 4.5 inches wide and 4.5 inches high, perfect for storing small personal items such as glasses, mobile phones, tablets, books, or a small alarm clock. This eliminates the need for traditional nightstands, especially in compact spaces.

#### 6.2 Integrated Power Outlets and USB Ports

The headboard is equipped with a power strip featuring 2 standard 110V/12A AC outlets and 2 USB ports (5V/2A). A 6.5-foot power cord is provided to connect the unit to a wall outlet. This allows for convenient charging of your electronic devices directly from your bed.



Image 6.1: The storage headboard in use, demonstrating the convenient placement of items and the integrated charging capabilities.



Image 6.2: A detailed view of the 110V AC outlets and 5V/2A USB ports located on the headboard for easy device charging.

Note: The integrated power outlet is not a GFCI (Ground Fault Circuit Interrupter) plug. Exercise caution to prevent liquid spills near the outlets.

#### 7. MAINTENANCE

To ensure the longevity and appearance of your ANCTOR bed frame, follow these maintenance guidelines:

- Cleaning: Wipe down the metal and laminated wood surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners. For the upholstered headboard, use a fabric cleaner suitable for the material, spot cleaning as needed.
- **Tightening Hardware:** Periodically (every 3-6 months) check all bolts and screws to ensure they remain tight. Loose hardware can lead to instability and noise.
- Weight Distribution: Avoid concentrating heavy loads on one area of the bed frame. Distribute weight evenly across the mattress.
- **Under-Bed Storage:** The 10.6-inch clearance provides ample space for storage. Utilize storage bins or boxes to keep items organized and prevent dust accumulation under the bed.



Image 7.1: Illustration of the generous under-bed clearance, ideal for storing various items in bins or boxes.

## 8. TROUBLESHOOTING

If you encounter any issues with your ANCTOR bed frame, refer to the following common solutions:

#### • Noise/Squeaking:

- Ensure all bolts and screws are securely tightened. Loose connections are the most common cause of noise.
- Check that the metal slats are properly seated and not rubbing against the frame.

#### • Instability/Wobbling:

- Re-check all connections and tighten any loose hardware.
- Verify that the bed frame is on a flat, level surface. Adjust leg levelers if applicable.

#### · Mattress Sliding:

- The bed frame's slats are designed with anti-slip strips. Ensure these strips are facing upwards.
- Verify that your mattress size (King: 76 x 80 inches) is compatible with the bed frame to minimize gaps.

#### • Power Outlets Not Working:

- Ensure the power cord is securely plugged into both the headboard unit and a functioning wall outlet.
- Check the circuit breaker in your home if other outlets are also not working.



Image 8.1: Detail of the heavy-duty metal supports, emphasizing the frame's robust construction for stability and durability.

ANCTOR products are manufactured with quality and customer satisfaction in mind. For specific warranty details regarding your bed frame, please refer to the warranty information included in your product packaging or visit the official ANCTOR website.

If you require further assistance, have questions about assembly, or need to report a missing/damaged part, please contact ANCTOR customer support through the retailer's platform or the contact information provided in your purchase documentation. Please have your model number (HK-KBF-016) and purchase date ready when contacting support.

For additional resources and product information, you may visit the ANCTOR Store on Amazon.

© 2025 ANCTOR. All rights reserved.

#### Related Documents - HK-KBF-016



#### **Anctor Bed Frame Assembly Instructions**

Step-by-step guide for assembling the Anctor bed frame with drawers, including a comprehensive parts and hardware list.



#### Anctor Puzzel Your House Furniture Assembly Instructions

Comprehensive installation guide for the Anctor Puzzel Your House furniture collection, detailing parts, accessories, and step-by-step assembly procedures for a smooth setup.



#### Furnulem HK-BF-015-CL-F LED Bed Frame User Manual & Assembly Guide

Detailed user manual and assembly instructions for the Furnulem HK-BF-015-CL-F bed frame with LED lights. Includes parts list, step-by-step assembly guide, remote control operation, and customer support information.



#### Kimba Pham Ring Sizer Guide and International Size Chart

A comprehensive guide from Kimba Pham on how to accurately measure your ring size using printable tools and an international size conversion chart.