

Bomann SBS 7344

Bomann SBS 7344 Side-by-Side Refrigerator Instruction Manual

Model: SBS 7344 | Brand: Bomann

1. IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before using your new Bomann SBS 7344 Side-by-Side Refrigerator. Keep it in a safe place for future reference. This appliance is intended for household use only. Follow all safety precautions to prevent personal injury or property damage.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Keep ventilation openings clear of obstruction.
- Unplug the appliance before cleaning or maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. SETUP AND INSTALLATION

2.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage. Report any damage to your retailer immediately. Keep packaging materials out of reach of children.

2.2 Placement

Place the refrigerator on a firm, level surface. Ensure adequate ventilation around the appliance. Allow at least 10 cm of space at the back and sides for proper air circulation. Avoid direct sunlight and heat sources. The appliance dimensions are approximately 90 cm (width) x 59 cm (depth) x 177 cm (height).



Figure 2.2.1: Appliance dimensions and key features. The refrigerator measures 90 cm in width, 59 cm in depth, and 177 cm in height. Key features include No-Frost function, Energy Efficiency Class E, Multi-Airflow System, and LED lighting & display.

The appliance is designed for ambient temperatures between 10°C and 43°C (Climate Class SN-T).

2.3 Leveling

Adjust the adjustable feet at the bottom of the appliance to ensure it is level. This prevents vibrations and ensures proper door closure.

2.4 Electrical Connection

Connect the appliance to a properly installed and grounded power outlet (230 Volts, 240 Watts). Do not use extension cords or multiple socket adapters. Allow the appliance to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

2.5 Initial Operation

After plugging in, the appliance will begin to cool. It may take several hours for the internal temperature to reach the set level. It is

recommended to clean the interior before first use.

3. OPERATING INSTRUCTIONS

3.1 Control Panel and Display

The Bomann SBS 7344 features an intuitive LED display with touch controls located on the front door. This panel allows you to adjust temperatures for both the refrigerator and freezer compartments, activate special functions, and monitor the appliance status.



Einfache Bedienung mit LED Display & Touch-Control



Figure 3.1.1: Close-up of the LED display and touch control panel. Users can adjust settings by touching the icons, and the display shows current temperatures for both compartments.

3.2 Temperature Settings

The refrigerator and freezer temperatures can be adjusted separately. Use the touch controls to select the desired temperature for each compartment. Recommended refrigerator temperature is between 2°C and 8°C, and freezer temperature is -18°C or lower.

3.3 Special Functions

- **Total NoFrost System:** This feature prevents ice build-up in both the refrigerator and freezer compartments, eliminating the need for manual defrosting.

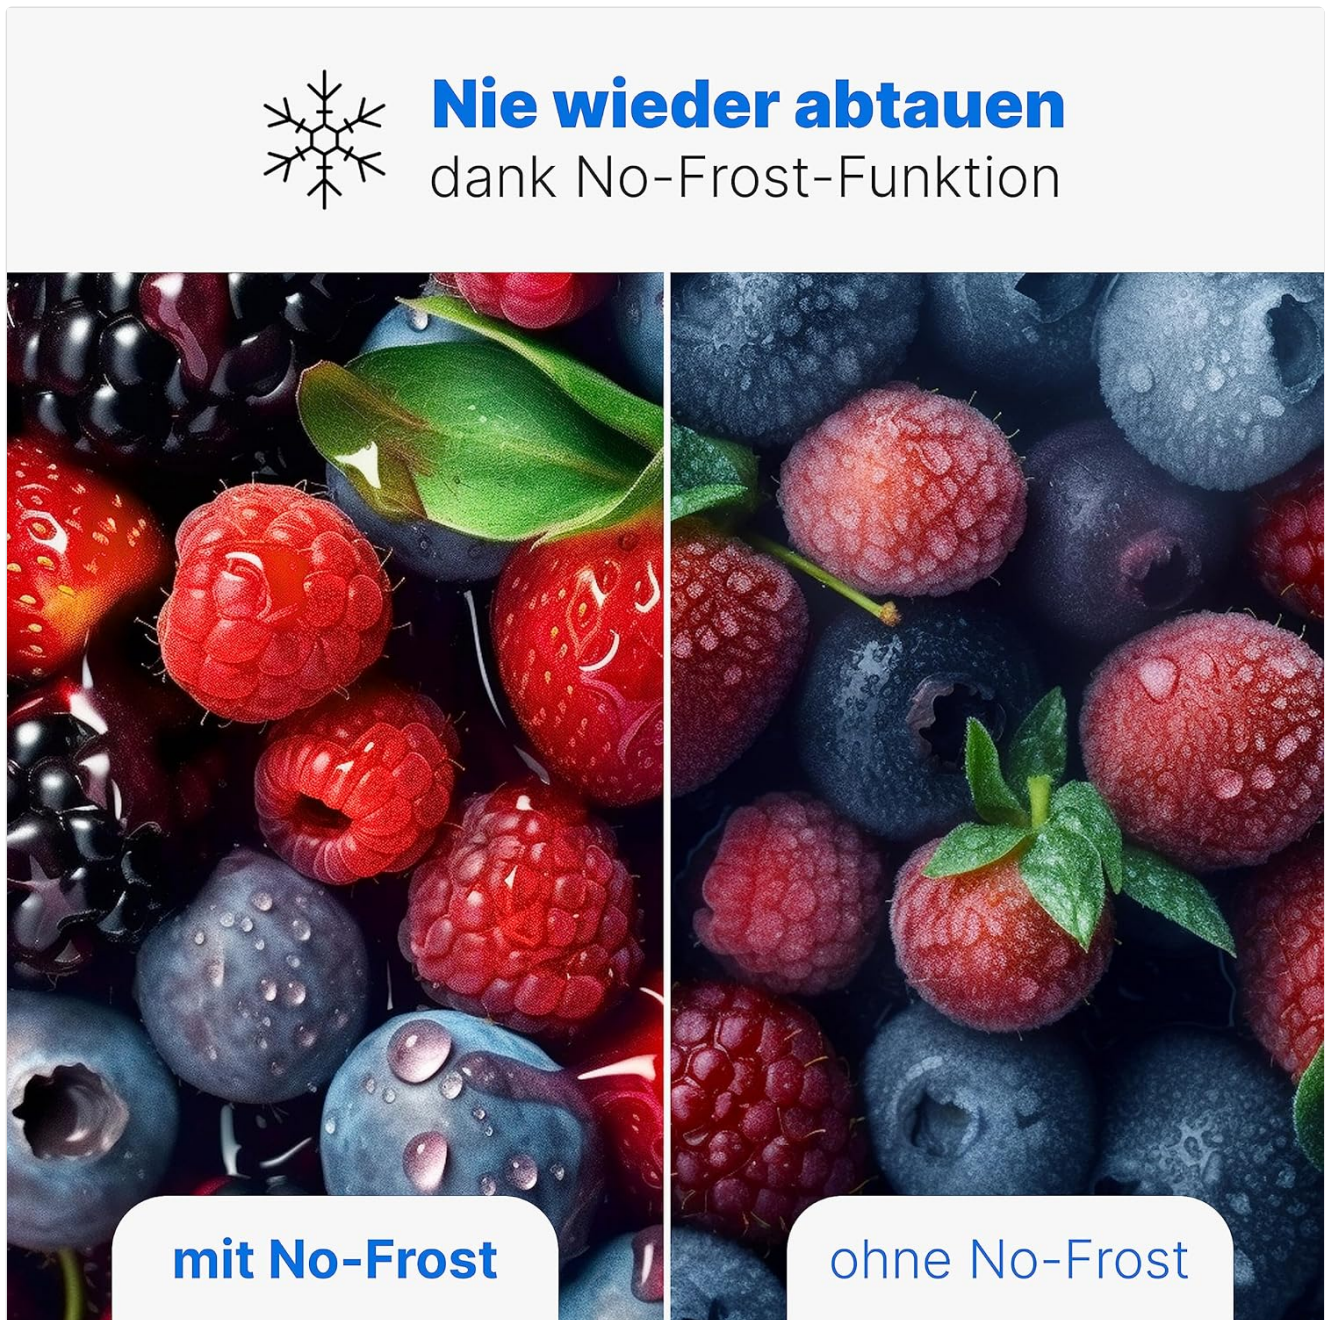


Figure 3.3.1: Visual comparison demonstrating the effectiveness of the No-Frost function, showing fresh berries without frost (with No-Frost) versus berries with frost (without No-Frost).

- **MultiAirflow System:** Ensures optimal air circulation and uniform cooling throughout both the refrigerator and freezer sections, maintaining consistent temperatures for food preservation.
- **Quick Cooling Function:** Rapidly lowers the temperature in the refrigerator compartment, ideal for cooling newly added groceries quickly.
- **Quick Freezing Function:** Accelerates the freezing process in the freezer compartment, preserving the quality and nutrients of fresh food.

Schnellkühl & Gefrierfunktion

schneller als herkömmliche Gefrierschränke



Figure 3.3.2: The Bomann SBS 7344 refrigerator in a modern kitchen, emphasizing its quick cooling and freezing capabilities, which are faster than conventional freezers.

- **Energy Saving Mode:** Optimizes energy consumption for efficient operation.

3.4 Internal Layout

The appliance offers a total capacity of 442 liters, with 291 liters for the refrigerator and 151 liters for the freezer. It includes multiple glass shelves, door bins, and three drawers for organized storage. A dedicated fruit and vegetable drawer helps maintain freshness.

Viel Platz für deine Leckereien

442 Liter: 291 L Kühlen & 151 L Gefrieren



Figure 3.4.1: The spacious interior of the Bomann SBS 7344, showing various compartments, glass shelves, and a dedicated drawer for fruits and vegetables, providing ample storage for groceries.



Figure 3.4.2: The Bomann SBS 7344 refrigerator with both doors open, providing a clear view of its extensive storage capacity and organized interior layout.

4. MAINTENANCE AND CLEANING

4.1 Cleaning the Interior

Before cleaning, always unplug the appliance. Clean the interior regularly with a soft cloth and a mild, non-abrasive detergent. Rinse with clean water and dry thoroughly. Do not use harsh chemicals or abrasive cleaners. Remove shelves and drawers for easier cleaning.

4.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. For stainless steel finishes, use a specialized stainless steel cleaner. Ensure no water enters the control panel or electrical components.

4.3 NoFrost System

The Total NoFrost system automatically prevents ice formation, so manual defrosting is not required. However, ensure that food items do not block the air vents inside the compartments to maintain optimal performance.

4.4 Door Seals

Regularly check and clean the door seals to ensure they are free from food particles and remain flexible. A clean, tight seal helps maintain energy efficiency and proper cooling.

5. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not operate.	No power supply; power cord not plugged in; circuit breaker tripped.	Check power connection; check circuit breaker; ensure outlet is functional.
Temperature is not cold enough.	Door not closed properly; frequent door opening; warm food placed inside; temperature setting too high; poor ventilation.	Ensure door is sealed; avoid frequent opening; allow hot food to cool before storing; adjust temperature setting; ensure adequate space around appliance.
Unusual noises.	Appliance not level; objects touching the back wall; normal operating sounds (e.g., refrigerant flow).	Level the appliance; ensure nothing is touching the back; some sounds are normal.
Water on the floor.	Drain hole blocked; condensation.	Clear the drain hole; wipe up condensation.
Door alarm sounds.	Door left open too long.	Close the door.

If the problem persists after checking these points, please contact qualified service personnel.

6. SPECIFICATIONS

Detailed technical specifications for the Bomann SBS 7344 Side-by-Side Refrigerator:

Feature	Value
Brand	Bomann
Model Number	SBS7344-Inox
Approximate Width	90 cm
Approximate Depth	59 cm
Approximate Height	177 cm
Weight	75 Kilograms
Total Capacity	442 Liters

Feature	Value
Refrigerator Volume	291 Liters
Freezer Volume	151 Liters
Noise Level	39 Decibels
Installation Type	Freestanding
Defrost System	No Frost
Energy Efficiency Class	E
Voltage	230 Volts
Power	240 Watts
Refrigerant	R-600A
Door Finish	Stainless Steel
Reversible Door	Yes
Number of Shelves	5 (Glass)
Number of Drawers	3

Note: Official product specifications may list slightly different dimensions (e.g., 64 cm depth, 97 cm width, 186 cm height). The dimensions provided above are based on visual information and product title for user clarity.

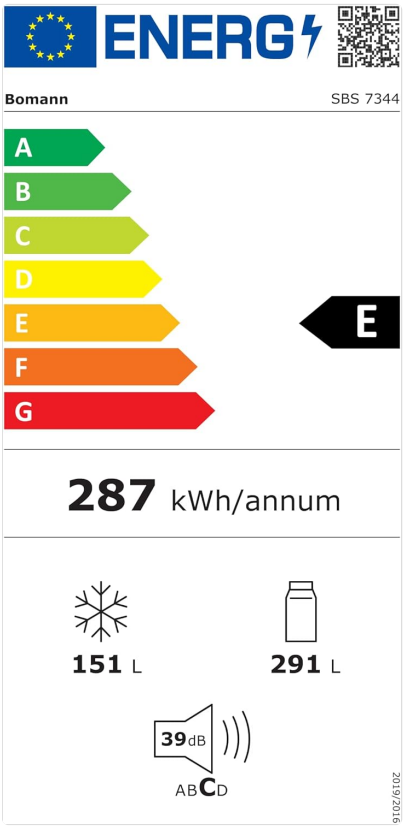


Figure 6.1: Energy label for the Bomann SBS 7344, showing an energy efficiency class of E and annual energy consumption of 287 kWh.

For more detailed information, you can refer to the [EPREL product database \(QR code link\)](#).



Figure 6.2: Official product data sheet providing comprehensive technical details and compliance information for the Bomann SBS 7344 refrigerator.

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This Bomann appliance comes with a warranty for spare parts availability for 2 years from the date of purchase. Please retain your proof of purchase for any warranty claims. The warranty covers manufacturing defects and material faults under normal household use.

7.2 Customer Support

For technical assistance, spare parts, or service requests, please contact your retailer or the authorized Bomann service center. Refer to your purchase documentation for specific contact details. When contacting support, please have your model number (SBS 7344) and serial number ready.

