

[Manuals.plus](#) /

› [Electrolux](#) /

› Electrolux EEWABL 1200W Electric Kettle User Manual

Electrolux EEWABL

Electrolux EEWABL 1200W Electric Kettle User Manual

Model: EEWABL

1. INTRODUCTION

Thank you for choosing the Electrolux EEWABL Electric Kettle. This manual provides important information regarding the safe use, operation, and maintenance of your appliance. Please read it thoroughly before first use and keep it for future reference.

The Electrolux EEWABL kettle is designed for boiling water quickly and efficiently, featuring a 1-liter capacity and 1200 watts of power. It includes an automatic shut-off function for safety and convenience.



Image 1.1: Electrolux EEWABL Electric Kettle in a kitchen setting.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions carefully before using the kettle.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the kettle base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact Electrolux customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Always ensure the lid is securely closed during operation. Scalding may occur if the lid is open during boiling.
- Do not overfill the kettle above the maximum fill line to prevent boiling water from spilling out.
- Use the kettle only with the provided power base.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Electrolux EEWABL kettle:

1. **Kettle Body:** The main vessel for heating water.
2. **Lid:** Covers the opening of the kettle.
3. **Handle:** For safe pouring and carrying.
4. **On/Off Switch:** Activates the heating element.
5. **Power Base:** Provides electrical connection and allows 360-degree rotation of the kettle.
6. **Water Level Indicator:** Shows the current water volume.
7. **Anti-scale Filter:** Located behind the spout, helps prevent limescale from entering your cup.



Image 3.1: Electrolux EEWABL Electric Kettle separated from its power base.

4. SETUP

Before using your new kettle, please follow these steps:

1. **Unpack:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future transport or storage.

2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the maximum level. Boil the water, then discard it. Repeat this process two to three times to remove any manufacturing residues.
 3. **Positioning the Base:** Place the power base on a stable, flat, heat-resistant surface, away from the edge of the countertop and out of reach of children. Ensure the power cord is not dangling.
 4. **Power Connection:** Plug the power base into a grounded 230V AC electrical outlet.
-

5. OPERATING INSTRUCTIONS

Follow these steps to boil water with your Electrolux EEWABL kettle:

1. **Fill the Kettle:** Remove the kettle from its power base. Open the lid and fill the kettle with the desired amount of fresh, cold water. Do not fill below the minimum mark or above the maximum fill line (1 liter).



Image 5.1: Interior view of the Electrolux EEWABL Electric Kettle with lid open.

2. **Close the Lid:** Ensure the lid is securely closed before placing the kettle back on the power base.
 3. **Place on Base:** Position the kettle firmly onto its power base.
 4. **Switch On:** Press the On/Off switch located on the handle or base of the kettle. An indicator light will illuminate, signifying that the kettle is heating.
 5. **Automatic Shut-off:** The kettle will automatically switch off once the water has boiled. The indicator light will turn off.
 6. **Pouring:** Carefully lift the kettle from the base and pour the hot water. Be cautious of steam and hot surfaces.
-

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

6.1 Exterior Cleaning

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the polished finish.
- Never immerse the kettle body or power base in water or any other liquid.

6.2 Descaling

Limescale buildup can affect the kettle's performance and energy efficiency. Descale your kettle regularly, especially in areas with hard water.

- Fill the kettle with a mixture of one part white vinegar and two parts water, or use a commercial descaling solution according to its instructions.
- Boil the mixture and let it stand for at least 30 minutes, or longer for heavy buildup.
- Pour out the mixture and rinse the kettle thoroughly several times with fresh water.
- If necessary, repeat the process until all limescale is removed.

6.3 Anti-scale Filter Cleaning

- The anti-scale filter can be removed for cleaning. Gently pull it upwards to detach it from its slot behind the spout.
- Rinse the filter under running water and brush off any limescale deposits.
- Reinsert the filter firmly into its position.

7. TROUBLESHOOTING

If you encounter any issues with your kettle, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply. Kettle not properly seated on base.	Check if the power cord is plugged in. Ensure the kettle is correctly placed on the power base. Check the wall outlet with another appliance.
Water is not boiling.	Kettle not switched on. Insufficient water. Limescale buildup.	Press the On/Off switch. Ensure water level is above minimum. Descale the kettle.
Kettle switches off before boiling.	Excessive limescale buildup.	Descale the kettle thoroughly.

Problem	Possible Cause	Solution
Water tastes metallic or has particles.	New kettle residue. Limescale particles.	Perform initial cleaning steps (boil and discard water several times). Descale the kettle and clean the anti-scale filter.

If the problem persists after trying these solutions, please contact Electrolux customer support.

8. SPECIFICATIONS

- **Brand:** Electrolux
- **Model:** EEWABL
- **Capacity:** 1 Litre
- **Power:** 1200 Watts
- **Voltage:** 230 Volts
- **Special Features:** Automatic shut-off, On/Off switch
- **Finish Type:** Polished

9. WARRANTY AND SUPPORT

This Electrolux EEWABL Electric Kettle comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical support, service, or to inquire about replacement parts, please contact Electrolux customer service. Contact information can typically be found on the Electrolux official website or on your product packaging. When contacting support, please have your product model number (EEWABL) and proof of purchase readily available.

