

## ReadyWired Power Cable Cord

# ReadyWired Power Cable Cord User Manual

For TCL TV Models: 49S325, 43S325, 40S325, 40S330, 32S330, 32S325, 55S41R

## 1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your ReadyWired Power Cable Cord. Please read these instructions carefully before use to ensure safe and effective performance. This power cable is designed to provide reliable power to compatible TCL TV models.

## 2. PRODUCT OVERVIEW

The ReadyWired Power Cable Cord is a replacement or spare power cable designed for specific TCL TV models. It features a standard two-prong (Type A) male plug for wall outlets and a two-slot female connector for the television's power input. The cable measures 6 feet in length, providing flexibility in placement.

### Key Features:

- Guaranteed compatibility with listed TCL TV models.
- 6-foot cable length for convenient setup.
- Durable construction for reliable power delivery.

### Compatible TCL TV Models:

- 49S325
- 43S325
- 40S325
- 40S330
- 32S330
- 32S325
- 55S41R



Image 1: The ReadyWired Power Cable Cord, coiled, displaying its two-prong male plug and two-slot female connector.

### 3. SETUP

---

Follow these steps to properly connect your ReadyWired Power Cable Cord to your TCL TV.

1. **Ensure Power is Off:** Before connecting, ensure your television is powered off and unplugged from any existing power source.
2. **Connect to TV:** Locate the power input port on your TCL TV. This is typically a two-slot receptacle. Align the two-slot female connector of the ReadyWired power cable with the TV's power input and push firmly until it is securely seated.
3. **Connect to Power Outlet:** Insert the two-prong male plug of the power cable into a standard, grounded electrical wall outlet. Ensure the connection is snug.
4. **Power On:** Once both ends are securely connected, you may power on your TCL TV.

#### Safety Precautions:

- Do not force the plug into an outlet or the connector into the TV.
- Avoid placing the cable in high-traffic areas where it could be tripped over or damaged.
- Do not use the cable if it appears damaged or frayed.
- Ensure the power outlet is easily accessible for quick disconnection if needed.



Image 2: The ReadyWired Power Cable Cord extended, illustrating the full length and both connector types.

## 4. OPERATING

---

The ReadyWired Power Cable Cord functions by providing electrical power to your compatible TCL TV. Once properly connected to both the television and a live electrical outlet, the cable continuously supplies power, allowing the TV to operate normally. No specific operational steps are required for the cable itself beyond ensuring a secure and stable connection.

## 5. MAINTENANCE

---

Proper care of your power cable will ensure its longevity and safe operation.

- **Cleaning:** Disconnect the cable from both the TV and the wall outlet before cleaning. Wipe the cable and connectors with a dry, soft cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use, coil the cable loosely. Avoid tight coiling or bending, which can damage the internal wires. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the cable for any signs of wear, cuts, fraying, or damage to the plugs. If any damage is observed, discontinue use immediately and replace the cable.

## 6. TROUBLESHOOTING

---

If your TCL TV is not powering on after connecting the ReadyWired Power Cable Cord, consider the following troubleshooting steps:

- **Check Connections:** Ensure both ends of the power cable are fully and securely inserted into the

TV's power port and the wall outlet.

- **Verify Power Outlet:** Test the wall outlet with another device (e.g., a lamp or phone charger) to confirm it is receiving power. If the outlet is not working, try a different one or check your home's circuit breaker.
- **Inspect Cable for Damage:** Carefully examine the entire length of the power cable for any visible signs of damage, such as cuts, kinks, or exposed wires. If damage is found, the cable should not be used.
- **TV Power Button:** Ensure the TV's power button has been pressed or the remote control is functioning correctly.
- **Consult TV Manual:** Refer to your TCL TV's original user manual for specific power-related troubleshooting steps for the television unit itself.

## 7. SPECIFICATIONS

Specification	Detail
Brand	ReadyWired
Model	Power Cable Cord
Compatibility	TCL TV Models: 49S325, 43S325, 40S325, 40S330, 32S330, 32S325, 55S41R
Cable Length	6 feet
Connector Gender	Male-to-Male (AC plug to C7 connector)
Plug Format	Type A (US 2-prong)
Color	Black
Item Weight	16 ounces
ASIN	B0C4MR9PC9
Date First Available	September 29, 2016

## 8. WARRANTY AND SUPPORT

The ReadyWired Power Cable Cord comes with a **90-day warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or any questions regarding your ReadyWired product, please contact the manufacturer or your retailer directly. Please have your purchase information and product details available when contacting support.