

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Mcbazel](#) /
- › [Mcbazel PhotoFast 247 Dual Auto Catcher Instruction Manual](#)

Mcbazel MP-010402

Mcbazel PhotoFast 247 Dual Auto Catcher Instruction Manual

Model: MP-010402

INTRODUCTION

The Mcbazel PhotoFast 247 Dual Auto Catcher is an accessory designed to enhance your gameplay experience by automating certain in-game actions. This device supports simultaneous connection to two mobile phones, offering features such as automatic Pokémon catching, PokéStop spinning, and an auto-tap function for raids and gyms. It is compatible with both iOS and Android devices.



Image: The Mcbazel PhotoFast 247 Dual Auto Catcher, a circular device with '247 Dual Catcher' logo.

PACKAGE CONTENTS

Verify that all items are present in your package:

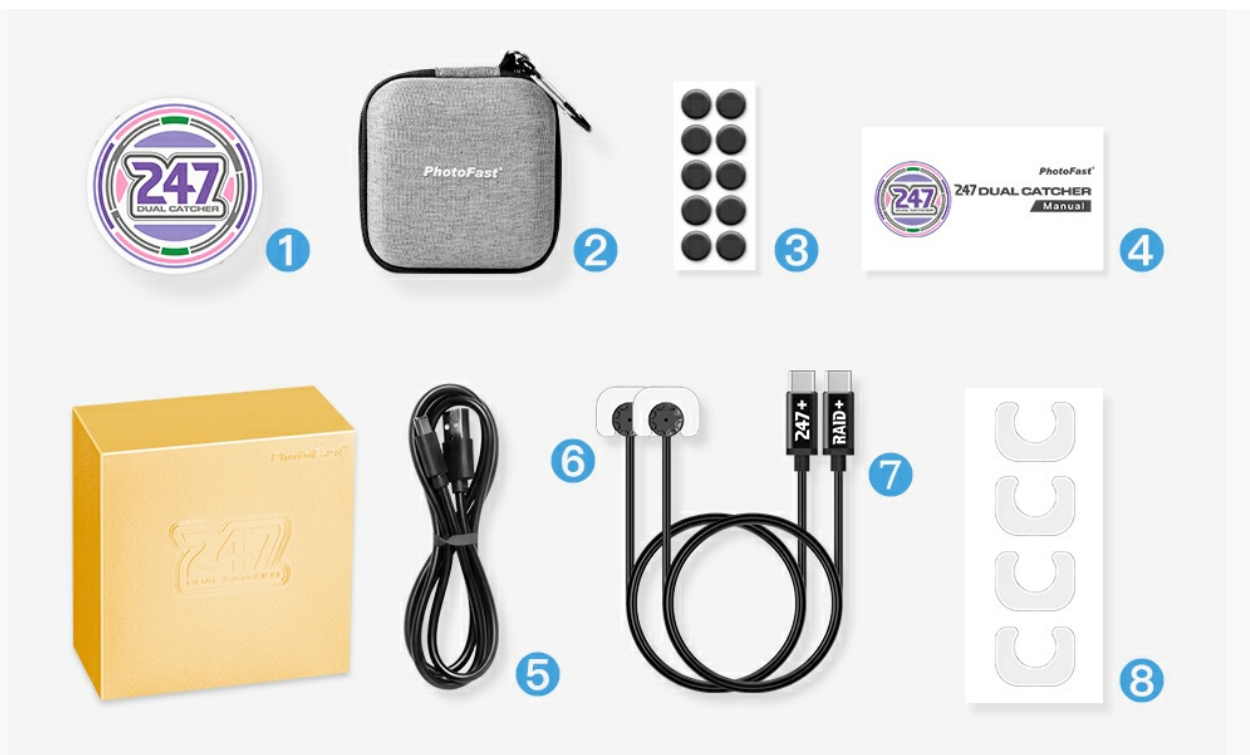


Image: A visual representation of the package contents, including the 247 Dual Catcher, soft shell bag, spare conductive patches, user manual, USB-C cable, auto-tap holders, and nano stickers.

- 247 Dual Catcher (x1)
- Soft shell bag (x1)
- Spare conductive patch (x10)
- User manual (x1)
- USB-C cable (x1)
- Auto-tap holder (x2)
- 247 cable (x2)
- Nano sticker (x4)

HARDWARE AND SYSTEM REQUIREMENTS

To ensure proper functionality, your smartphone must meet the following specifications:

Hardware & System Requirements

A smartphone with low-energy Bluetooth support
and the GO app installed

iPhone



**iPhone 7 or newer models,
running iOS 13 or later**

Android



**Android 7.0 or higher, with 4
GB RAM or more, and Blue-
tooth 4.0 or later**

Image: A graphic illustrating the minimum system requirements for both iPhone and Android devices to use the 247 Dual Auto Catcher.

- Smartphone with low-energy Bluetooth support.
- Pokémon Go application installed.
- **For iOS:** iPhone 7 or newer models, running iOS 13 or later.
- **For Android:** Android 7.0 or higher, with 4 GB RAM or more, and Bluetooth 4.0 or later.

SETUP

Connecting to iOS (Player 1)

1. Turn on the 247 Dual Catcher using the POWER 1 switch.
2. Open the Pokémon Go application on your iPhone.
3. Tap the Poké Ball button, then navigate to SETTINGS → Connected Devices and Services → Accessory Devices.
4. Tap the "Pokémon Go Plus - Not Paired" button.
5. Tap "Pair" when prompted. The device should now be connected.

Connecting to Android (Player 2)


1. Turn on the 247 Dual Catcher using the POWER 2 switch.
2. Open the Pokémon Go application on your Android phone.
3. Tap the Poké Ball button, then navigate to SETTINGS → Connected Devices and Services → Accessory Devices.
4. Tap the "Pokémon Go Plus - Not Paired" button.
5. Tap "Pair & Connect" then "Pair" when prompted. The device should now be connected.

For Android users, to avoid the pairing dialogue, you may consider downloading the PoGo+LE app from [Google Play Store](#). Note that PoGo+LE is not developed by PhotoFast and compatibility may vary.

Achieve 247 on Android phones

Use PoGo+LE to avoid the pairing dialogue

1 Download PoGo+LE

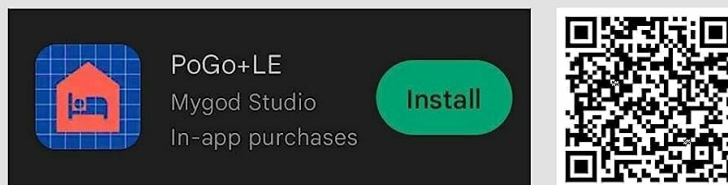

To avoid annoying pairing dialogue on Android phones

PoGo+LE is not developed by PhotoFast, might not be compatible with all kinds of Android phones

2 Skipping the pairing dialogue



Image: Instructions for Android users to download PoGo+LE and skip the Bluetooth pairing dialogue.


Resetting the Device

How to reset

All the instructions are using Account 1 to demonstrate


1

Go to the "Settings" on your Go app, tap GO Plus eject icon to disconnect the pairing.




2

Once the pairing is disconnected, the 247 Catcher's blue light starts to blink and beep 3 times.




3

Press the "Reset" button on the side. (Long press for 3 sec)



4

The 247 Catcher's rainbow light starts to blink to indicate that it is preparing to get into the re-pair process. (It will blink for 10- 20 sec before it is ready to be paired again.)



5

Factory reset completes when the rainbow blinking has stopped and beeps 1 time.

When the 247 Catcher's white light starts to blink, please follow the user manual pairing on your smartphone.




Image: A visual guide demonstrating the five steps to reset the 247 Dual Catcher.

1. Go to the "Settings" on your Pokémon Go app, tap the GO Plus eject icon to disconnect the pairing.
2. Once disconnected, the 247 Dual Catcher's blue light will blink and beep 3 times.
3. Press the "Reset" button on the side of the device (long press for 3 seconds).
4. The 247 Dual Catcher's rainbow light will blink for 10-20 seconds, indicating it is preparing for re-pairing.
5. Factory reset is complete when the rainbow blinking stops and the device beeps once. When the white light blinks, follow the user manual for a new Bluetooth pairing.

Video: How to Connect Dual Accounts

Your browser does not support the video tag.

Video: A step-by-step demonstration on how to connect two separate Pokémon Go accounts to the 247 Dual Auto Catcher simultaneously.

OPERATING INSTRUCTIONS

Auto Catch and Spin

The 247 Dual Auto Catcher automatically catches Pokémon and spins PokéStops. Ensure the Pokémon

Go app is updated to the latest version for optimal performance.

24/7 Connection Function

The device features an auto-reconnect function that extends beyond the typical one-hour connection limit, allowing for continuous play. To utilize this feature, connect the provided 247 cable to the device, ensuring the "247+" side is facing up. Place the auto-tap holder accurately on your screen, centered over the Go+ item icon.

Simulate human finger tapping design

Choose 247 or Raid mode freely



Front side

Auto-catch without disconnection



Reverse side

Auto-tap continuously function

Image: A visual guide demonstrating the connection of the 247+ cable for continuous auto-catch and the RAID+ cable for auto-tap functionality.

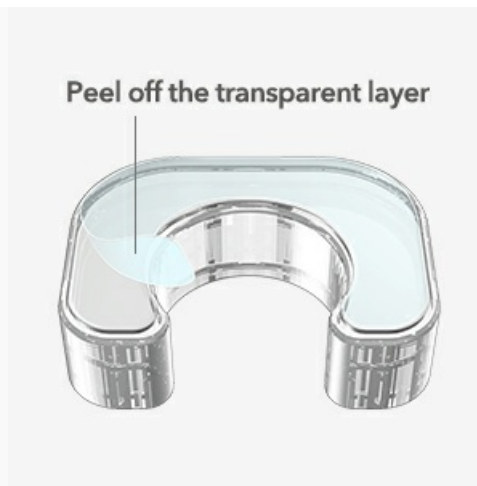 


Image: Instructions to peel off the transparent protective layer from the auto-tap holder before use.

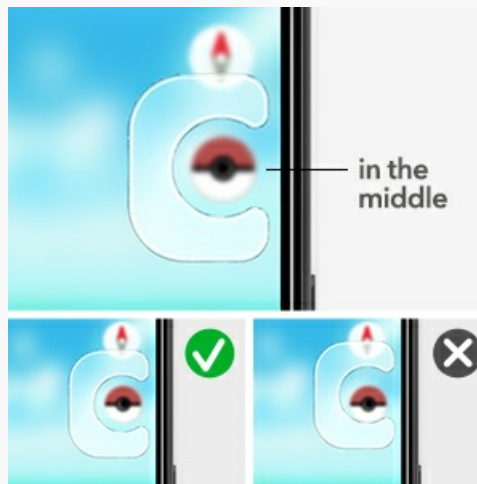 


Image: A visual guide demonstrating the correct placement of the auto-tap holder, centered over the Go+ item icon on the screen.

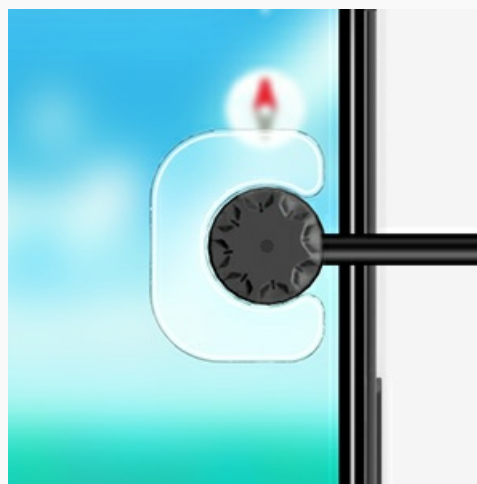


Image: The auto-tap cable connected to the holder, which is positioned on the phone screen for continuous tapping.

Auto-Tap for Raids and Gyms

For raid and gym battles, connect the provided 247 cable with the "RAID+" side facing up. This will enable continuous auto-tapping on your screen, simulating human finger input.

Using with One or Two Phones

The 247 Dual Auto Catcher is designed to work with either one or two phones simultaneously. Each side of the device (Power 1 and Power 2) can be connected to a separate phone.

Non-stop catching pokemons on 2 phones



Simulate human finger-tapping static electricity
Auto reconnect immediately when it's disconnected

Image: The 247 Dual Auto Catcher connected to two smartphones, demonstrating its dual-account functionality for non-stop catching.

Dual Accounts x Dual Auto-tap connectors

Auto-tap for two raids
simultaneously



Image: A graphic showing the 247 Dual Catcher with two auto-tap connectors attached to two separate phones, enabling simultaneous auto-tapping for raids.

Play Pokemon Go without Auto-tap connector

Use on 1 Phone



Use on 2 Phones



Image: The 247 Dual Auto Catcher shown in use with one phone and two phones, illustrating its versatility even without the auto-tap connectors.

User Notifications

The device includes a built-in LED indicator to show the catch status. It also features vibrating and beeping functions that can be toggled on or off according to user preference.

Video: How to use 247 Dual Catcher to stay connected 24 hours

Your browser does not support the video tag.

Video: A demonstration of how to set up the 247 Dual Auto Catcher with the 247 cable and auto-tap holder to maintain a continuous 24-hour connection for automatic gameplay.

MAINTENANCE

Charging the Device

The 247 Dual Auto Catcher is rechargeable via a USB Type-C cable. A full charge can provide up to 120 hours of operation. Do not use the device while it is charging.



Image: A close-up of the device's side, highlighting the USB-C charging port, sound switch, and vibrate switch.

Replacing Conductive Patches

After extended use, the conductive patch on the auto-tap holder may wear out. Replace it with one of the additional conductive patches included in the package.

TROUBLESHOOTING

Important Notes

✓ Use the Right Charger:

Please do not use the device while it is charging. Keep it away from extreme temperatures and moisture.

Troubleshooting:

If you encounter any charging issues, please try a different USB cable and power source (like a computer USB port) to identify the problem.



Image: A graphic providing important notes and troubleshooting advice, including charging issues and environmental considerations.

- **Connection Problems:** Ensure your Pokémon Go app is updated to the latest version. Try deleting paired Bluetooth connections in your phone's settings and in Pokémon Go, then reset your 247 Catcher.
- **Auto-Tap Accuracy:** Place the auto-tap holder precisely on your screen, then insert the auto-tap into the holder.
- **Auto-Tap Holder Not Working:** The nanogel adhesive can be restored and reused by washing it with water.
- **Charging Issues:** If you encounter charging problems, try a different USB cable and power source (e.g., a computer USB port) to identify the issue.
- **Poké Ball Usage:** The 247 Dual Catcher only uses standard Poké Balls to catch Pokémon. It does not use Great Balls or Ultra Balls.
- **Environmental Factors:** Keep the device away from extreme temperatures and moisture.

SPECIFICATIONS


Item Model Number	MP-010402
Product Dimensions	3.66 x 3.46 x 1.57 inches
Item Weight	3.52 ounces
Batteries	1 Lithium Polymer battery required (included)
Manufacturer	Photofast






WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Mcbazel website or contact their customer service directly. Keep your purchase receipt for any warranty claims.

© 2025 Mcbazel. All rights reserved.

Related Documents - MP-010402

	<p>PLZ 108 Single Din Car Stereo Installation Manual - Apple CarPlay, Android Auto, Bluetooth</p> <p>Comprehensive installation guide for the PLZ 108 Single Din Car Stereo, featuring Wireless Apple CarPlay, Android Auto, Bluetooth 5.3, a 10.1" touch screen, backup camera support, and advanced audio capabilities.</p>
---	---

	<p>PLZ Portable Car Play Screen User Manual: Installation and Connectivity Guide</p> <p>Comprehensive user manual for the PLZ Portable Car Play Screen, detailing installation and connection procedures for Apple CarPlay, Android Auto, AirPlay, and Android Cast. Enhance your driving experience with seamless smartphone integration.</p>
	<p>IVAR MULTI•PRESS@ User Manual: Hydronic Press Fitting System</p> <p>Comprehensive user manual for the IVAR MULTI•PRESS@ system, detailing installation, specifications, compatibility, and technical data for hydronic press fittings used in climate control and sanitary systems.</p>
	<p>Telescopic Screen CarPlay Manual - User Guide</p> <p>Comprehensive user manual for the Telescopic Screen CarPlay MP5 Player, covering specifications, installation, troubleshooting, and features like Apple CarPlay and Android Auto.</p>
	<p>NAGAOKA MP Series Stereo Cartridge Operation Manual</p> <p>Comprehensive operation manual for NAGAOKA MP Series stereo cartridges, detailing installation, stylus replacement, specifications, usage precautions, and warranty information for models MP-500, MP-300, MP-200, MP-150, and MP-110.</p>
	<p>TAC MP-5200 Series Electronic Hydraulic Actuator General Instructions and Specifications</p> <p>Comprehensive guide to TAC MP-5200 Series electronic hydraulic actuators, covering applications, features, specifications, installation, wiring, troubleshooting, and replacement parts. Includes detailed technical information for HVAC control systems.</p>