

[Manuals.plus](#) /

> [ULTRA PARTS](#) /

> OEM Replacement Remote Control Instruction Manual

ULTRA PARTS Onn. Roku Remote (N/D/A/H)

ULTRA PARTS OEM Replacement Remote Control Instruction Manual

Model: Onn. Roku Remote (N/D/A/H)

INTRODUCTION

This manual provides comprehensive instructions for the ULTRA PARTS OEM Replacement Remote Control, designed specifically for ONN. Roku TV Smart 4K Ultra HDTV models. This remote offers a seamless replacement experience, requiring no programming or pairing. Simply insert batteries and begin use.





Image: Front view of the ULTRA PARTS OEM Replacement Remote Control, showing its buttons and sleek black design.

COMPATIBILITY

This remote control is an OEM replacement designed to be compatible with all ONN. Roku TV Smart 4K Ultra HDTV models. It features dedicated shortcut buttons for popular streaming services: Netflix, Disney Plus, Apple TV+, and Hulu.

Compatible Models:

- All ONN. Roku TV Smart 4K Ultra HDTV models.
- Specifically tested with models: 100005395, 100005396, 100005397, 100005842, 100005843, 100005844, 100007147, 100012584, 100012585, 100012586, 100012587, 100012588, 100012589, 100012590, 100018971, 100021261, 100024699, 100044717, 100058007, 100068372, 100069454, 100069992, 100071700, 100071705, 100074926, 3226000855, 3226000858, 3226001051.

Important Compatibility Notes:

This remote control is NOT compatible with:

- Roku Stick/Player
- Roku Box 1/2/3/4 (HD/LT/XS/XD)
- Roku Express/Roku Premiers
- Other brand TVs (only works with ONN. Roku TVs)
- This remote does NOT have a headphone jack, pairing button, or voice search functionality.



Compatible with all Onn. "Roku TVs"



Not Compatible with

- > Roku Stick / Player
- > Roku Box 1 / 2 / 3 / 4 (HD / LT / XS / XD)
- > Roku Express
- > Roku Premiers
- > Roku Ultra



Image: Visual representation of compatible ONN. Roku TV models and incompatible Roku devices like sticks and boxes.

SETUP

The ULTRA PARTS OEM Replacement Remote Control requires no programming or pairing. Simply install two AAA alkaline batteries to begin use.

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for immediate use with your ONN. Roku TV.



Image: Illustration demonstrating the correct insertion of two AAA batteries into the remote control's battery compartment.

OPERATING INSTRUCTIONS

Familiarize yourself with the various buttons and their functions on your new remote control.



Image: Detailed diagram labeling each button on the remote control and its corresponding function.

Button Functions:

Button	Function
Power Button	Turns the TV on or off.
Back Button	Returns to the previous screen or menu.

Button	Function
Home Button	Navigates to the Roku TV home screen.
Directional Pad (Up/Down/Left/Right) & OK	Navigates menus and selects items.
Instant Replay Button	Replays the last few seconds of video.
Sleep Mode Button	Activates or deactivates sleep timer/mode.
Options Button	Accesses additional options or settings.
RWD Scan Button	Rewinds video playback.
Play/Pause Button	Plays or pauses video playback.
FWD Scan Button	Fast forwards video playback.
Netflix Shortcut Button	Direct access to the Netflix application.
Disney Plus Shortcut Button	Direct access to the Disney Plus application.
Apple TV+ Shortcut Button	Direct access to the Apple TV+ application.
Hulu Shortcut Button	Direct access to the Hulu application.
Volume Up Button	Increases the TV volume. (Side button)
Volume Down Button	Decreases the TV volume. (Side button)
Mute Button	Mutes or unmutes the TV audio. (Side button)

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact. Dropping the remote can damage internal circuitry.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

Remote Not Responding:

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace both AAA batteries with new ones.
- **Line of Sight:** Ensure there is a clear line of sight between the remote control and the IR receiver on your ONN. Roku TV. Obstructions can block the signal.
- **Distance:** Make sure you are within the effective range of the remote control.
- **TV Power:** Confirm that your ONN. Roku TV is powered on and not in standby mode.

Specific Button Not Working:

- **Clean Button:** Gently press the problematic button multiple times. If there's debris, try cleaning around the button with a dry, soft cloth.
- **Battery Check:** Even if some buttons work, low batteries can cause inconsistent performance. Replace batteries.

Remote Not Controlling Roku Stick/Box:

- **Compatibility:** This remote is designed exclusively for ONN. Roku TVs and is not compatible with Roku Sticks, Roku Boxes, or other Roku streaming devices. Please refer to the "Compatibility" section for details.

If these steps do not resolve the issue, please contact customer service for further assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	5.5 x 1.7 x 1 inches
Item Weight	1.94 ounces
Model Number	Onn. Roku Remote (N/D/A/H)
Batteries Required	2 AAA batteries (not included)
Color	Black
Compatible Devices	Onn. Roku TVs, Television
Special Feature	Onn. Roku Remote Control

5.50 inch



1.57 inch



0.79 inch

Image: Visual representation of the remote control's dimensions (length, width, thickness).

WARRANTY AND SUPPORT

This OEM replacement remote control is designed for high quality and stable performance. While specific warranty details are not provided in this manual, if you have any questions or require professional assistance regarding the compatibility or functionality of this remote control, please do not hesitate to contact our customer service.

We are committed to ensuring your satisfaction with our products.