



[Manuals.plus](#) /

› [PUROSUR](#) /

› Instruction Manual for PUROSUR Replacement Charger

PUROSUR 1611736

Instruction Manual for PUROSUR Replacement Charger

Model: 1611736

INTRODUCTION

This manual provides essential information for the safe and effective use of your PUROSUR Replacement Charger. This charger is designed to be compatible with various Bissell Pet Stain Eraser Cordless Portable Carpet Cleaners. Please read this manual thoroughly before using the product to ensure proper operation and to prevent damage.



Image: The PUROSUR Replacement Charger, featuring its power adapter and DC barrel connector, positioned alongside three Bissell Pet Stain Eraser Cordless Portable Carpet Cleaners in different colors.

SAFETY INFORMATION

Always observe the following safety precautions to reduce the risk of fire, electric shock, or injury:

- Use the charger only with compatible devices as specified in this manual.
- Do not expose the charger to water or excessive moisture.

- Do not disassemble, modify, or attempt to repair the charger. Refer to qualified service personnel.
- Avoid using the charger if the cable or plug is damaged.
- Unplug the charger from the power outlet when not in use or before cleaning.
- Ensure proper ventilation around the charger during operation.
- Keep out of reach of children.



Image: A visual representation of the charger's built-in safety features, including protection against overcurrent, overcharge, short circuit, high temperature, overload, and overvoltage.

PACKAGE CONTENTS

The package includes the following item:

- 1 x Replacement 10V charger for Bissell Pet Stain Eraser Cordless





Image: A top-down view of the PUROSUR Replacement Charger, showing the power adapter and the neatly coiled charging cable.

COMPATIBILITY

This 10V charger is specifically designed for Bissell Pet Stain Eraser Cordless Portable Carpet Cleaners. It is compatible with the following models and replaces the specified part numbers:

- **Compatible Models:** 2002, 20028, 2002Q, 2003, 20033, 2003A, 2003T, 2054, 2164A, 21641, 20037
- **Replaces Part Numbers:** 1611736, 161-1736, SIL, Model SSA-100060US

Please verify your device's model or part number to ensure compatibility before use.

Compatible Models:

2002, 20028, 2002Q, 2003, 20033, 2003A, 2003T, 2054, 2164A, 21641, 20037



Model: 20037



Model: 2003T



Model: 2164A



Model: 2054



Model: 2002Q

Image: A graphic illustrating several compatible Bissell Pet Stain Eraser models, including 20037, 2003T, 2164A, 2054, and 2002Q, to help users identify their device.

High Quality Charger for Bissell Pet Stain Eraser Portable Carpet Vacuum

COMPATIBLE WITH:



Model: 2003T



Model: 2164A



Model: 20037

Image: An A+ content image highlighting compatible Bissell Pet Stain Eraser models: 2003T, 2164A, and 20037.



Image: An A+ content image displaying further compatible Bissell Pet Stain Eraser models: 2054, 2005Z, and 2002Q.

SPECIFICATIONS

Feature	Detail
Input	AC 100V-240V
Output	DC 10V 630mA (compatible with 7.2V)
Type	Class 2 power supply
Plug Type	US standard
Product Dimensions	2 x 3 x 4 inches
Item Weight	2.89 ounces
Model Number	1611736
Color	BLACK
Connectivity Technology	DC Barrel
Mounting Type	Wall Mount

SETUP

- 1. Identify the Charging Port:** Locate the charging port on your Bissell Pet Stain Eraser Cordless Portable Carpet Cleaner. This is typically a circular port designed for a DC barrel connector.
- 2. Connect the Charger:** Insert the DC barrel connector of the PUROSUR Replacement Charger firmly into the charging port of your Bissell device. Ensure the connection is secure.
- 3. Plug into Power Outlet:** Plug the charger's power adapter into a standard AC 100V-240V wall outlet.
- 4. Verify Connection:** Once plugged in, your device should indicate that it is charging (e.g., a charging indicator light may illuminate).



Image: A close-up view of the DC barrel connector, which plugs into the Bissell Pet Stain Eraser.

OPERATING INSTRUCTIONS

Once the charger is properly set up, it will begin charging your Bissell Pet Stain Eraser. The charging process is automatic.

- Allow sufficient time for your device to fully charge. Refer to your Bissell device's original manual for typical charging times.
- The charger is designed with overcurrent, overvoltage, short circuit, and over-temperature protections for safe and efficient charging.
- Unplug the charger from the wall outlet and the device once charging is complete or if the device will not be used for an extended period.



Image: A composite image showing the Bissell Pet Stain Eraser in use for cleaning pet stains on carpet and car upholstery, with the charger centrally displayed.

MAINTENANCE

- **Cleaning:** Disconnect the charger from the power outlet and the device before cleaning. Wipe the charger with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

- **Storage:** Store the charger in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically inspect the charger cable and plug for any signs of wear, cuts, or damage. If damage is observed, discontinue use and replace the charger.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not charging	Charger not properly connected to device or outlet. Outlet is not live. Device or charger fault.	Ensure both ends of the charger are securely plugged in. Test the outlet with another device. Verify device compatibility. If issues persist, contact support.
Charger feels hot	Normal operation (slight warmth). Overload or fault.	A slight warmth is normal. If it's excessively hot or emitting smoke/smell, unplug immediately and discontinue use.
Charger light not on (if applicable)	No power to charger. Charger fault.	Check power outlet. Ensure secure connections. If no light, charger may be faulty.

WARRANTY AND SUPPORT

PUROSUR stands by the quality of its products. This charger comes with:

- **30-Day Money-Back Guarantee:** If you are not satisfied with your purchase within 30 days, you may return it for a full refund.
- **One Year Risk-Free Warranty:** This product is covered by a one-year warranty against manufacturing defects.

For any questions, concerns, or warranty claims, please contact PUROSUR customer support through the retailer's platform where the product was purchased.