

[Manuals.plus](#) /

> [OSVO](#) /

> Portable Dryer, Compact Dryer with Stainless Steel Inner Tub, 1000w Electric Dryer, Rotary Control Button for Easy Operation, Load Capacity 8.8lbs, for Apartment, Home

OSVO GDZ40-410SS

OSVO Portable Compact Dryer User Manual

Model: GDZ40-410SS

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your OSVO Portable Compact Dryer, Model GDZ40-410SS. Designed for compact spaces, this dryer offers premium quality drying with a stainless steel inner tub and a 1000W electric motor. Its versatile design allows for mounting on top of a washer, wall mounting, or standalone placement, making it ideal for apartments and homes with limited space.

2. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance to prevent injury and property damage. Keep this manual for future reference.

- **Electrical Safety:** Ensure the dryer is connected to a properly grounded 120V, 1000W electrical outlet. Do not use extension cords or adapters.
- **Ventilation:** Ensure adequate ventilation around the dryer. Do not block air vents.
- **Flammable Materials:** Do not dry items that have been soiled with cooking oils, gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- **Children and Pets:** Keep children and pets away from the dryer during operation.
- **Lint Filter:** Clean the lint filter before or after each load to prevent fire hazards and maintain drying efficiency.
- **Overloading:** Do not overload the dryer. The maximum drying capacity is 8.8 lbs (wet clothes), with a recommended quick drying capacity of 5 lbs.
- **Installation:** Follow installation instructions carefully, whether freestanding, wall-mounted, or stacked.
- **Maintenance:** Disconnect power before performing any maintenance or cleaning.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your OSVO Portable Compact Dryer.



Figure 3.1: Front view of the OSVO Portable Compact Dryer, showing its compact design and large black door.



Figure 3.2: Dimensions of the OSVO Portable Compact Dryer. Height: 61cm (24 inches), Length: 49cm (19.3 inches), Width: 43cm (16.5 inches).



Figure 3.3: Key components of the dryer. Includes the Operating Panel, Handle, Door Lock, Air Intake Strainer, and Inner Barrel (stainless steel drum).

Key Features:

- **Compact Design:** Ideal for small living spaces, apartments, and homes.
- **Stainless Steel Inner Tub:** Durable and gentle on fabrics.
- **Rotary Control Button:** Simple and intuitive operation.
- **8.8 lbs Capacity:** Suitable for small to medium loads.
- **1000W Power:** Efficient drying performance.

- **Odor Purification:** Air-drying function helps remove odors and keep clothes fresh.
- **High-Temperature Pasteurization:** For hygienic drying and disinfection.

4. SETUP AND INSTALLATION

The OSVO Portable Compact Dryer offers flexible installation options:

- **Freestanding:** Place the dryer on a stable, level surface. Ensure adequate space around the unit for ventilation.
- **Stacking:** The dryer can be placed on top of a compatible washing machine. Ensure the washer is stable and can support the dryer's weight (approximately 38.5 lbs).
- **Wall Mounting:** For wall mounting, use a sturdy wall mount kit (not included) and ensure the wall can support the dryer's weight. Follow the wall mount kit's instructions carefully.

Electrical Connection:

Connect the dryer to a dedicated 120V, 60Hz, 1000W grounded electrical outlet. Do not share the outlet with other high-power appliances. Ensure the power cord is not pinched or damaged.

5. OPERATING INSTRUCTIONS

Operating your OSVO dryer is straightforward with its rotary control button.

1. **Prepare Laundry:** Ensure clothes are thoroughly spun in a washing machine to remove excess water. Unload clothes and shake them out to prevent tangling.
2. **Load Dryer:** Open the dryer door and load clothes into the stainless steel inner tub. Do not exceed the recommended load capacity of 5 lbs for quick drying, or 8.8 lbs maximum for wet clothes. Overloading can reduce drying efficiency and damage the dryer.
3. **Close Door:** Firmly close the dryer door until it latches securely.
4. **Select Drying Mode:** Use the rotary control button on the operating panel to select your desired drying mode. Common modes may include:
 - **Standard Dry:** For everyday cottons and mixed fabrics.
 - **Delicate/Gentle Dry:** For sensitive fabrics requiring lower heat.
 - **Air Dry/Odor Purification:** For refreshing clothes without heat, removing odors.
 - **High Heat/Sanitize:** For items requiring high-temperature drying and disinfection.
5. **Start Cycle:** Once the mode is selected, the dryer will begin operation.
6. **End of Cycle:** The dryer will automatically stop when the cycle is complete. Carefully open the door and remove dried clothes.
7. **Clean Lint Filter:** Always clean the lint filter after each use (refer to Maintenance section).

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your dryer.

6.1. Cleaning the Lint Filter

The lint filter is located inside the dryer drum, near the door opening. It is crucial to clean this filter before or after every load.

1. Open the dryer door.

2. Locate the lint filter (refer to Figure 3.3 for location of Air Intake Strainer).
3. Remove the filter by pulling it out.
4. Peel off any accumulated lint from the filter screen.
5. Rinse the filter under running water if necessary, and allow it to dry completely before reinserting.
6. Reinsert the clean filter firmly into its slot.

6.2. Cleaning the Exterior

Wipe the exterior surfaces of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.3. Cleaning the Inner Drum

Occasionally, wipe the inside of the stainless steel drum with a damp cloth to remove any residue. For stubborn stains, a mild non-abrasive cleaner can be used, followed by wiping with a clean, damp cloth.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Dryer does not start.	No power; Door not closed properly; Cycle not selected.	Check power cord connection and outlet; Ensure door is latched; Select a drying cycle.
Clothes are not drying.	Lint filter clogged; Overloaded; Incorrect cycle selected; Poor ventilation.	Clean lint filter; Reduce load size; Select appropriate drying mode; Ensure adequate airflow around dryer.
Dryer is noisy.	Unbalanced load; Foreign object in drum; Dryer not level.	Redistribute clothes; Check drum for loose items; Ensure dryer is on a level surface.
Odor from dryer.	Lint buildup; Residue in drum; Items with strong odors.	Clean lint filter thoroughly; Wipe drum with damp cloth; Use Odor Purification cycle.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Specification	Detail
Model	GDZ40-410SS
Brand	OSVO
Dimensions (L x W x H)	19.3 x 16.5 x 24 inches (49 x 43 x 61 cm)
Weight	38.5 pounds (17.46 kg)
Rated Input Power	1000W
Voltage	120 Volts

Specification	Detail
Max Drying Capacity	8.8 lbs (wet clothes)
Recommended Drying Capacity	5 lbs (for quick drying)
Noise Level	58 dB
Installation Type	Freestanding, Wall-mountable, Stackable
Material	ABS Control Panel, Stainless Steel Drum, Plastic Door window, PCM body
Certification	ETL

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact OSVO customer service directly. Keep your purchase receipt for warranty claims.

For technical assistance or service inquiries, please visit the official OSVO website or contact their support line.

