

[Manuals.plus](#) /

> [GEEZER](#) /

> GEEZER Wired USB Keyboard User Manual

GEEZER B0C4PJ6VQC

GEEZER Wired USB Keyboard User Manual

Model: B0C4PJ6VQC

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your GEEZER Wired USB Keyboard. Designed for comfort and efficiency, this full-size keyboard features retro-style round keycaps and a wired USB connection for stable performance across various operating systems.



Image: Top-down view of the GEEZER Wired USB Keyboard, showcasing its black frame, colorful round keycaps (pink, orange, yellow, white), and the attached USB cable.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- GEEZER Wired USB Keyboard
- USB Cable (pre-attached)
- Keycap Puller
- User Guide (this document)

SETUP INSTRUCTIONS

The GEEZER Wired USB Keyboard is designed for simple plug-and-play functionality, requiring no additional driver software installation.

1. **Unpack the Keyboard:** Carefully remove the keyboard and its accessories from the packaging.
2. **Connect to Your Device:** Locate an available USB-A port on your computer (PC, Laptop, Desktop, Mac, Chromebook, Smart TV). Insert the USB connector of the keyboard into the USB port.

USB Cable Connection

No driver software required



No Need Batteries

Image: The GEEZER Wired USB Keyboard with its USB cable connected to a laptop, illustrating the simple plug-and-play setup.

3. **System Recognition:** Your operating system (Windows XP/X/Win 7/8/10/2000/ME Vista, iOS OS, etc.) will automatically detect and configure the keyboard. This process typically takes a few seconds.

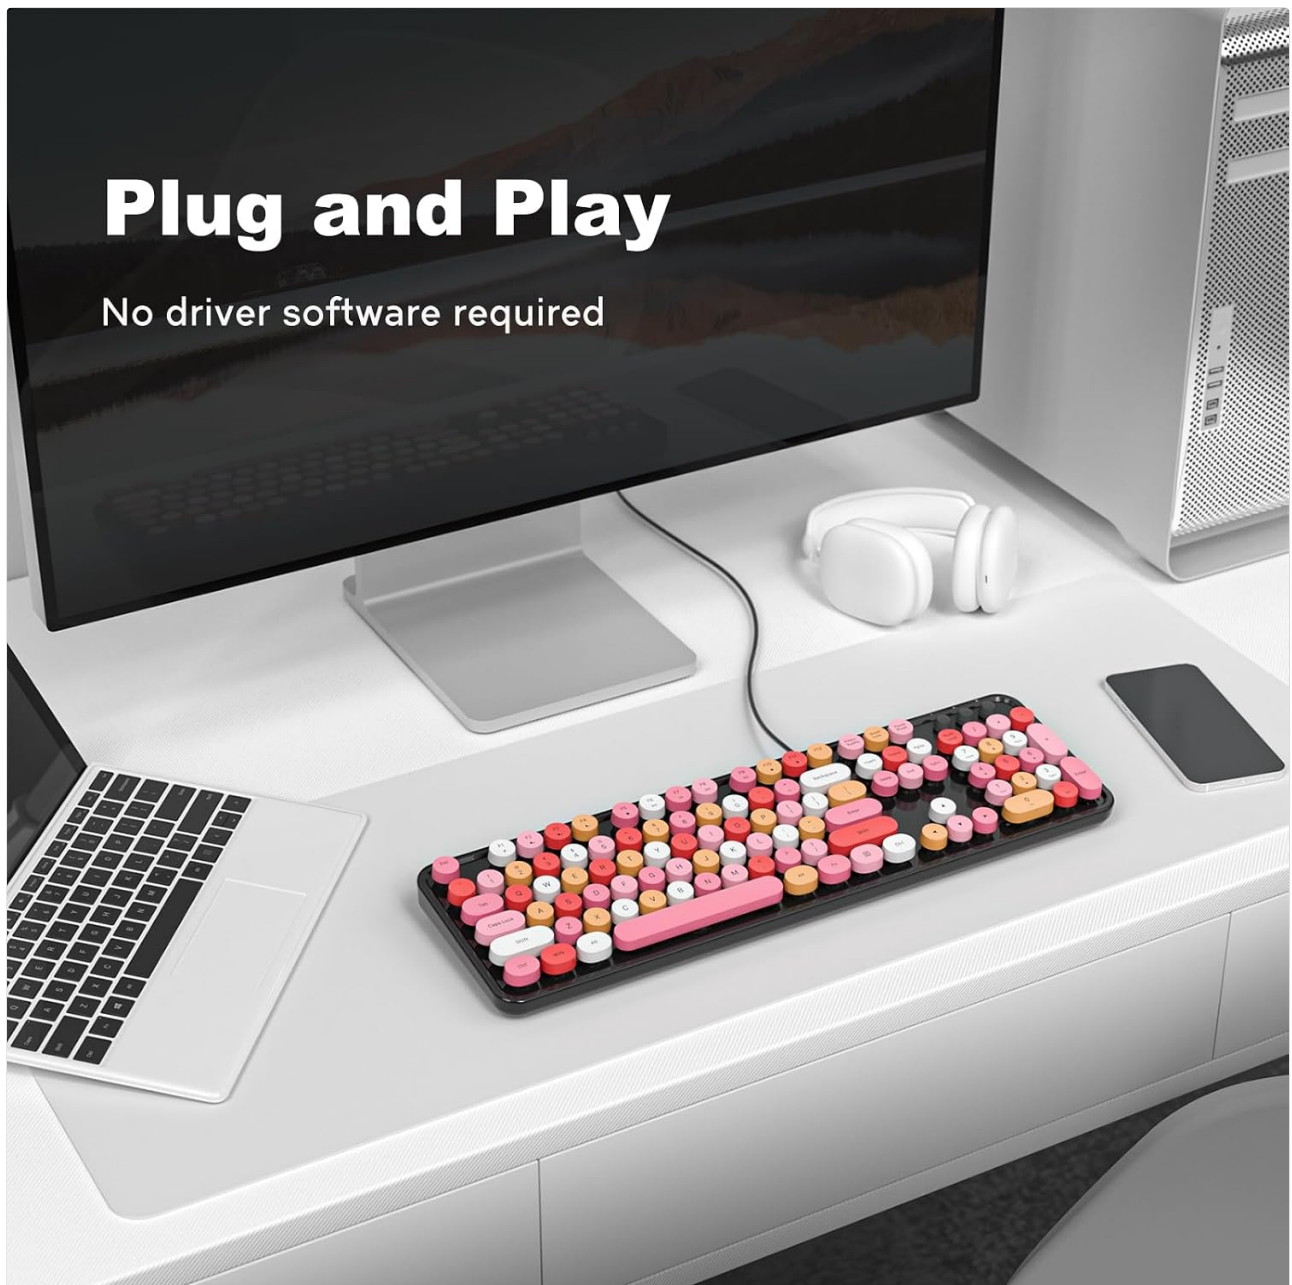 


Image: The GEEZER Wired USB Keyboard positioned on a desk next to a monitor and laptop, emphasizing its immediate readiness for use upon connection.

4. **Begin Typing:** Once recognized, the keyboard is ready for immediate use. No batteries are required as it is powered directly via the USB connection.

OPERATING INSTRUCTIONS

General Use

The GEEZER keyboard features a standard 104-key layout with full-size round keycaps, providing a comfortable and familiar typing experience. The floating button design contributes to a smooth touch and quiet operation.

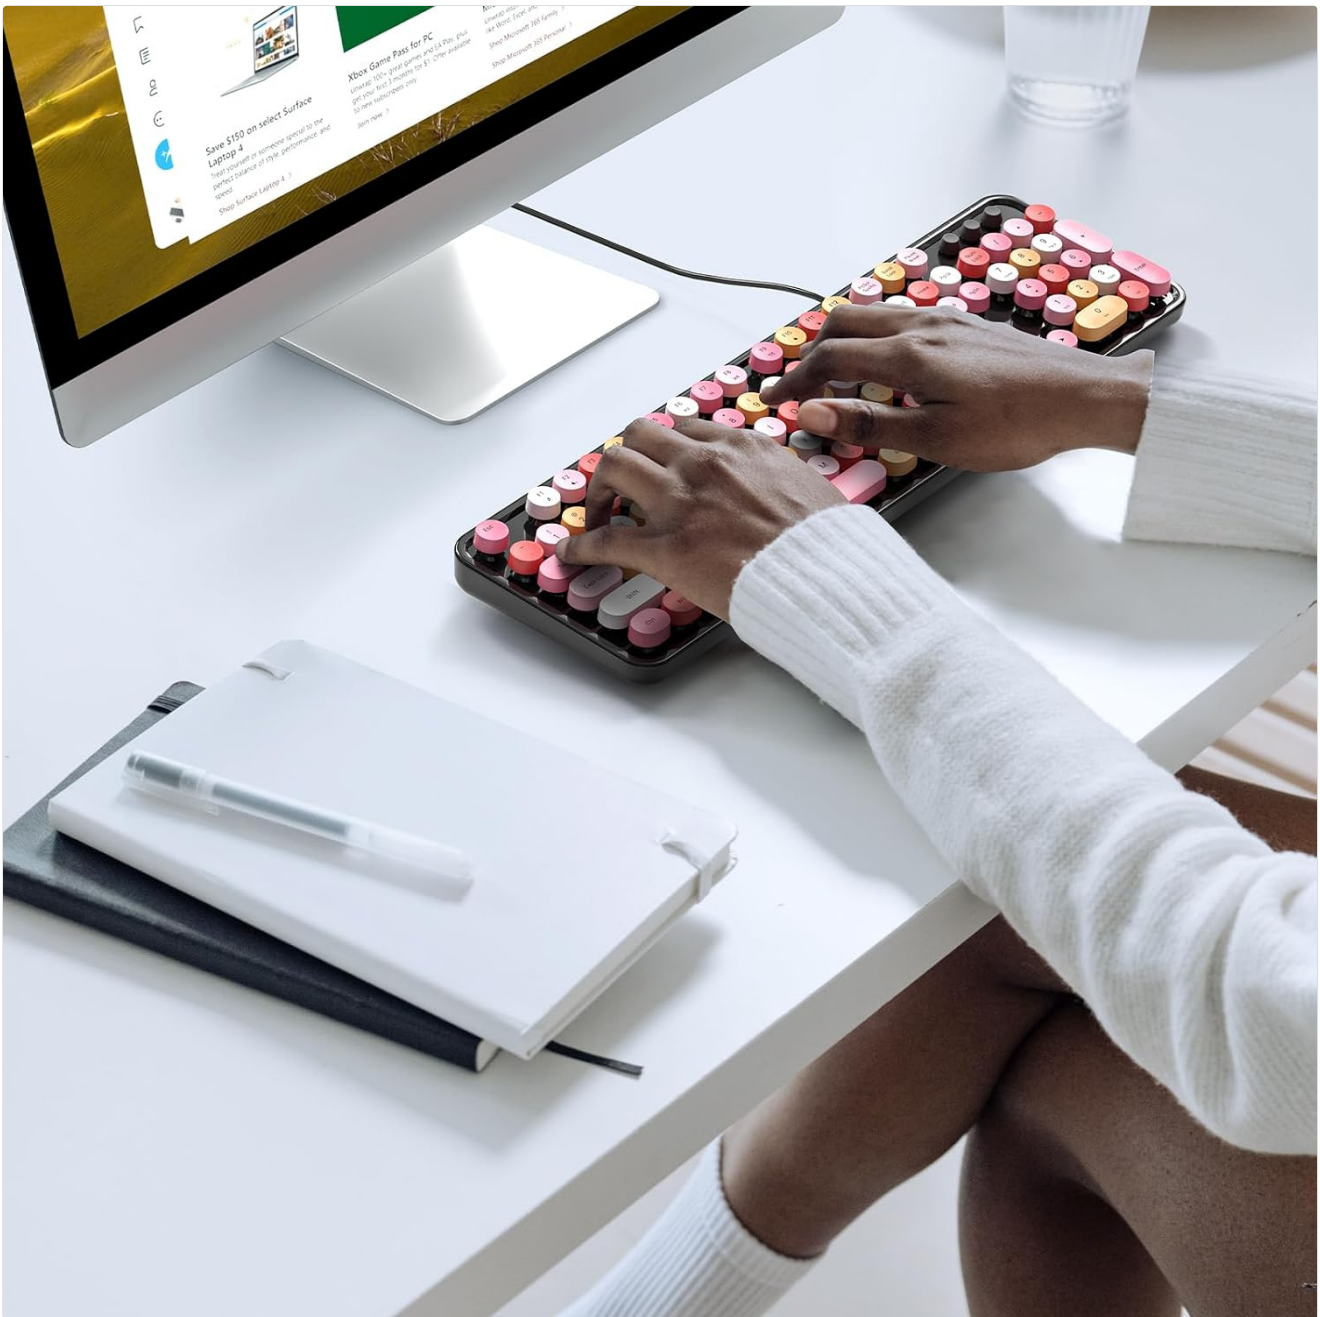 


Image: A person's hands are shown typing on the GEEZER Wired USB Keyboard, demonstrating its ergonomic design and ease of use during operation.

Function (FN) Key Combinations

The keyboard includes a Function (FN) key that, when pressed in combination with the F1-F11 keys, provides quick access to various media and system controls. Refer to the table below for specific functions:

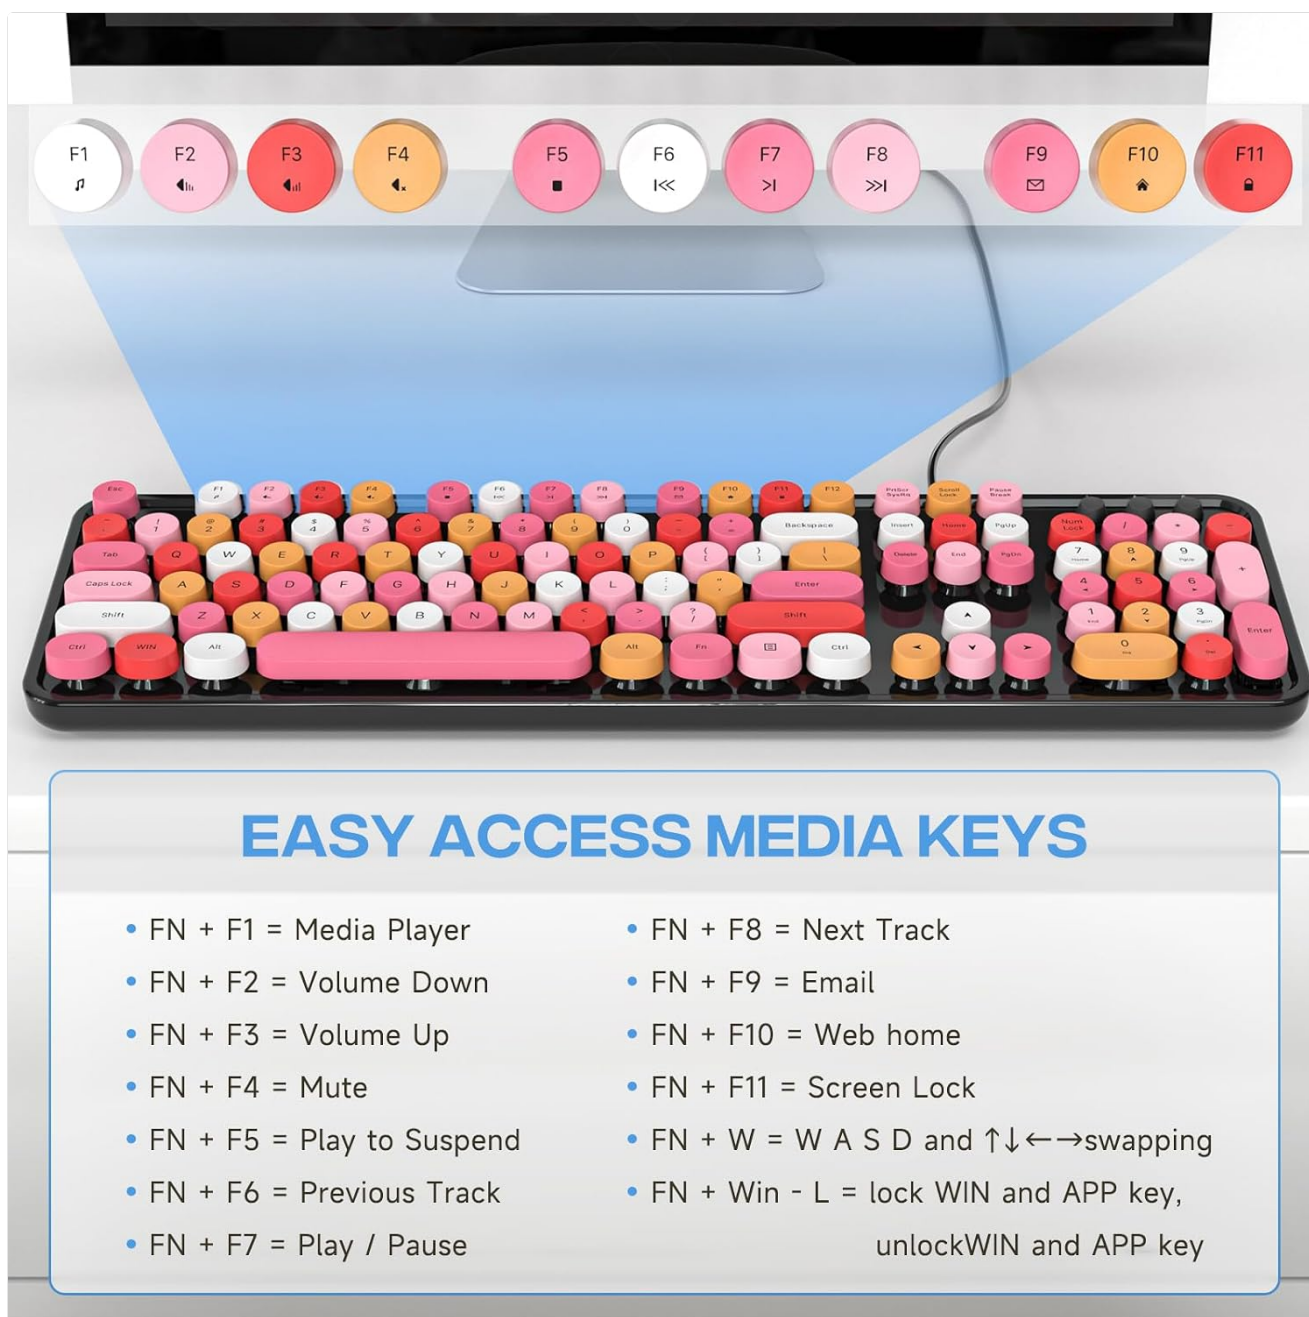 


Image: A visual guide highlighting the Function (FN) key combinations on the GEEZER Wired USB Keyboard, detailing shortcuts for media playback, volume control, and system functions.

FN Key Functions

Key Combination	Function
FN + F1	Media Player
FN + F2	Volume Down
FN + F3	Volume Up
FN + F4	Mute
FN + F5	Play to Suspend
FN + F6	Previous Track
FN + F7	Play / Pause

Key Combination	Function
FN + F8	Next Track
FN + F9	Email
FN + F10	Web Home
FN + F11	Screen Lock
FN + W	W A S D and ↑↓←→ swapping
FN + Win	Lock WIN and APP key, unlock WIN and APP key

MAINTENANCE

Regular cleaning and proper care will extend the lifespan of your GEEZER keyboard.

- **General Cleaning:** Use a soft, dry cloth to wipe down the surface of the keyboard. For deeper cleaning, a slightly damp cloth can be used, ensuring no liquid enters the key switches.
- **Keycap Cleaning:** The keycaps are detachable for thorough cleaning. Use the included keycap puller to carefully remove individual keycaps. Clean the keycaps with a mild cleaning solution and a soft brush, then ensure they are completely dry before reattaching.



Detachable Keycaps

Include a brush to deep clean for the keyboard

Image: The GEEZER Wired USB Keyboard with several keycaps removed, showing the included cleaning brush, which facilitates deep cleaning of the keyboard.

- **Under Keycap Cleaning:** Use the provided brush to remove dust, crumbs, and debris from underneath the keycaps and around the key switches.
- **Storage:** When not in use, store the keyboard in a clean, dry environment away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your GEEZER Wired USB Keyboard, please refer to the following common solutions:

Common Issues and Solutions

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Keyboard not responding	◦ Ensure the USB cable is securely plugged into a working USB port on your computer. ◦ Try plugging the keyboard into a different USB port. ◦ Restart your computer. ◦ Check if the issue persists on another computer to rule out a device-specific problem.
Keys are sticky or unresponsive	◦ Clean the keycaps and the area underneath them using the provided keycap puller and brush. Debris can interfere with key operation. ◦ Ensure keycaps are properly seated after cleaning.
Lag between typing and display	◦ While rare for wired keyboards, ensure your computer's system resources are not overutilized. Close unnecessary applications. ◦ Try a different USB port, especially a direct port on the motherboard if using a desktop.

If the problem persists after attempting these solutions, please contact GEEZER customer support.

SPECIFICATIONS

GEEZER Wired USB Keyboard Specifications

Feature	Detail
Brand	GEEZER
Model	B0C4PJ6VQC
Connectivity Technology	USB-A (Wired)
Number of Keys	104
Keycap Style	Round, Retro Typewriter
Color	Black colorful
Material	Plastic
Compatible Devices	Laptop, PC (Windows XP/X/Win 7/8/10/2000/ME Vista, iOS OS, Chrome-Book, Smart TV)
Recommended Uses	Business, Personal, Student
Item Weight	1.81 pounds (approx. 0.82 kg)
Package Dimensions	17.83 x 6.42 x 1.85 inches (approx. 45.3 x 16.3 x 4.7 cm)

Feature	Detail
Date First Available	May 9, 2023

RETRO FULL SIZE

Keyboard with Numerical Keypad

USB Cable Length: 65in

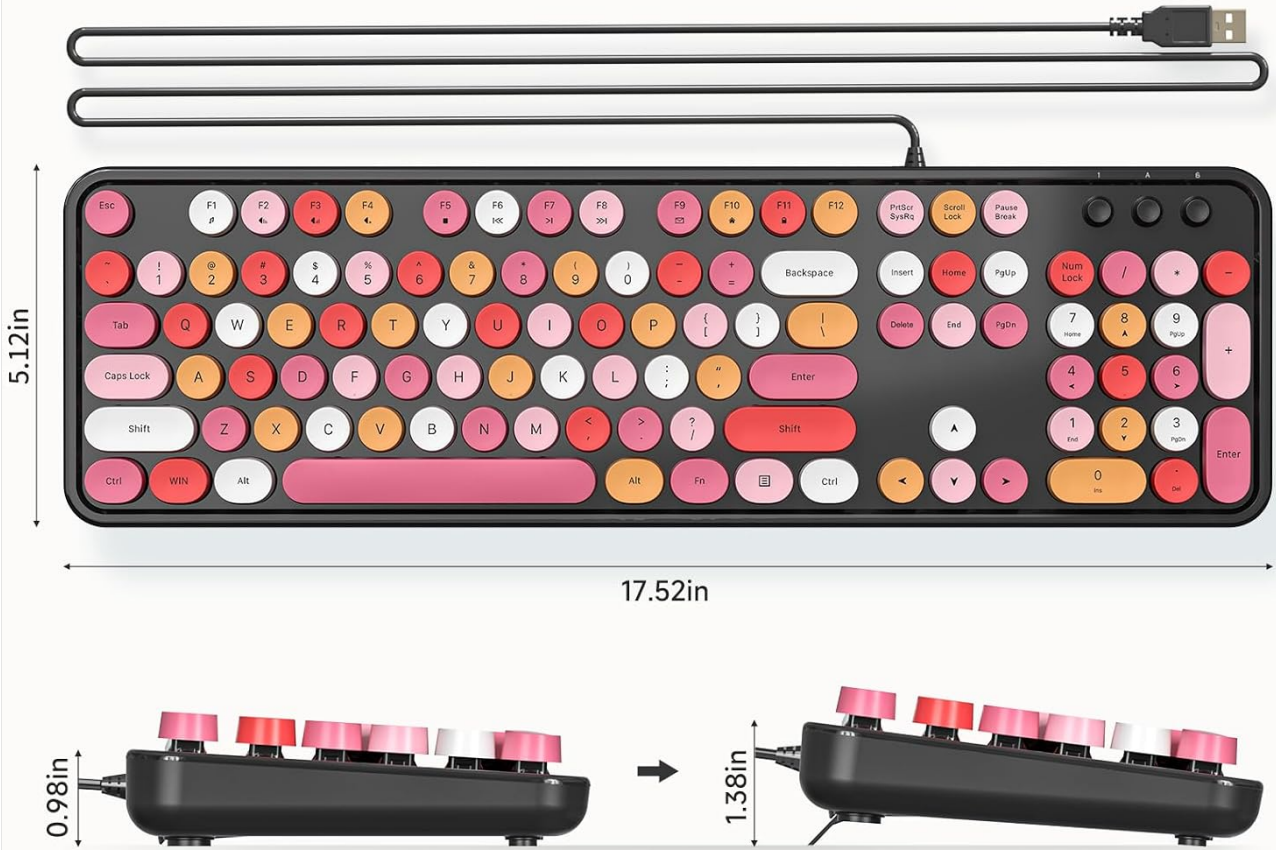 


Image: A detailed diagram illustrating the dimensions of the GEEZER Wired USB Keyboard, including length, width, and height, along with USB cable length.



Image: A side view of the GEEZER Wired USB Keyboard, highlighting its ergonomic 7-degree tilt for comfortable typing.

WARRANTY AND SUPPORT

GEEZER is committed to providing high-quality products and excellent customer service.

After-Sales Service

If you encounter any problems during the use of your GEEZER Wired USB Keyboard, please contact us via Amazon email. We aim to respond to all inquiries within 6 hours and provide satisfactory solutions.

For support, please visit the [GEEZER Store on Amazon](#) or contact us through the Amazon messaging system.

