

JOYROOM JR-PB1

JOYROOM Jpods Series JR-PB1 True Wireless Earbuds User Manual

Model: JR-PB1

1. INTRODUCTION

Thank you for choosing the JOYROOM Jpods Series JR-PB1 True Wireless Earbuds. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance and longevity. Please read this manual carefully before using the product and keep it for future reference.

2. SAFETY INFORMATION

To prevent damage to your earbuds or injury to yourself, please observe the following safety precautions:

- Do not disassemble, repair, or modify the product. This may cause fire, electric shock, or complete damage to the product.
- Keep the earbuds and charging case away from water, moisture, and other liquids.
- Avoid exposing the product to extreme temperatures (below 0°C or above 45°C).
- Do not use the product during a thunderstorm to avoid electric shock.
- Clean the earbuds and charging case with a soft, dry cloth only. Do not use harsh chemicals or detergents.
- Prolonged exposure to high volume levels may cause permanent hearing damage. Adjust the volume to a safe level.

3. PACKAGE CONTENTS

Please check the package contents upon opening. If any items are missing or damaged, please contact your retailer.

- JOYROOM JR-PB1 True Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable



Image: The JOYROOM JR-PB1 True Wireless Earbuds, showing both earbuds outside the open charging case. The earbuds are white with silver accents, and the charging case is also white with the JOYROOM logo.

4. SETUP

4.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case, ensuring they are correctly seated.
2. Connect the USB-C charging cable to the charging port on the case and the other end to a USB power adapter (not included) or a computer's USB port.
3. The indicator light on the charging case will show charging status. It will turn solid when fully charged.



Image: A top-down view of the JOYROOM JR-PB1 charging case with the lid open, showing both white earbuds securely placed inside their respective charging slots. The 'L' and 'R' indicators are visible.

4.2 Pairing with Your Device

The earbuds will automatically enter pairing mode when taken out of the charging case.

1. Open the charging case and take out both earbuds. They will automatically power on and enter pairing mode.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for "JR-PB1" in the list of available Bluetooth devices and select it to connect.
4. Once connected, a voice prompt will confirm successful pairing.

Note: If pairing fails, place the earbuds back into the case, close the lid, wait a few seconds, and then repeat the steps.

5. OPERATING INSTRUCTIONS

5.1 Touch Controls

The JR-PB1 earbuds feature touch-sensitive controls for easy operation:

Function	Action
Play/Pause	Single tap on either earbud
Next Track	Double tap on the right earbud
Previous Track	Double tap on the left earbud

Function	Action
Answer/End Call	Single tap on either earbud
Reject Call	Press and hold either earbud for 2 seconds
Activate Voice Assistant	Triple tap on either earbud



Image: A close-up view of the two JOYROOM JR-PB1 earbuds, highlighting their sleek design and the silver touch-sensitive area on the stem of each earbud. A small blue indicator light is visible on each.

5.2 Power On/Off

- **Power On:** The earbuds will automatically power on when taken out of the charging case.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

6. MAINTENANCE

Proper maintenance ensures the longevity and performance of your earbuds:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Charging Contacts:** Ensure the charging contacts on both the earbuds and inside the case are clean and free of debris to ensure proper charging.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place.
- **Battery Care:** To preserve battery life, avoid fully discharging the earbuds frequently. Charge them regularly, even if not used for extended periods.

7. TROUBLESHOOTING

If you encounter issues with your JOYROOM JR-PB1 earbuds, refer to the following common solutions:

Problem	Solution
Earbuds not pairing with device	<ul style="list-style-type: none">◦ Ensure Bluetooth is enabled on your device.◦ Place earbuds back in case, close lid, then reopen and try pairing again.◦ Forget "JR-PB1" from your device's Bluetooth list and re-pair.◦ Ensure earbuds are charged.
Only one earbud working	<ul style="list-style-type: none">◦ Place both earbuds back into the charging case, close the lid, and then take them out again.◦ Ensure both earbuds are charged.◦ Try resetting the earbuds (refer to manufacturer's website for specific reset instructions if needed).
No sound or low volume	<ul style="list-style-type: none">◦ Adjust volume on both your device and the earbuds.◦ Ensure earbuds are properly connected to your device.◦ Clean any debris from the earbud speaker mesh.
Charging case not charging	<ul style="list-style-type: none">◦ Check the USB-C cable and power adapter. Try a different cable or adapter.◦ Ensure the charging port on the case is clean and free of debris.

8. SPECIFICATIONS

Key technical specifications for the JOYROOM JR-PB1 True Wireless Earbuds:

- **Model:** JR-PB1
- **Connectivity:** Bluetooth (Wireless)
- **Noise Control:** Active Noise Cancellation (ENC for calls)
- **Recommended Use:** Calling
- **Manufacturer:** JOYROOM
- **ASIN:** B0C4PRRMJ8
- **Color:** White
- **First Available Date:** January 17, 2024

9. WARRANTY AND SUPPORT

JOYROOM products are designed and manufactured to the highest quality standards. For warranty information and customer support, please refer to the warranty card included in your package or visit the official JOYROOM website. Please retain your proof of purchase for any warranty claims.

For further assistance, you may contact your retailer or JOYROOM customer service directly.

Note: Return policy for this product is 14 days from purchase, as per retailer terms.

© 2024 JOYROOM. All rights reserved.