



[Manuals.plus](#) /

› [PHILIPS](#) /

› PHILIPS CX 5535/11 Tower Fan User Manual

PHILIPS CX5535/11

PHILIPS CX 5535/11 Tower Fan User Manual

Model: CX5535/11 | Brand: PHILIPS

1. INTRODUCTION

Thank you for choosing the PHILIPS CX 5535/11 High Performance Bladeless Technology Tower Fan. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.



Image: The PHILIPS CX 5535/11 Tower Fan in black, accompanied by its remote control, showcasing its sleek, modern design.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using the fan.
- Ensure the power supply matches the voltage specified on the fan's rating label.
- Do not immerse the fan, plug, or cord in water or other liquids.
- Unplug from outlet when not in use, when moving the fan from one location to another, and before cleaning.
- Do not operate any fan with a damaged cord or plug, or after the fan malfunctions or has been dropped or damaged in any manner.
- Keep children away from the fan and use the Child Lock feature to prevent accidental setting changes.
- Do not insert fingers or foreign objects into any openings of the fan.

- Place the fan on a stable, flat surface to prevent it from tipping over.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- PHILIPS CX 5535/11 Tower Fan Unit
- Remote Control
- User Manual (this document)

4. SETUP

4.1 Placement

Place the tower fan on a firm, level surface. Ensure there is adequate space around the fan for optimal airflow and oscillation. Avoid placing it directly against walls or furniture that might obstruct air intake or output.

4.2 Power Connection

Plug the power cord into a standard electrical outlet. Ensure the outlet voltage matches the fan's requirements (240V).

5. OPERATING INSTRUCTIONS

5.1 Controls

The PHILIPS CX 5535/11 Tower Fan can be operated using either the feather-touch panel on top of the unit or the included remote control.

🕒 1-7h



Set the time as per your requirement

Image: A hand interacting with the fan's intuitive touchscreen control panel, showing various function icons.



Convenience at your fingertips

Image: A hand holding the sleek remote control, demonstrating the convenience of operating the fan from a distance.

5.2 Power On/Off

Press the power button on the control panel or remote to turn the fan on or off.

5.3 Fan Speed

Cycle through the three available fan speeds (Low, Medium, High) by pressing the fan speed button.

5.4 Operating Modes

The fan offers three distinct operating modes:

- **Normal Mode:** Provides a consistent airflow at the selected speed.
- **Natural Wind Mode:** Mimics the varying intensity of natural outdoor breezes for a more dynamic cooling experience.
- **Quiet Sleep Mode:** Gradually reduces fan speed and operates at a low noise level for undisturbed sleep while saving energy.



Infuse breeze with essential oils for enhanced cooling experience

Image: Visual representation of the fan's three modes: a fan icon for Normal, a leaf icon for Natural Wind, and a moon/star icon for Quiet Sleep.

5.5 Oscillation

Activate the 60° oscillation feature to distribute cool air across a wider area. Press the oscillation button to turn it on or off.



**60° oscillation reaches
anywhere you need**

Image: An overhead view of the tower fan illustrating its 60-degree oscillation range, indicating wide airflow coverage.

5.6 Timer Function

Set the built-in timer for automatic shut-off from 1 to 7 hours. This feature helps conserve energy.



Child lock for added Peace of mind

Image: A close-up of the fan's control panel with timer options (1h, 2h, 4h) highlighted, indicating the ability to set automatic shut-off.

5.7 Child Lock Feature

Activate the child lock to prevent accidental changes to settings, providing added peace of mind, especially in households with children.



Convenience at your fingertips

Image: A visual icon representing the child lock feature, indicating enhanced safety for families.

5.8 Aromatherapy Feature

Enhance your indoor experience by adding your favorite essential oils to the built-in aroma diffuser. Locate the aroma pad slot, add a few drops of essential oil, and enjoy a refreshing atmosphere.



1-7h



Set the perfect time with
our fan timer

Image: A hand carefully adding drops of essential oil into the dedicated aromatherapy slot on the side of the fan.

6. MAINTENANCE

6.1 Cleaning

Regular cleaning helps maintain the fan's performance and longevity.

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- For the air intake and outlet grilles, use a soft brush or vacuum cleaner with a brush attachment to remove dust.
- Clean the aroma pad regularly or replace it as needed.
- Ensure the fan is completely dry before plugging it back in.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on	No power supply; Power cord not properly plugged in; Remote control battery low	Check power outlet; Ensure cord is securely plugged in; Replace remote control battery.
Weak airflow	Air intake/outlet blocked; Fan speed set too low	Clear any obstructions; Increase fan speed.
Fan makes unusual noise	Fan not on a level surface; Internal obstruction	Place fan on a flat, stable surface; Unplug and check for any visible obstructions inside the grilles. If noise persists, contact customer support.
Remote control not working	Battery depleted; Obstruction between remote and fan; Remote not pointed at receiver	Replace battery; Ensure clear line of sight; Point remote directly at the fan's receiver.

8. SPECIFICATIONS

Feature	Detail
Brand	PHILIPS
Model Name	CX5535/11
Colour	Black
Electric Fan Design	Blower
Power Source	Corded Electric
Product Dimensions	16D x 15.4W x 104.8H Centimeters
Special Features	Bladeless, Inverter Compatible, Oscillating, Remote Controlled, Timer
Recommended Uses	Air Circulation, Cooling, Ventilating
Noise Level	46 dB
Wattage	40 Watts
Air Flow Capacity	2230 CMPH
Voltage	240.0 V
Control Method	Remote, Touch
Item Weight	4.5 Kilograms
Country of Origin	China

9. WARRANTY AND SUPPORT

This PHILIPS product is built to last, backed by Philips' extensive expertise in air care and rigorous quality testing. For warranty information, service, or technical support, please refer to the warranty card included with your purchase or visit the official PHILIPS support website.

For further assistance, you may contact Philips customer service through their official channels. Please have your model number (CX5535/11) and purchase details ready when contacting support.