

[Manuals.plus](#) /

> [Syinix](#) /

> Syinix 32-inch LED iCast TV User Manual

## Syinix 32E4M

# Syinix 32-inch LED iCast TV User Manual

Model: 32E4M

## 1. IMPORTANT SAFETY INFORMATION

---

Please read all safety and operating instructions carefully before using this television. Keep these instructions for future reference.

- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.

## 2. PRODUCT OVERVIEW

---

The Syinix 32-inch LED iCast TV (Model 32E4M) features an A+ panel, integrated receiver, and iCast functionality for screen mirroring. It offers a clear viewing experience with a wide viewing angle and multiple connectivity options.



Figure 2.1: Front view of the Synix 32-inch LED iCast TV, showcasing its slim design and display.



Figure 2.2: Side view of the television, illustrating its depth and the design of the included stands.

## 3. SETUP

---

### 3.1 Unpacking

Carefully remove the television and all accessories from the packaging. Retain the packaging for future transport or servicing.

### 3.2 Stand Assembly

Place the TV screen-down on a soft, flat surface to prevent scratches. Attach the two stand legs to the designated slots at the bottom of the TV using the provided screws. Ensure they are securely fastened.



Figure 3.1: Dimensions of the television, useful for placement and stand assembly. Height: 48.8cm, Width: 77.4cm, Depth: 10.7cm.

### 3.3 Connecting Devices

The television offers various ports for connecting external devices:

- **HDMI Ports (x2):** For connecting high-definition devices like Blu-ray players, gaming consoles, or set-top boxes.
- **USB Port (x1):** For connecting USB storage devices to play media files.
- **AV In (x1):** For connecting older devices using composite video and stereo audio cables.
- **RF In (x2):** For connecting an antenna or cable for broadcast television signals.
- **Mini YPbPr (x1):** For connecting component video devices.
- **Headphone Jack (x1):** For connecting headphones.
- **Coaxial (x1):** For digital audio output.



Figure 3.2: Close-up of the side panel showing the various input and output ports available on the television.

### 3.4 Power Connection

After connecting all desired devices, plug the power cord into a wall outlet. The TV will enter standby mode.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Power On/Off

Press the **Power** button on the remote control or on the TV to turn it on or off.

### 4.2 Initial Setup Wizard

Upon first power-on, the TV will guide you through an initial setup process, including language selection, country, and channel scanning for the built-in receiver (DVB-C/T/T2/S/S2).

### 4.3 Input Source Selection

Press the **Source** or **Input** button on the remote control to cycle through available input sources (HDMI, AV, USB, TV).

### 4.4 Channel Navigation

Use the **CH+/-** buttons to change channels. Use the numeric keypad on the remote to directly enter channel numbers.

### 4.5 Volume Control

Use the **VOL+/-** buttons to adjust the volume. Press the **Mute** button to temporarily silence the audio.

## 4.6 iCast Functionality

The iCast feature allows you to mirror content from compatible devices (e.g., smartphones, tablets) to your TV screen. Refer to your device's manual for specific screen mirroring instructions. Ensure both the TV and your device are connected to the same network for optimal performance.

## 5. MAINTENANCE

---

### 5.1 Cleaning the Screen

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, dampen the cloth slightly with water or a specialized screen cleaner. Do not spray cleaner directly onto the screen.

### 5.2 Cleaning the Cabinet

Wipe the TV cabinet with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

### 5.3 Ventilation

Ensure that the ventilation openings on the back of the TV are not blocked to prevent overheating. Allow adequate space around the TV for air circulation.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No power	Power cord unplugged; power outlet not working.	Check power cord connection; test outlet with another device.
No picture, but sound is present	Incorrect input source selected; external device not powered on or connected properly.	Press the <b>Source</b> button to select the correct input; check connections and power of external devices.
No sound, but picture is present	Volume is muted or too low; audio cables not connected properly.	Press <b>Mute</b> or increase volume; check audio cable connections.
iCast/Screen Mirroring not working	Devices not on the same network; compatibility issues; app/device settings.	Ensure TV and device are on the same Wi-Fi network. Check device's screen mirroring settings. Some devices may not be fully compatible. Contact Synix support if issues persist.
Remote control not working	Batteries are dead or inserted incorrectly; obstruction between remote and TV.	Replace batteries; ensure clear line of sight to the TV's IR sensor.

## 7. SPECIFICATIONS

---

Feature	Detail
Model Number	32E4M

Feature	Detail
Screen Size	32 inches (82 cm)
Display Technology	LED
Resolution	1080 pixels
Refresh Rate	60 Hz
Brightness	180 cd/m <sup>2</sup>
Contrast Ratio	3000:1
Viewing Angle	178°/178°
Audio Output	2 x 10W Speakers
Power Consumption	48 watts
Dimensions (L x W x H)	77.4 x 10.7 x 48.8 cm
Net Weight	3.7 kg
Connectivity	2 RF, 2 HDMI, 1 USB, 1 AV In, 1 Mini YPbPr, 1 Headphone, 1 Coaxial
Integrated Receiver	DVB-C/T/T2/S/S2

## 8. WARRANTY AND SUPPORT

---

This Synix television is covered by a standard manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions, including warranty duration and coverage details.

For technical support, service, or warranty claims, please contact Synix customer service through their official website or the contact information provided in your product documentation.