

Arachnid Titanium 5400 Electronic Dartboard and Cabinet (EDBM680)

Arachnid Titanium 5400 Electronic Dartboard and Cabinet User Manual

Model: Titanium 5400 (EDBM680) | Brand: Arachnid

1. INTRODUCTION AND OVERVIEW

Welcome to the user manual for your new Arachnid Titanium 5400 Electronic Dartboard and Cabinet. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your dartboard to ensure years of enjoyment. The Titanium 5400 combines a durable electronic dartboard with a contemporary-style cabinet, offering a wide variety of games and features for up to eight players.

Key features include:

- Durable electronic dartboard mounted in a contemporary-style cabinet.
- 13.5-inch target area with 38 different games and 183 variations.
- Supports up to eight players with 9 total LED screens for score tracking.
- Includes six soft tip darts, extra tips, and an AC adapter.
- Active score window displays current throws and allows four players to view scores simultaneously.

2. SETUP

Follow these steps to set up your Arachnid Titanium 5400 Electronic Dartboard and Cabinet:

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all included accessories (darts, extra tips, AC adapter) are present.
2. **Mounting:** Choose a suitable location on a sturdy wall. The dartboard should be mounted so that the center of the bullseye is 5 feet 8 inches (1.73 meters) from the floor. Use appropriate wall anchors and screws (not included) for secure installation.
3. **Power Connection:** Connect the provided AC adapter to the dartboard's power input jack. Plug the AC adapter into a standard electrical outlet.

4. **Darts Storage:** Utilize the integrated dart holders within the cabinet doors for convenient storage of your darts.



Figure 2.1: The Arachnid Titanium 5400 Electronic Dartboard and Cabinet with doors open, displaying the dartboard, electronic score displays, and integrated dart storage on the cabinet doors.

MODERN, CONTEMPORARY STYLE



Figure 2.2: The Arachnid Titanium 5400 Electronic Dartboard and Cabinet with its doors closed, highlighting its sleek, modern design.

3. OPERATING INSTRUCTIONS

Operating your dartboard is straightforward. Familiarize yourself with the control panel buttons:

- **POWER:** Turns the dartboard on or off.
- **GAME:** Press to select from the available games.
- **SELECT:** Used to confirm game selection or other options.
- **START/HOLD:** Initiates a game or pauses current play.
- **PLAYER PAGE:** Cycles through player displays if more than four players are active.
- **RESET:** Resets the current game or settings.
- **SOUND:** Adjusts or mutes sound effects and voice prompts.
- **HECKLER:** Activates or deactivates the heckler feature (if available for the selected game).
- **SOLO PLAY:** Engages single-player mode against the computer.
- **BOUNCE OUT:** Toggles the bounce-out rule (darts that bounce off the board do not score).
- **DART OUT SCORE:** Displays the required score for a 'dart out' finish in certain games.

- **DOUBLE MISS:** Applies a penalty for missing a double in certain games.
- **GAME GUARD:** Prevents accidental button presses during play.



Figure 3.1: Detailed view of the control panel, showing various buttons for game selection, player management, and feature toggles.

FOUR X10 CRICKET SCORING MARKS



Figure 3.2: The active score window, capable of displaying up to four players' scores simultaneously.

4. GAMES AND FEATURES

The Arachnid Titanium 5400 offers a wide array of games and variations to keep your dart sessions exciting. With 38 different games and 183 variations, there's always a new challenge.

Game List and Variations:

The dartboard includes popular games such as 301, Cricket, and many more. Refer to the on-board game list or the full user manual (PDF) for a complete list and rules for each game.



Figure 4.1: The control panel area highlighting the extensive list of 38 games and 187 level variations, including Solo Play, Bounce Out, Game Guard, and Dart Out.

Special Features:

- **Solo Play:** Challenge the dartboard's AI at various difficulty levels.
- **Heckler Feature:** Adds an interactive element with audio commentary during play.
- **Active Score Window:** Provides real-time score updates for up to four players.
- **Cricket Scoring Marks:** Dedicated displays for Cricket game progress.

VIEW UP TO 4 PLAYERS' SCORES AT ONCE



Figure 4.2: The dedicated display for Cricket scoring, showing marks for 20, 19, 18, 17, 16, 15, and Bullseye.



Figure 4.3: A player engaging with the dartboard, demonstrating the interactive nature of the product.

5. MAINTENANCE

Proper maintenance will extend the life of your dartboard:

- **Cleaning:** Wipe the dartboard and cabinet surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Dart Tips:** Regularly check the soft tips of your darts for wear. Replace worn or broken tips with the included extra tips to ensure proper scoring and prevent damage to the board.
- **Storage:** When not in use, close the cabinet doors to protect the dartboard surface from dust and damage.

**ACCESSORIES INCLUDED:
4 DART SETS
EXTRA TIPS
ADAPTER**

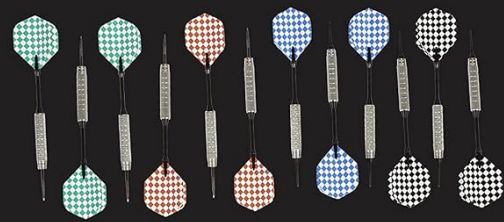


Figure 5.1: Included accessories: four dart sets, extra tips, and the AC adapter, essential for maintenance and play.

6. TROUBLESHOOTING

If you encounter issues with your dartboard, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Dartboard does not power on.	AC adapter not properly connected or power outlet issue.	Ensure the AC adapter is securely plugged into the dartboard and a working electrical outlet. Try a different outlet.
Darts do not stick to the board.	Worn or damaged soft tips; darts are too light.	Replace dart tips with new ones. Ensure you are using soft-tip darts appropriate for electronic dartboards.
Electronic panel/score display not working.	Power issue or internal malfunction.	Try unplugging the AC adapter, waiting 30 seconds, and plugging it back in to reset the system. If the issue persists, contact customer support.

Problem	Possible Cause	Solution
Dart scores incorrectly or registers phantom scores.	Stuck segment or debris in the segment.	Gently press on the affected segment to ensure it is not stuck. Check for any foreign objects or debris lodged in the segments.

7. SPECIFICATIONS

Feature	Detail
Brand	Arachnid
Model Name	Titanium 5400 Electronic Dartboard and Cabinet
Model Number	EDBM680
UPC	754806328522
Material	Sisal
Color	Black
Product Dimensions	4.4"W x 21.7"H (Dartboard dimensions)
Included Components	Dartboard, six soft tip darts, extra tips, AC adapter
Target Area	13.5 inches
Games / Variations	38 Games / 183 Variations
Max Players	8 Players

8. WARRANTY AND SUPPORT

Warranty: The Arachnid Titanium 5400 Electronic Dartboard and Cabinet comes with a 30-day warranty from the manufacturer.

Legal Disclaimer: The ARACHNID trademark is a registered trademark owned by Arachnid 360 LLC and used by Escalade Sports pursuant to the license.

For additional support, frequently asked questions, or to purchase replacement parts, please visit the official Arachnid store or refer to the full user manual PDF:

- [Arachnid Official Store](#)
- [User Manual \(PDF\)](#)
- [Instructions for Use \(IFU\) \(PDF\)](#)