

[Manuals.plus](#) /

› [Dpofirs](#) /

› Dpofirs Portable MP3 Player User Manual - Model Dpofirs0omzn3gtyu-13

Dpofirs Dpofirs0omzn3gtyu-13

Dpofirs Portable MP3 Player User Manual

Model: Dpofirs0omzn3gtyu-13

INTRODUCTION

Thank you for choosing the Dpofirs Portable MP3 Player. This manual provides detailed instructions for setting up, operating, and maintaining your device. Please read this manual thoroughly before use to ensure optimal performance and longevity of your MP3 player.

WHAT'S IN THE BOX

Verify that all items are present in the package:

- Dpofirs Portable MP3 Player
- USB Charging Cable
- Earphones
- User Manual (this document)
- Plastic Storage Box



Image: The Dpofirs MP3 player shown with its USB charging cable and wired earphones.

PRODUCT OVERVIEW

The Dpofirs Portable MP3 Player is a compact device designed for various multimedia functions. It features a clear LED display and intuitive controls for easy navigation.

Device Layout

- **Display Screen:** Shows menus, track information, photos, and e-book content.
- **Control Buttons:** Central navigation pad with MENU, VOL, Play/Pause, and Skip buttons.
- **USB Port:** For charging and data transfer.
- **3.5mm Audio Jack:** For connecting earphones.
- **Micro SD Card Slot:** For memory expansion up to 64GB.



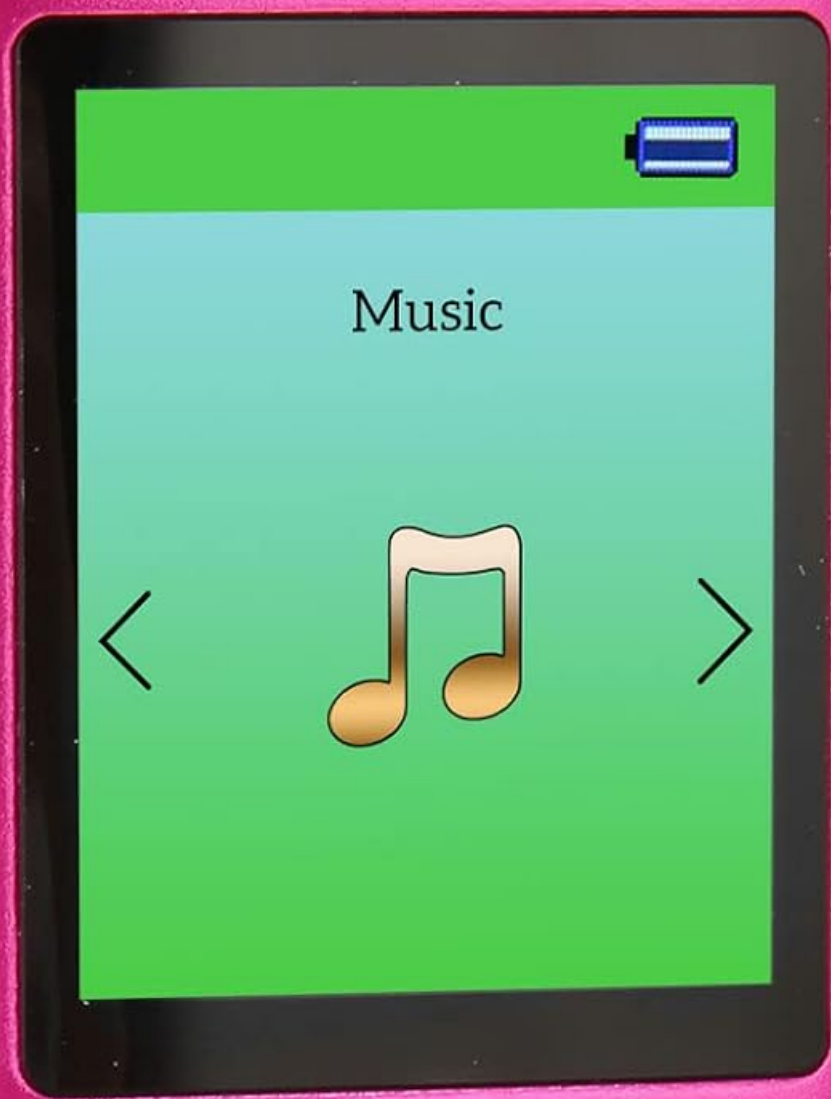




Image: Front view of the pink Dpofirs MP3 player, showing the screen displaying 'Music' and the control buttons (MENU, VOL, Play/Pause, Skip).



Image: Bottom view of the Dpofirs MP3 player, highlighting the USB charging port and the 3.5mm headphone jack.



Image: Side view of the Dpofirs MP3 player, showing the slot for a Micro SD memory card.

SETUP

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the included USB charging cable to the device's USB port and the other end to a USB power adapter (not included) or a computer's USB port. The battery takes approximately 2 hours to fully charge.

Up to 8 hours of use after full charge
You can enjoy music for a long time
Battery takes about 2 hours to fully charge



Image: The Dpofirs MP3 player displayed against a clock graphic, illustrating its long battery life of up to 8 hours on a full charge.

2. Inserting a Memory Card

The device supports Micro SD (TF) cards up to 64GB for expanded storage. Carefully insert the memory card into the designated slot until it clicks into place. Ensure the card is inserted in the correct orientation.

3. Connecting Earphones

Plug the 3.5mm jack of your earphones into the audio port located at the bottom of the device.

4. Transferring Files

Connect the MP3 player to your computer using the USB cable. The device will appear as a removable disk. You can then drag and drop music files (MP3, WMA, FLAC, APE, AAC, OGG, ACELP), TXT e-books, and image files into the appropriate folders on the device or inserted memory card.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on, press and hold the **Play/Pause** button until the screen lights up.
- To power off, press and hold the **Play/Pause** button until the screen turns off.

2. Basic Navigation

Use the central control pad for navigation:

- **MENU button:** Access the main menu or go back to the previous screen.
- **VOL button:** Adjust volume. Press and hold to enter volume adjustment mode, then use the left/right navigation buttons.
- **Left/Right buttons:** Navigate through menu options, skip tracks, or fast forward/rewind.
- **Up/Down buttons:** Navigate through menu options or lists.
- **Central button:** Confirm selection or Play/Pause during media playback.

EASY TO USE

Use playlist to select your favorite songs
Support random play and playback, support
sleep shutdown



Image: The Dpofirs MP3 player with text indicating its ease of use, showing the screen and control buttons.

3. Music Playback

1. From the main menu, select "Music".
2. Browse your music library by artist, album, or all songs.
3. Select a song and press the central button to play.
4. Use the left/right buttons to skip tracks. Press and hold to fast forward/rewind.
5. The player supports random playback and playlist creation.

4. Voice Recorder

1. From the main menu, select "Recordings".
2. Choose to start a new recording.
3. Press the central button to start/stop recording.
4. Recorded files are saved and can be played back from the same menu.

5. FM Radio

1. From the main menu, select "FM Radio".
2. Ensure earphones are connected as they act as the antenna.
3. Use the navigation buttons to scan for stations or manually tune.

6. Photo Viewer

1. From the main menu, select "Photos".
2. Browse through your image files.
3. Select an image to view it on the screen.

7. E-book Reader

1. From the main menu, select "E-book".
2. Browse your TXT format e-books.
3. Select a book to open and read.

FUNCTION

Support 64G memory card (not included)
memory expansion
Play music with MP3, voice recorder, FM
radio, electric Book support TXT format,
photo view



Image: The Dpofirs MP3 player displaying its various functions, including music playback, voice recording, and FM radio, alongside an icon for Micro SD card expansion.

8. Sleep Shutdown

The device supports a sleep shutdown mode, which can be configured in the settings menu to automatically turn off the player after a set period of inactivity, conserving battery life.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge it regularly and store it in a cool, dry place if not used for extended periods.
- **Storage:** Store the MP3 player in its plastic box or a protective pouch to prevent scratches and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device for at least 30 minutes.
Cannot hear audio.	Volume too low; earphones not connected properly; faulty earphones.	Increase volume; ensure earphones are fully plugged in; try different earphones.
Files not appearing on device.	Incorrect file format; files not transferred correctly; memory card issue.	Ensure files are in supported formats (MP3, WMA, FLAC, APE, AAC, OGG, ACELP, TXT); re-transfer files; check if memory card is properly inserted and functional.
Device freezes or is unresponsive.	Software glitch.	Press and hold the power button for 10-15 seconds to force a restart.

SPECIFICATIONS

Feature	Detail
Brand	Dpofirs
Model	Dpofirs0omzn3gtyu-13
Color	Pink
Dimensions	15.2 x 8.5 x 2.3 cm
Weight	70 g
Memory Expansion	Supports Micro SD (TF) card up to 64 GB (card not included)
Display Technology	LED
Battery Life	Up to 8 hours (playback)
Charging Time	Approx. 2 hours for full charge
Connector Type	AUX (3.5mm), USB
Supported Audio Formats	MP3, WMA, FLAC, APE, AAC, OGG, ACELP
Supported E-book Format	TXT
Functions	Music Playback, Voice Recorder, FM Radio, Photo Viewer, E-book Reader
Compatible Devices	Laptops, desktop computers, tablets, smartphones, headphones/earphones

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or

contact your retailer. Specific warranty terms may vary by region and seller.

© 2024 Dpofirs. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question