

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [KIMISS](#) /

› KIMISS Replacement Remote Control for RC-5721 DVP3670K DVD Players User Manual

KIMISS KIMISS0z1e2kghxw

KIMISS Replacement Remote Control for RC-5721 DVP3670K DVD Players User Manual

INTRODUCTION

This manual provides comprehensive instructions for the KIMISS Replacement Remote Control, designed for seamless operation with various DVD player models, including RC-5721, DVP3670K, DVP3864K, and DVP3870K. This remote offers a straightforward, no-programming setup for immediate use.



Image: Angled view of the KIMISS Replacement Remote Control, showing its ergonomic design and button layout.

1. SETUP

1.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Rear view of the remote control, highlighting the battery compartment for AAA battery installation.

1.2 Initial Use

No programming or pairing is required for this remote control. Once batteries are correctly installed, the remote is ready for immediate use with compatible DVD players.

2. OPERATING INSTRUCTIONS

This remote control is designed for intuitive operation of your DVD player. Below is a general guide to its functions.





Image: Top-down view of the remote control, showing the layout of all function buttons.

2.1 Button Functions

- **Power** (): Turns the DVD player on or off.
- **Disc**: Accesses disc-related functions.
- **Menu**: Displays the main menu of the DVD.
- **Options**: Shows additional options or settings.
- **Navigation Buttons (Up, Down, Left, Right)**: Used to navigate through menus and selections.
- **OK**: Confirms a selection.
- **Back** (↶): Returns to the previous menu or screen.
- **Stop** (■): Stops playback.
- **Play/Pause** (▶||): Starts or pauses playback.
- **Previous Track** (◀): Skips to the beginning of the current track or the previous track.
- **Next Track** (▶): Skips to the next track.

- **Subtitle:** Toggles subtitle display.
- **GOTO:** Allows direct access to specific chapters or time points.
- **Audio:** Changes audio tracks or languages.
- **Volume (+/-):** Adjusts the volume level.
- **Repeat/Repeat A-B:** Controls disc repeat functions.
- **DVD Player:** Label indicating the remote's primary function.

2.2 Compatibility


This remote control is compatible with the following DVD player models:

RC-5721

DVP3670K

DVP3864K

DVP3870K

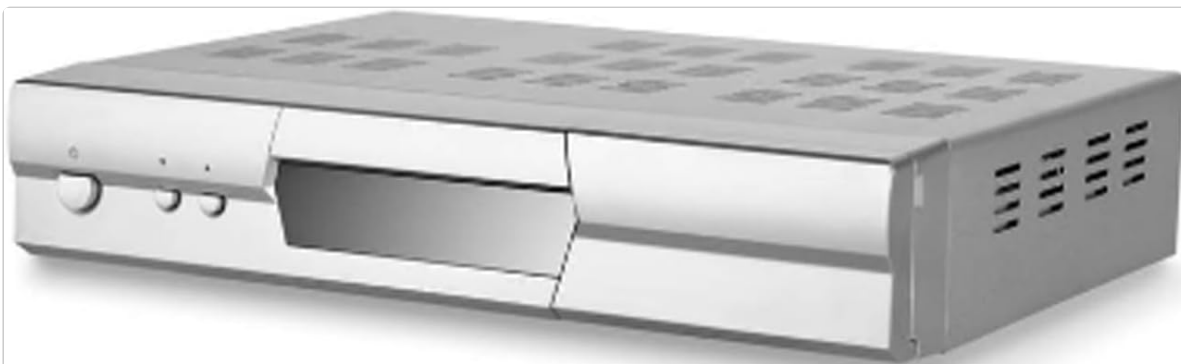

**Applicable: For Philips RC-5721
DVP3670K DVP3864K DVP3870K
DVD Players**

Image: The remote control displayed alongside a DVD player, illustrating its compatibility with models like RC-5721, DVP3670K, DVP3864K, and DVP3870K.

3. MAINTENANCE

3.1 Cleaning

To maintain the remote control's performance and appearance:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

3.2 Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

3.3 Storage

Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

4. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has limited range or intermittent response.	Weak batteries; obstruction between remote and DVD player; infrared sensor on DVD player is blocked.	Replace batteries. Ensure a clear line of sight between the remote and the DVD player. Clean the infrared sensor on the DVD player if necessary.
Specific buttons not working.	Button stuck or damaged; remote not compatible with specific function.	Gently press the button to ensure it's not stuck. Verify compatibility with your DVD player model for all functions.
Remote does not control the DVD player at all.	Incorrect DVD player model; remote malfunction.	Confirm your DVD player model (RC-5721, DVP3670K, DVP3864K, DVP3870K) is listed as compatible. If issues persist after checking batteries and compatibility, contact customer support.

5. SPECIFICATIONS

Feature	Detail
Brand	KIMISS

Item Model Number	KIMISS0z1e2kghxw
Connectivity Technology	Infrared
Special Feature	Universal (for specified models)
Maximum Supported Devices	1
Controller Type	Remote Control
Maximum Range	10 Meters
Battery Description	AAA (2 required, not included)
Material	ABS
Manufacturer	KIMISS
Country of Origin	China
Date First Available	May 9, 2023

6. WARRANTY INFORMATION

This KIMISS Replacement Remote Control comes with a **1 Year Warranty Against Manufacturer Defects**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

7. CUSTOMER SUPPORT

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact the seller or manufacturer directly through the platform where the product was purchased. Please have your product model number (KIMISS0z1e2kghxw) and purchase details ready.