

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

SENIX CSX2-M1

SENIX 20V 10" Electric Chainsaw User Manual

Model: CSX2-M1

Safety
Information Components Setup Operation Maintenance Troubleshooting Specifications Warranty
& Support

INTRODUCTION

Thank you for choosing the SENIX 20V 10" Electric Chainsaw. This cordless, battery-powered top handle chainsaw features a brushless motor, designed for efficient and smooth cutting. It is ideal for various tasks including tree pruning, branch cutting, and general yard maintenance. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance and longevity of your tool.

IMPORTANT SAFETY INFORMATION

Always read and understand all safety warnings and instructions before operating the chainsaw. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

General Safety Rules:

- Wear appropriate personal protective equipment (PPE):** Always wear safety glasses, hearing protection, gloves, and sturdy footwear.
- Maintain a firm grip:** Hold the chainsaw firmly with both hands when operating.
- Clear the work area:** Ensure no bystanders, especially children or pets, are in the cutting zone. Remove any obstacles that could interfere with the cutting operation.
- Avoid kickback:** Be aware of the chain brake feature, which is designed to stop the chain in the event of kickback. Always maintain proper footing and balance.
- Inspect before use:** Check the chainsaw for any damaged parts, loose components, or oil leaks before each use.
- Use the correct battery and charger:** Only use SENIX 20V Max batteries and CHX2 2 Amp charger with this tool.
- Store safely:** Store the chainsaw, battery, and charger in a dry, secure location, out of reach of children.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your SENIX 20V 10" Electric Chainsaw.



The SENIX 20V 10" Electric Chainsaw, shown with its included 2.5Ah Li-Ion battery and charger. This image displays the complete package you receive.

BRUSHLESS MOTOR

No maintenance. Longer run-time.

TOOL-FREE

CHAIN TENSIONING

For easy chain adjustments



10" BAR & CHAIN

For precise cuts up to 20" in thickness

11 M/S CHAIN SPEED

Delivers smooth cutting performance

INTEGRATED CHAIN BREAK

Stops the chain in event of kickback

X2 **20V**  **LITHIUM-ION** **BRUSHLESS**

*20V max initial voltage. 18V nominal voltage.

Detailed diagram highlighting key features: Brushless Motor, Tool-Free Chain Tensioning, Auto Oiling, 10" Bar & Chain, 11 m/s Chain Speed, and Integrated Chain Brake.



Close-up view of the SENIX 20V 2.5Ah Lithium-Ion Battery, which powers the chainsaw.



The SENIX battery charger, used to recharge the 20V Lithium-Ion battery.

SETUP

1. Battery Charging:

- Insert the 2.5Ah Li-Ion battery into the provided charger.

- Plug the charger into a standard electrical outlet.
- Allow the battery to fully charge before first use. Refer to the charger's indicator lights for charging status.

2. Bar and Chain Installation/Adjustment:

- Ensure the battery is removed from the chainsaw before any assembly or adjustment.
- Follow the instructions in the separate chain installation guide (if provided) or refer to the tool-less chain tensioning system for easy adjustment. The chain should be snug but still able to be pulled around the bar by hand.
- The tool-less chain tensioning system allows for quick and easy chain adjustments without additional tools.

3. Adding Chain Oil:

- Locate the oil tank cap on the chainsaw.
- Fill the 2 oz. built-in oil tank with appropriate bar and chain oil.
- Monitor the oil level window to ensure sufficient lubrication during operation. The automatic oiling system provides continuous lubrication.



Illustration of the automatic oiling system, showing the oil being poured into the 2 oz. tank and the oil level window.

OPERATING INSTRUCTIONS

Before Starting:

- Ensure all safety precautions are followed.
- Verify the battery is fully charged and securely inserted.
- Check the chain tension and oil level.

Starting the Chainsaw:

- Hold the chainsaw firmly with both hands, one on the main handle and one on the top handle.
- Engage the safety switch (if applicable) and press the trigger to start the motor. The brushless motor provides powerful yet quiet operation.

Cutting Techniques:

- Allow the chain to reach full speed before making contact with the material.
- Apply steady, even pressure. Do not force the chainsaw through the cut. The 11 m/s chain speed ensures smooth, efficient cutting.
- Be mindful of the integrated chain brake, which activates in case of kickback.
- This 10-inch chainsaw is optimized for cutting medium-sized tasks and efficiently slices through 10-20 inch diameter wood.



OURS:
10 INCH ≈ 10-13S

DON'T WORRY UNDERPOWERED 6" AND BULKY 16"!



OTHERS:
6 INCH ≈ 5-8S

The 10-inch bar and chain provide optimal cutting capacity for medium-sized tasks, demonstrating its effectiveness on a log.

WORK FOR MULTIPLE SITUATION



The chainsaw is versatile for multiple tasks, including home gardening, light farming, DIY projects, and emergency scenarios.

MAINTENANCE

1. Chain Sharpening and Replacement:

- A sharp chain is crucial for safe and efficient cutting. Sharpen the chain regularly or replace it when dull.
- Refer to the chain manufacturer's guidelines for proper sharpening angles and techniques. The replacement chain is 3/8LP .043 40DL.

2. Bar Maintenance:

- Clean the guide bar groove regularly to remove sawdust and debris.
- Flip the guide bar periodically to ensure even wear.

3. Oiling System Check:

- Regularly check the oil level and refill as needed. The automatic oiling system relies on a sufficient oil supply.

- Ensure the oil port is not clogged.

4. General Cleaning and Storage:

- After each use, clean the chainsaw thoroughly, removing sawdust and debris from the motor housing, bar, and chain.
- Store the chainsaw in a dry, secure location, away from moisture and extreme temperatures. The compact design allows for easy storage.
- Always remove the battery before cleaning or storing the tool.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chainsaw does not start.	Battery not charged or improperly inserted.	Ensure battery is fully charged and correctly seated.
Poor cutting performance.	Dull chain; incorrect chain tension; insufficient oil.	Sharpen or replace chain; adjust chain tension using tool-less system; refill oil tank.
Chainsaw overheats.	Overuse; clogged vents; dull chain.	Allow tool to cool; clean vents; sharpen chain.
Oil not dispensing.	Empty oil tank; clogged oil port/system.	Refill oil tank; clean oil port and check for blockages in the automatic oiling system.

SPECIFICATIONS

Feature	Detail
Brand	SENIK
Model Number	CSX2-M1
Power Source	Battery Powered (20V Max Lithium-Ion)
Bar Length	10 Inches
Chain Speed	11 m/s
Motor Type	Brushless
Oiling System	Automatic, 2 oz. tank with oil level window
Chain Tensioning	Tool-less
Safety Feature	Integrated Chain Brake
Item Weight	6.5 Pounds
Product Dimensions (L x W x H)	19.7" x 7.9" x 7.7"
Included Battery	2.5Ah Li-Ion Battery
Included Charger	CHX2 2 Amp Charger

WARRANTY AND SUPPORT

SENIX stands behind the quality of its products. Your SENIX 20V 10" Electric Chainsaw is covered by the following warranties:

- **Tool Warranty:** 5-year limited warranty.
- **Battery and Charger Warranty:** 3-year limited warranty.

For warranty claims, technical support, or to purchase replacement parts, please contact SENIX customer service. Keep your proof of purchase for warranty validation.

For more information, visit the official SENIX website or refer to the contact details provided with your product packaging.

© 2025 SENIX. All rights reserved

Documents - SENIX – CSX2-M1



[\[pdf\]](#) User Manual

CSX2 M1 0 X2 INALÁMBRICO Manuales y Guías SENIX Tools MANUAL v 1670531107cdn shopify s files 1
0337 3907 9816 III

lang: score:27 filesize: 8.62 M page_count: 78 document_date: 2022-12-08

For customer support, please call 1-800-251-3981 or send email to Service@seriti.com
SAVE THIS MANUAL FOR FUTURE REFERENCE.

WARRANTY

[\[pdf\]](#) Warranty Accessories

Senix 10 in 20V Max Cordless Chainsaw Battery and Charger Not Included CSX2 M1 at Tractor Supply
Co2243214 War1media tractorsupply is content TractorSupplyCompany tsc product 2 24 32 14 2243214 War1
|||


WARRANTY LIMITED WARRANTY 5-year limited warranty on all Senix X2 series outdoor battery powered equipment. 3-year limited warranty on all Senix X2 batteries and chargers. * FOR FIVE YEARS from the original date of retail purchase this Senix product is warranted against defects in materials or workma...

lang:en score:27 filesize: 158.98 K page_count: 3 document date: 2023-02-24



20V MAX LITHIUM ION
CORDLESS CHAINSAW

Operator's manual
Model: CSX2-M1
CSX2-M1-0

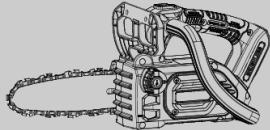

For customer support, please call 1-800-261-3981 or send email to:
Service@SenixTools.com
SAVE THIS MANUAL FOR FUTURE REFERENCE. ORIGINAL
INSTRUCTIONS 1 8 54 76 3 21 11 9 10 12 13 14 2 EN - 2 3 WWW.SENIXT...

[\[pdf\]](#) User Manual Instructions

2243214 Man1 media tractorsupply is content TractorSupplyCompany tsc product 2 24 32 14 |||
TM 20V MAX LITHIUM ION CORDLESS CHAINSAW Operator s manual Model:**CSX2-M1**

CSX2-M1-0 For customer support, please call 1-800-261-3981 or send email to: Service
senixtools.com SAVE THIS MANUAL FOR FUTURE REFERENCE. ORIGINAL
INSTRUCTIONS 1 8 54 76 3 21 11 9 10 12 13 14 2 EN - 2 3 WWW.SENIXT...
lang:en score:22 filesize: 74.18 M page_count: 78 document date: 2023-03-02